 
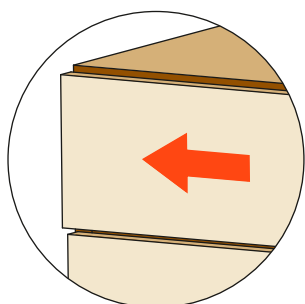 


## Adjustments

 
## Side adjustment +/- 1.5 mm

### For all Progressa, Progressa+ and Progressa+ Shelf slides



Rotate the white wheel towards the drawer front to adjust left.  
This operation is tool free.

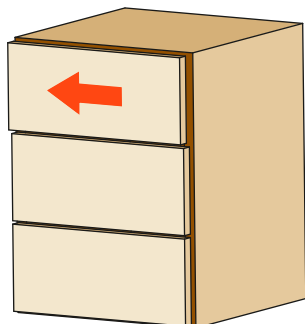


**1.5 mm**

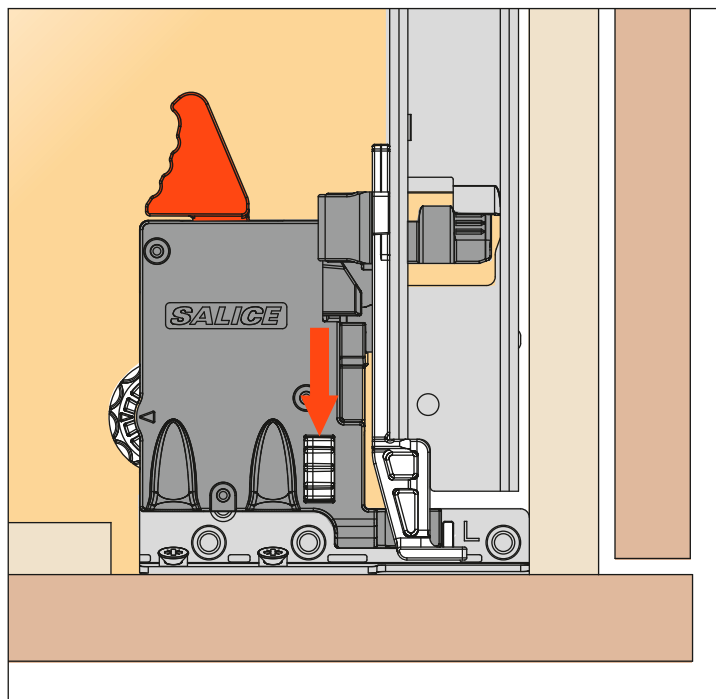

  Rotate the white wheel towards the back of the drawer to adjust right.  
This operation is tool free.

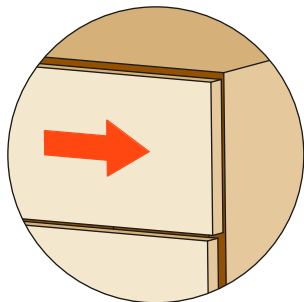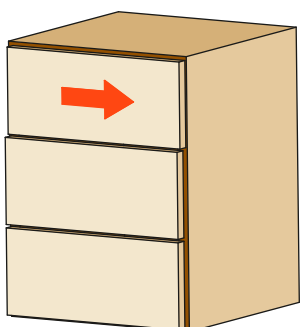

**1.5 mm**


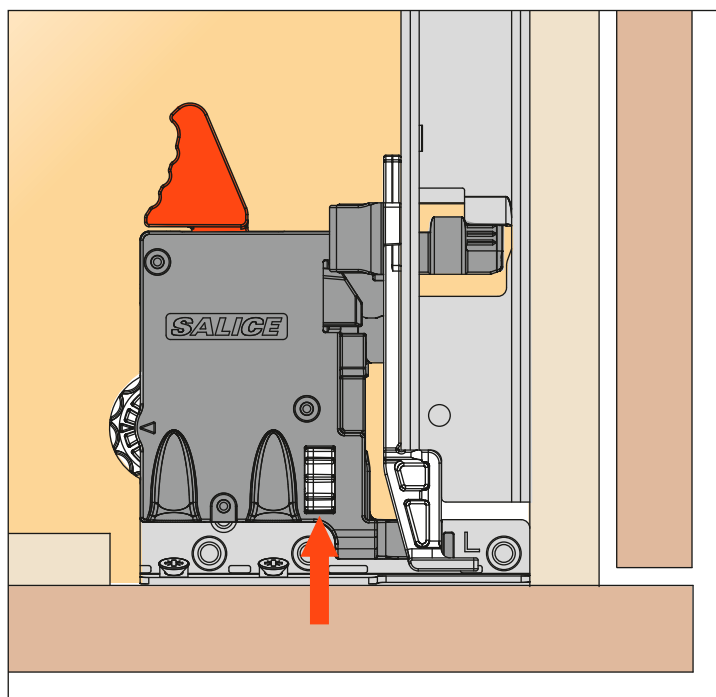 


For side adjustment, it is recommended that the wheels on the clips are operated in the same direction, in order to maintain the correct alignment and movement of the runners.


## Depth adjustment +/- 3 mm
  
### For all Progressa, Progressa+ and Progressa+ Shelf slides



Rotate the white wheel (see drawing) towards the outside of the drawer to increase the gap between the front and the side. This operation is tool free.

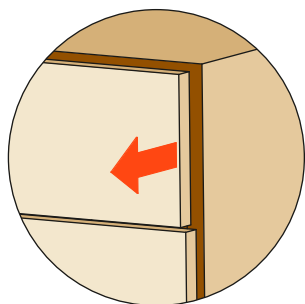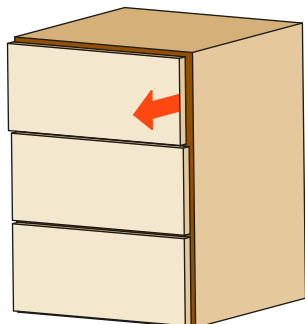


**+ 3 mm**

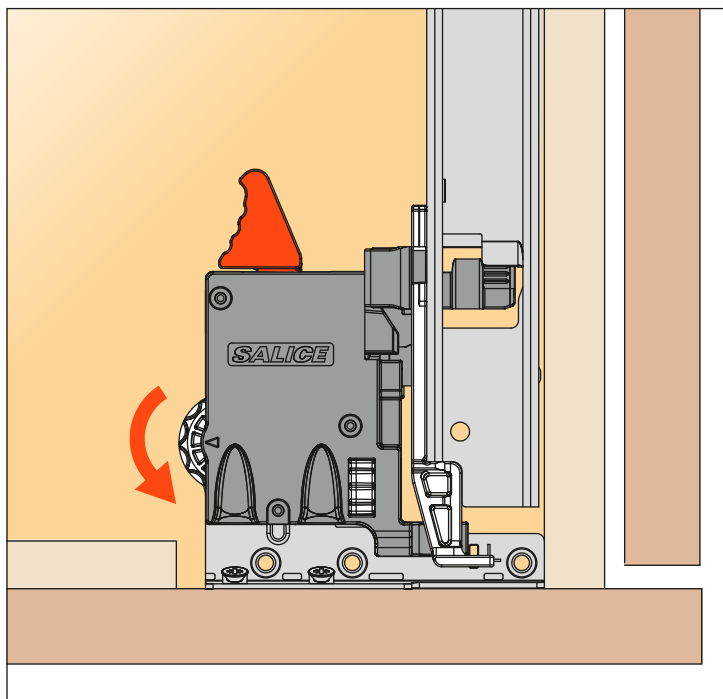 

  Rotate the white wheel (see drawing) towards the inside of the drawer to reduce the gap between the front and the side. This operation is tool free.

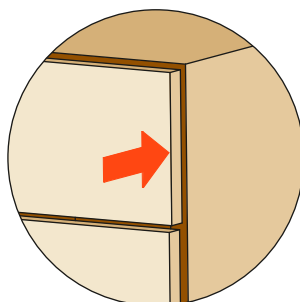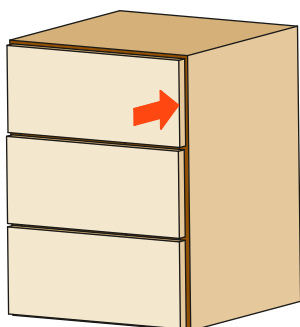





**- 3 mm**

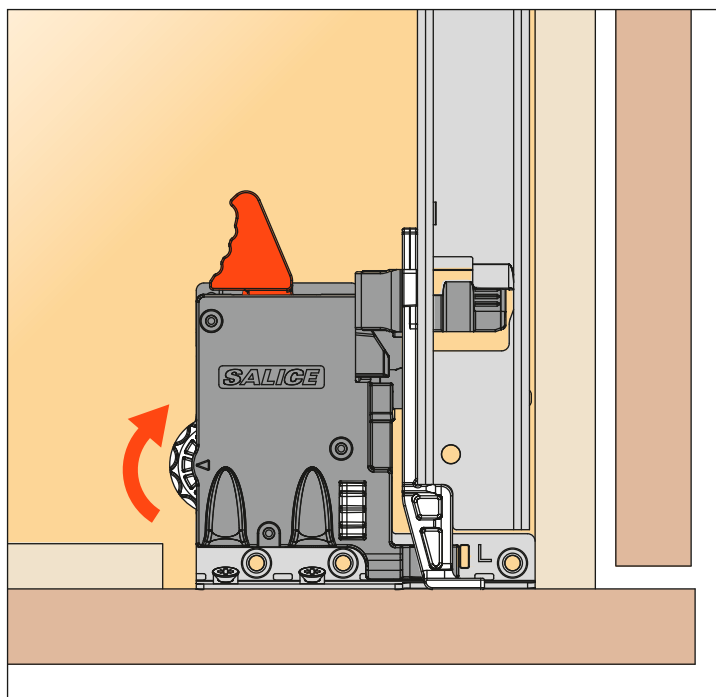 

## Height adjustment + 2.5 mm

### For all Progressa, Progressa+ and Progressa+ Shelf slides

    Push the lever towards the inside of the drawer to achieve height adjustment.  
This operation is tool free.

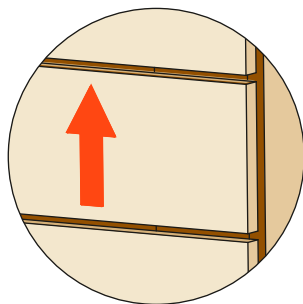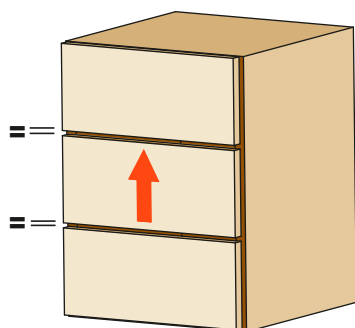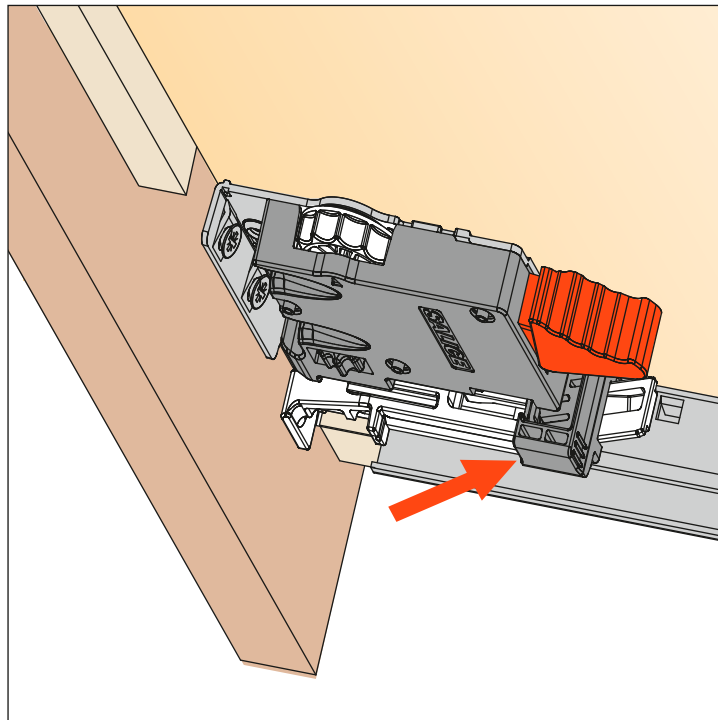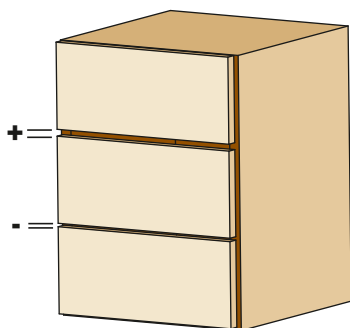

**2.5 mm**

