


# **Adjustments**


# Side adjustment +/- 1.5 mm

## For all Progressa, Progressa+ and Progressa+ Shelf slides


Rotate the white wheel towards the drawer front to adjust left. This operation is tool free.

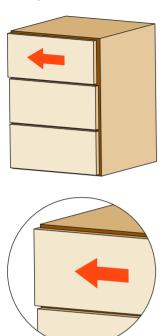


1.5 mm

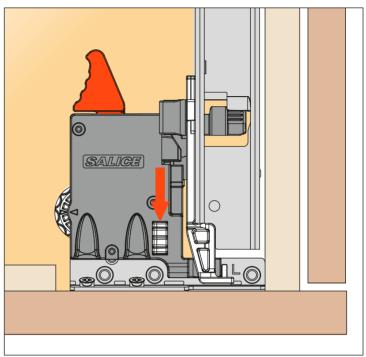

Rotate the white wheel towards the back of the drawer to adjust right. This operation is tool free.

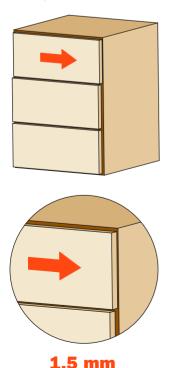

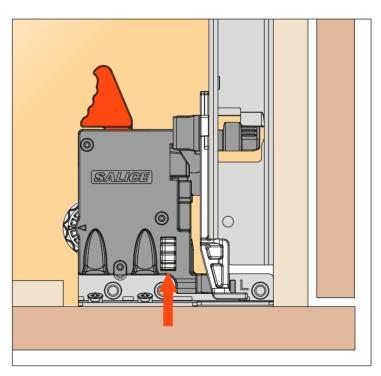



For side adjustment, it is recommended that the wheels on the clips are operated in the same direction, in order to maintain the correct alignment and movement of the runners.

# Depth adjustment +/- 3 mm


## For all Progressa, Progressa+ and Progressa+ Shelf slides


Rotate the white wheel (see drawing) towards the outside of the drawer to increase the gap between the front and the side. This operation is tool free.

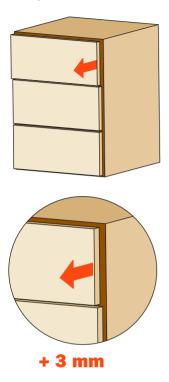

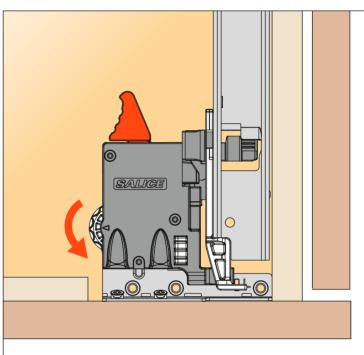

Rotate the white wheel (see drawing) towards the inside of the drawer to reduce the gap between the front and the side. This operation is tool free.

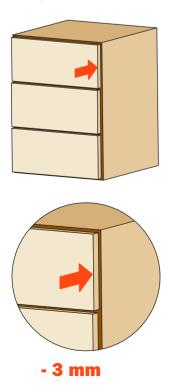


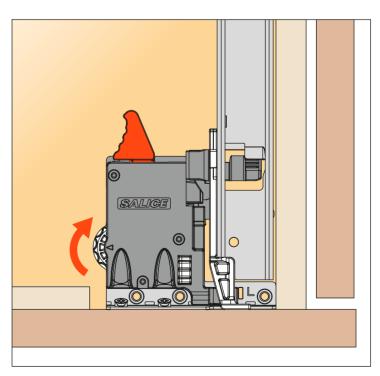



# Height adjustment + 2.5 mm


## For all Progressa, Progressa+ and Progressa+ Shelf slides

Push the lever towards the inside of the drawer to achieve height adjustment. This operation is tool free.

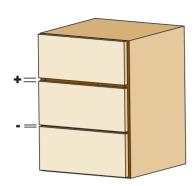

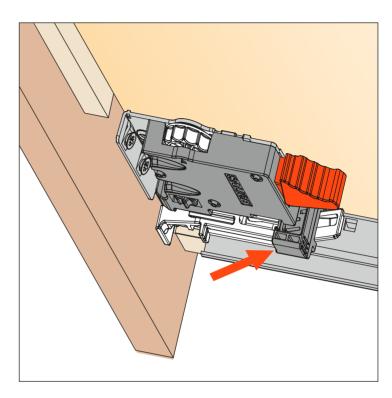

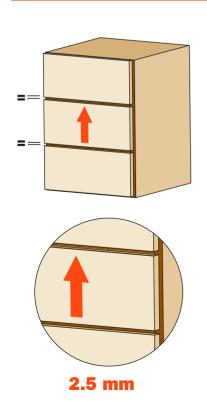


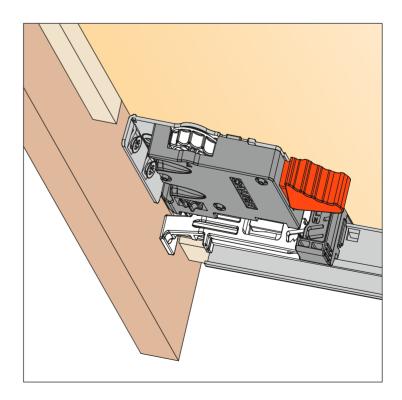


# **Assembly of tilt adjustment levers (optional)**

#### For all Progressa and Progressa+ slides


Pull out the drawer and remove the plastic insert, both right and left.

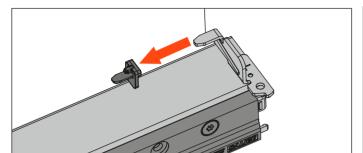


Insert the tilt adjustment levers AGLRXX3F, both right and left.

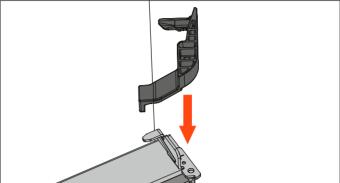


Rotate the lever to adjust.

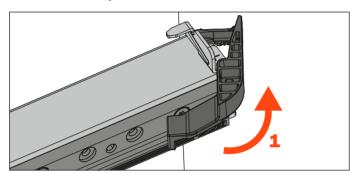


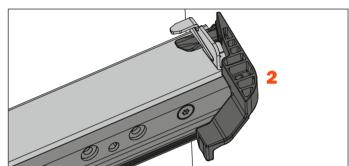

# Tilt adjustment + 3 mm

Open the drawer (1) and press the lever towards the back of the cabinet (2) to achieve the adjustment. Maximum 3 mm (1/8") rise of drawer back (tool free).

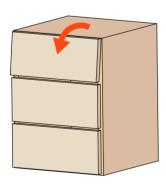

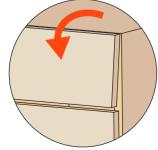

**Drawer back preparation**, see page 10. **AGLRXX3F tilt adjustment lever**, see page 56.

