 
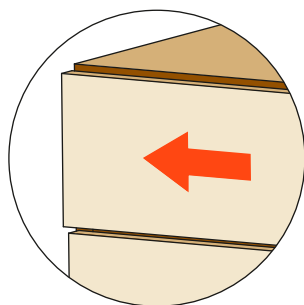 


Adjustments

 
Side adjustment +/- 1.5 mm

For all Progressa, Progressa+ and Progressa+ Shelf runners



Rotate the white wheel towards the drawer front to adjust left.
This operation is tool free.

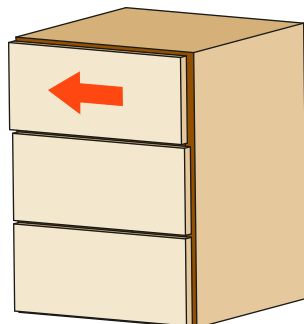


1.5 mm

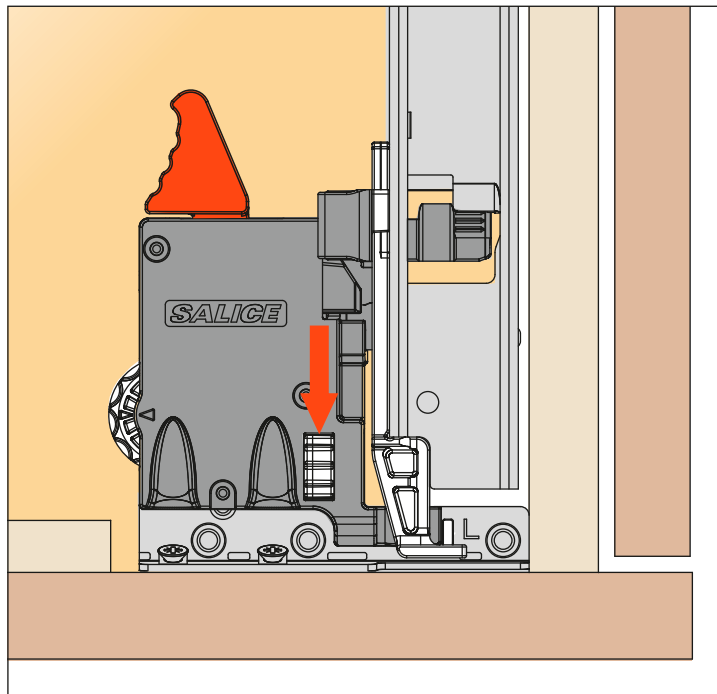

  Rotate the white wheel towards the back of the drawer to adjust right.
This operation is tool free.

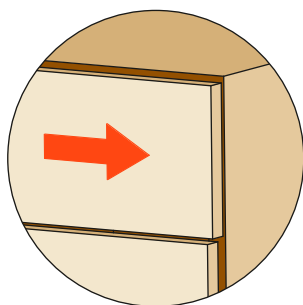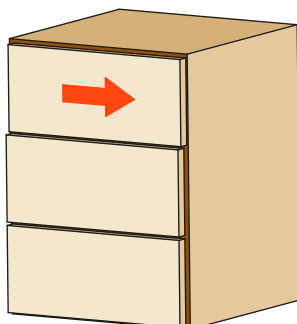

 1.5 mm

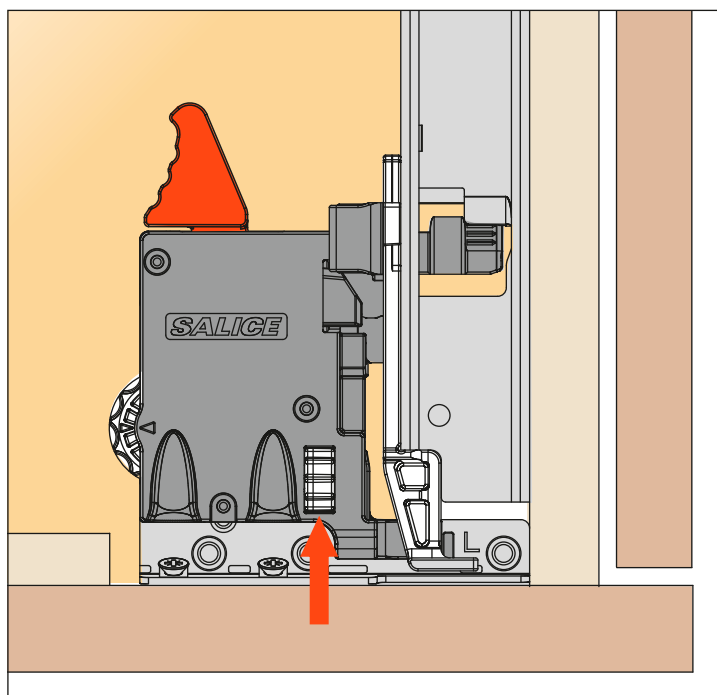



For side adjustment, it is recommended that the wheels on the clips are operated in the same direction, in order to maintain the correct alignment and movement of the runners.

Depth adjustment +/- 3 mm


For all Progressa, Progressa+ and Progressa+ Shelf runners

Rotate the white wheel (see drawing) towards the outside of the drawer to increase the gap between the front and the side.

  This operation is tool free.

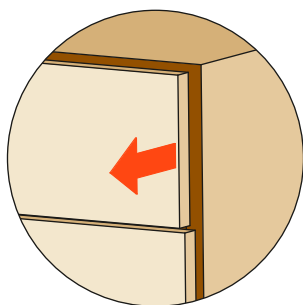
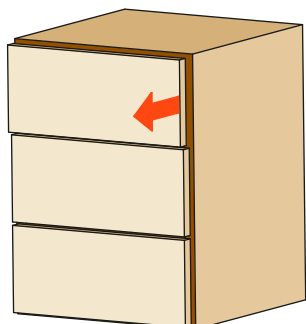


+ 3 mm

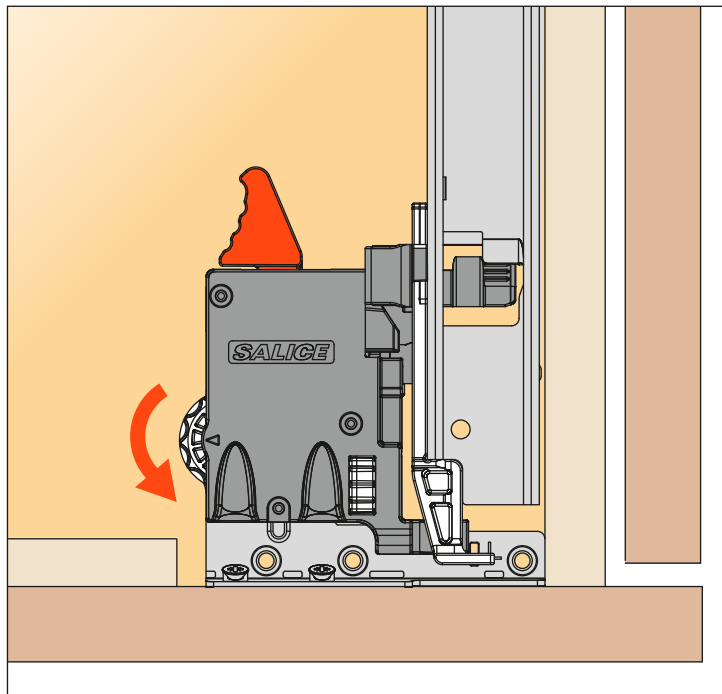 


Rotate the white wheel (see drawing) towards the inside of the drawer to reduce the gap between the front and the side.

  This operation is tool free.

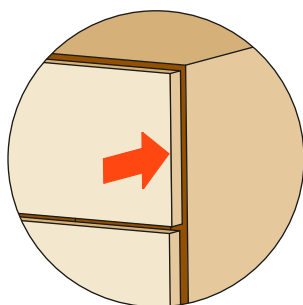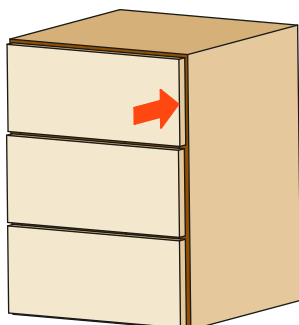





- 3 mm

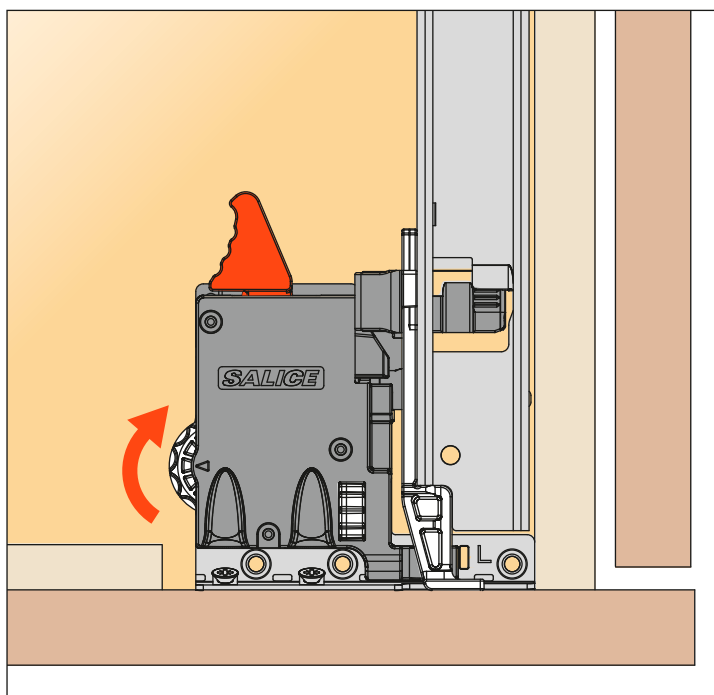 

Height adjustment + 2.5 mm

For all Progressa, Progressa+ and Progressa+ Shelf runners

    Push the lever towards the inside of the drawer to achieve height adjustment.
This operation is tool free.

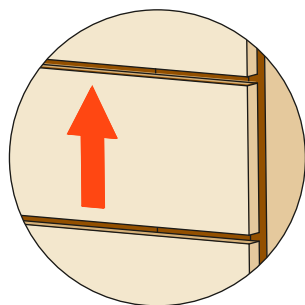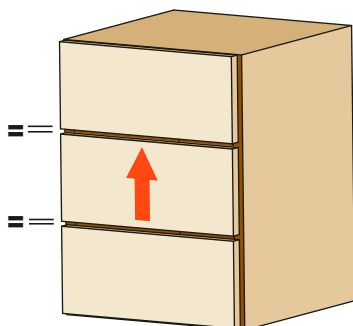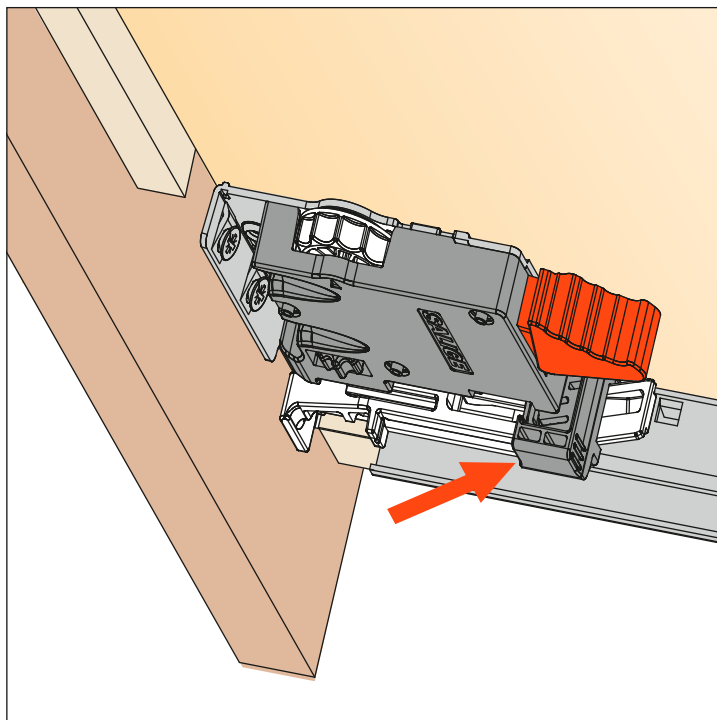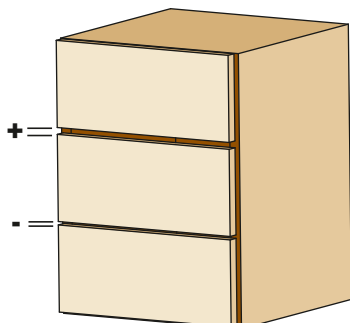

2.5 mm

