




eXcessories


SALICE

Technical information	page 4
Assembly instructions - 3-SIDED drawer	page 6
Assembly instructions - 4-SIDED drawer	page 10
Mounting the drawer onto the runners and removal	page 15
Adjustments	page 16

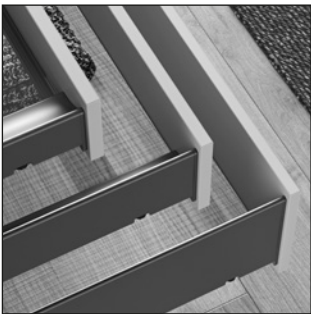

Modular drawer
3-SIDED - wooden frontal

Metal side - H 52 mm	page 18
Metal side - H 78 mm	page 20
Metal side - H 128 mm	page 22

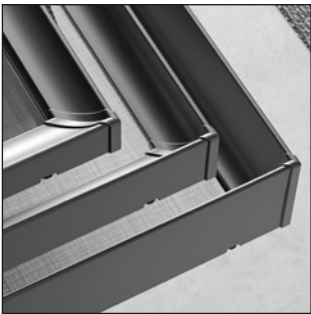


Modular drawer
4-SIDED


Metal side - H 52 mm	page 24
Metal side - H 78 mm	page 26
Metal side - H 128 mm	page 28

Excessories - modular drawer - Technical information


3-SIDED drawer - For wooden frontal, thickness 12 mm

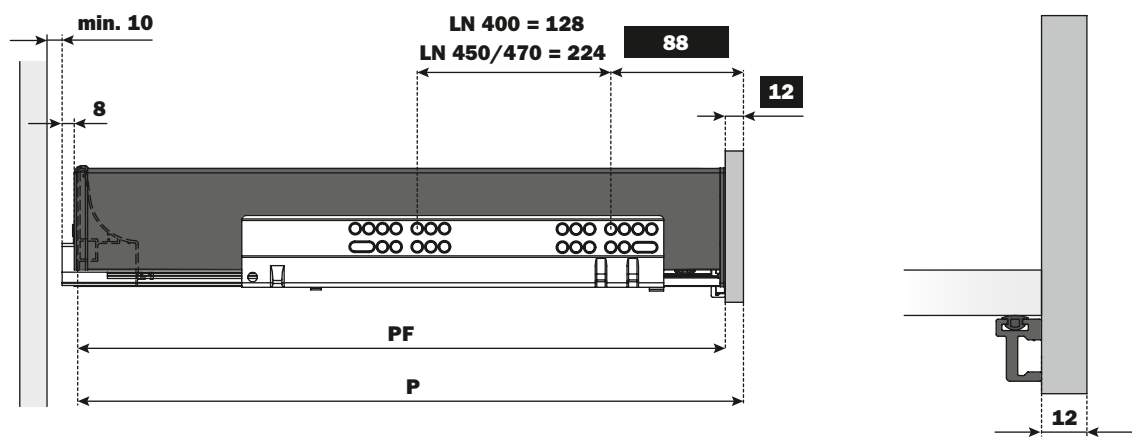

3-SIDED drawer - For wooden frontal, thickness 19 mm

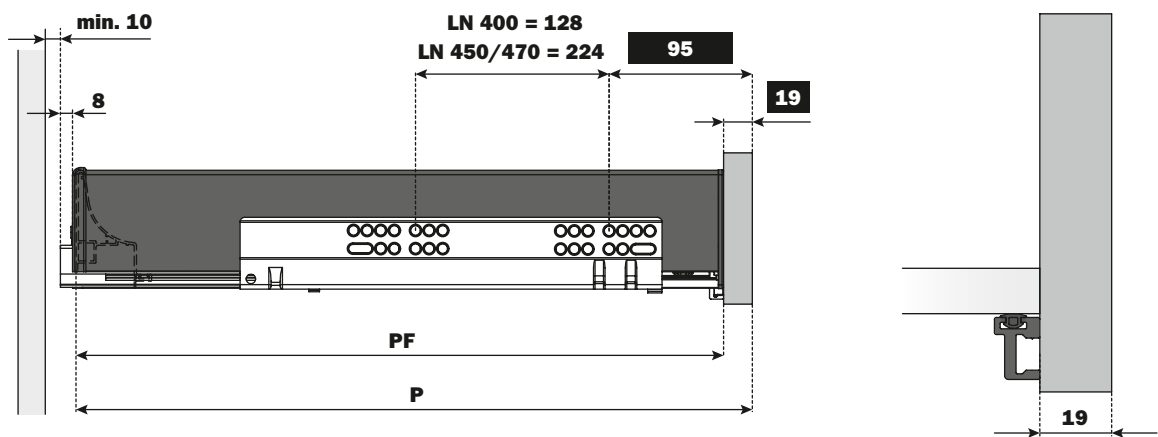


4-SIDED drawer

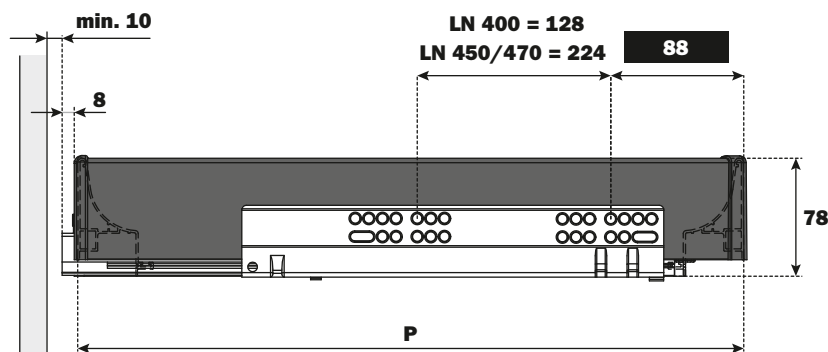


Runner length (LN) mm	Drawer depth (PF) mm	Drawer depth 3-SIDED (P) mm + wooden frontal 12 mm	Drawer depth 3-SIDED (P) mm + wooden frontal 19 mm	Drawer depth 4-SIDED (P) mm
400	428	440	447	440
450	478	490	497	490
470	498	510	517	510

Technical information - Drawers alignment

With the same side drilling, 4-sided drawers are frontally aligned with 3-sided drawers with wooden frontal (12 mm thickness) as illustrated below.


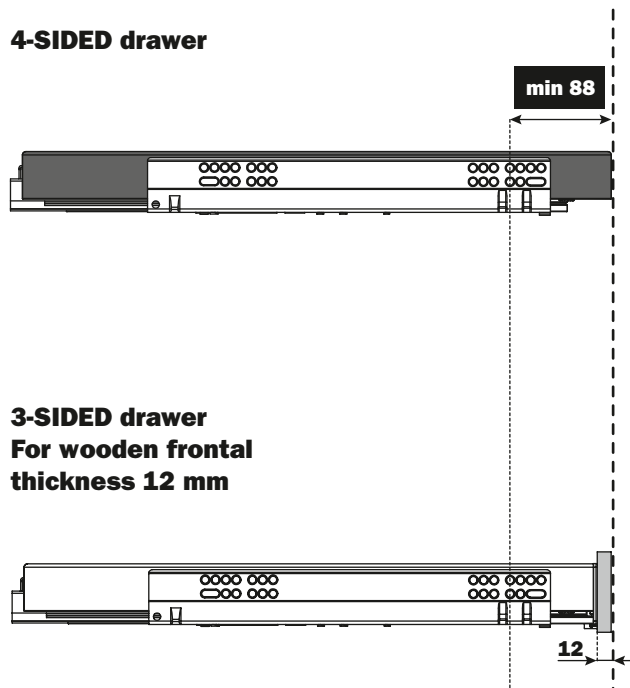


With the same side drilling, 4-sided drawers are not frontally aligned with 3-sided drawers with wooden frontal (19 mm thickness), as illustrated below.

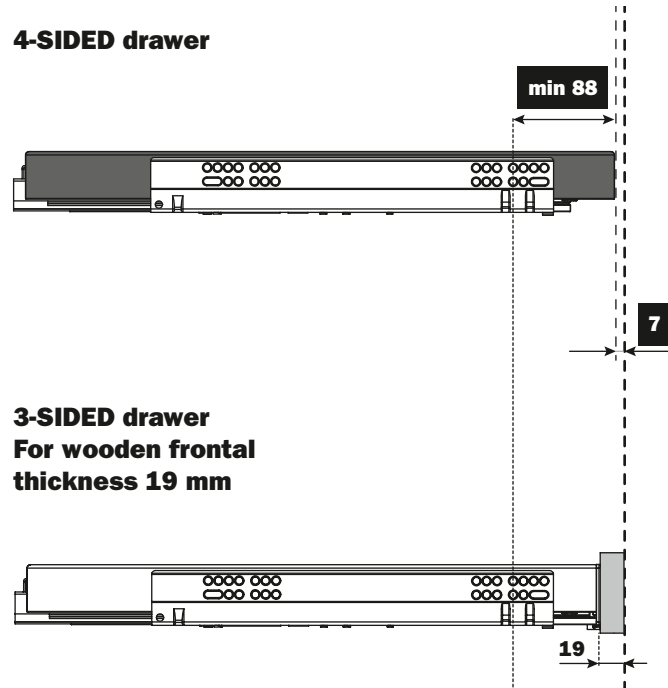


BACK PROFILE

1. Insert the joints into the recess of the back profile and into the side profiles until they reach the stop
Back profile to cut to length, 90° mitre cut end, see pages 19, 21, 23.
2. Hold the joints in position and screw to fix

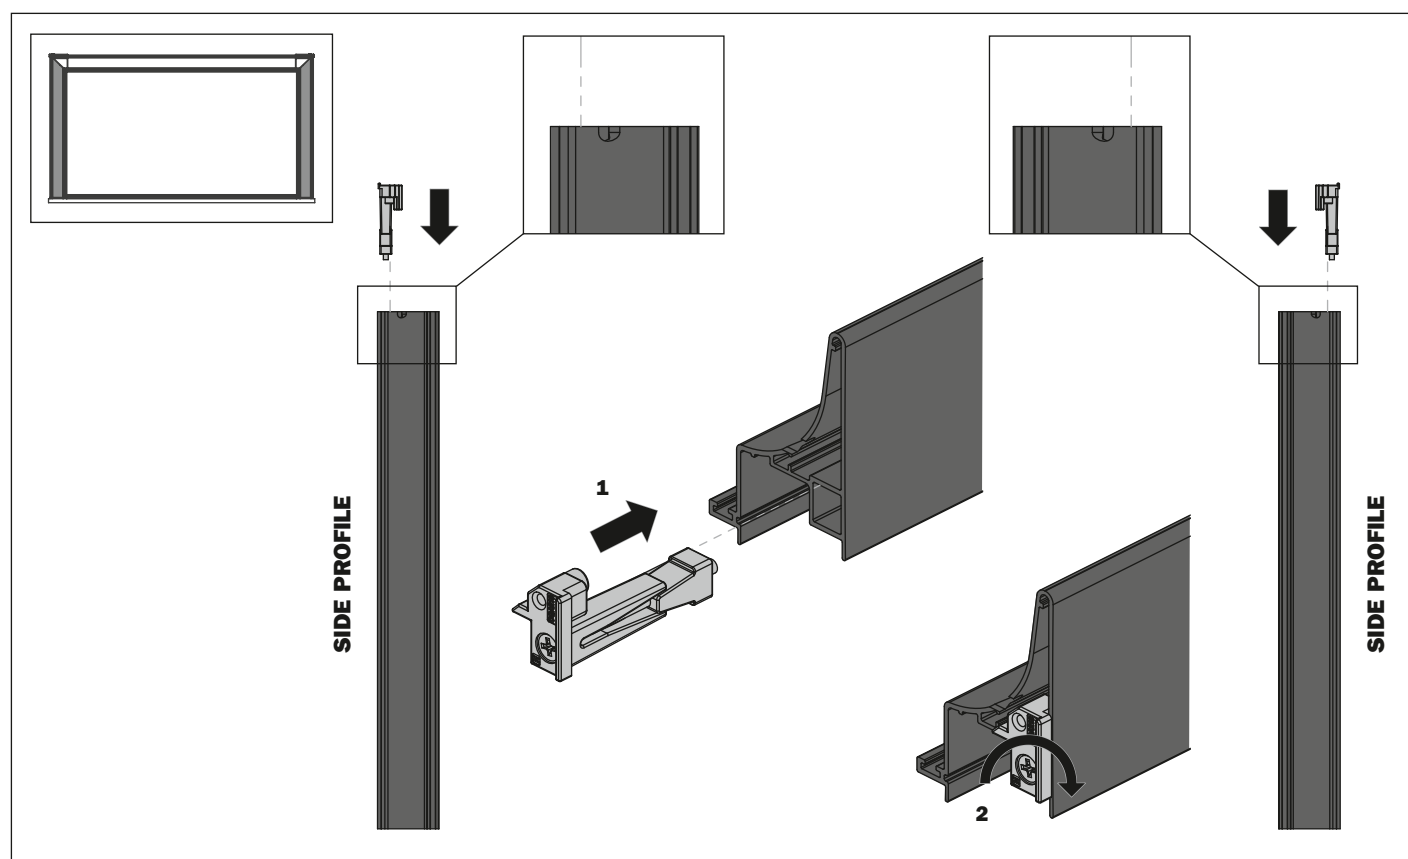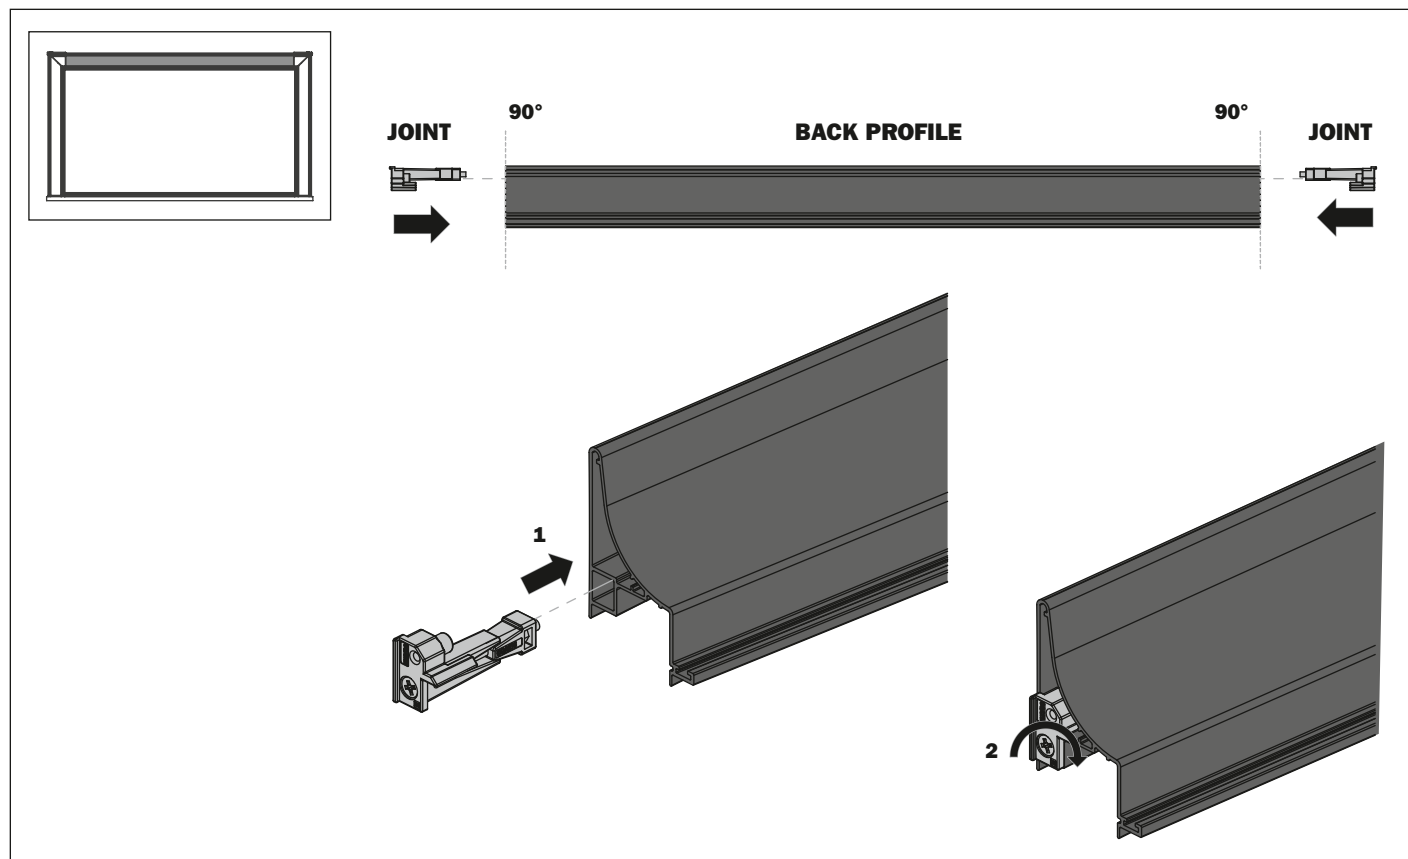


Assembly instructions

3. Insert the back corners onto the back profile until they reach the stop
4. Screw to fix the corners onto the joints

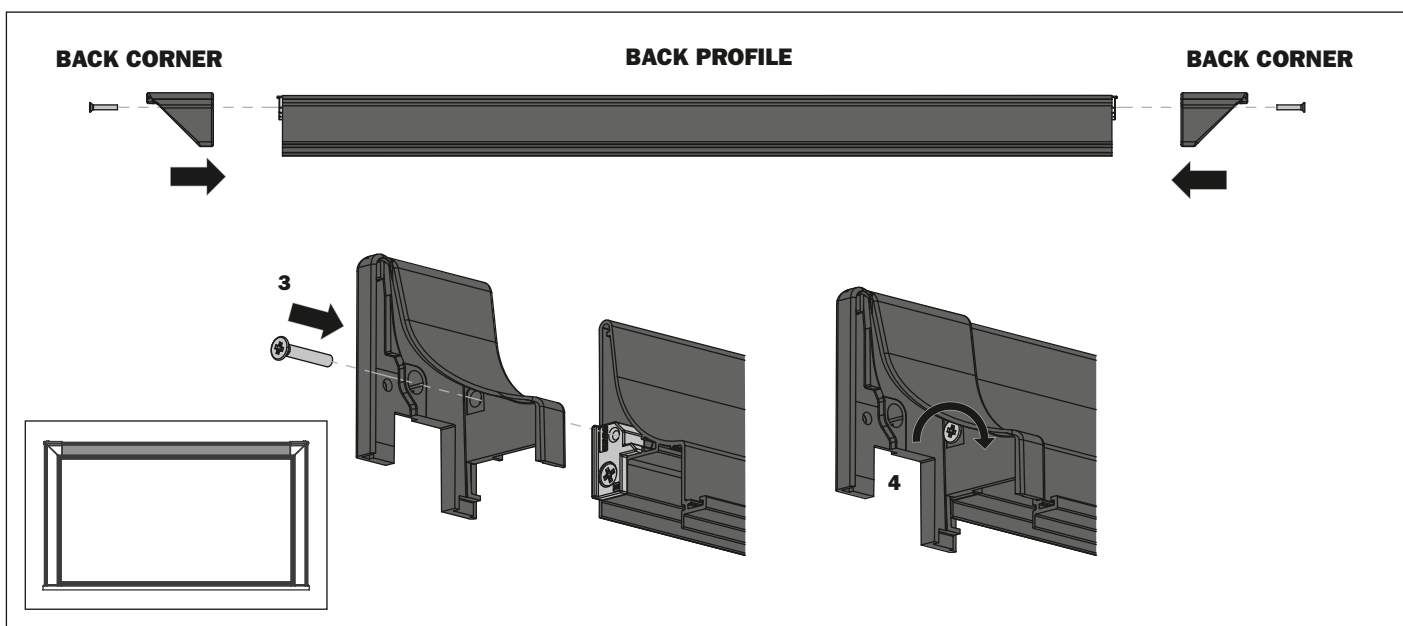


5. Insert the side profiles into the corners
6. Screw to fix the corners onto the joints

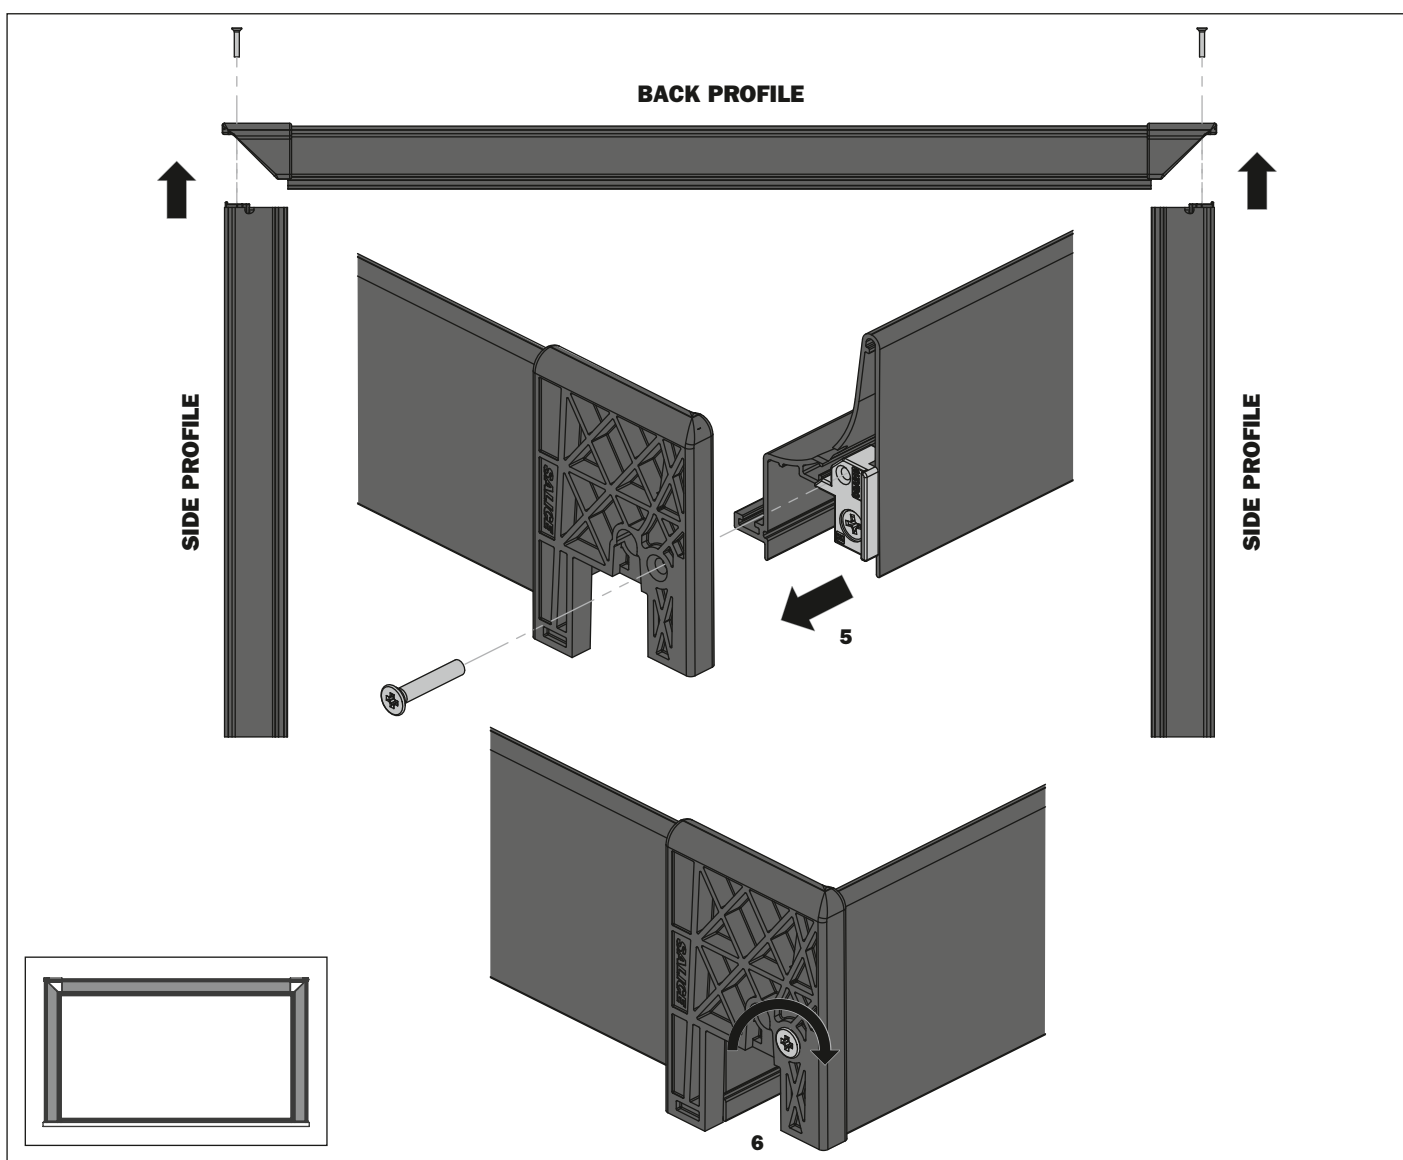

ADDITIONAL SCREW TO FIX THE BACK PROFILE WITH SIDE H 128

5A. Insert the side profiles into the corners


6A. Screw both the screws to fix the corners onto the joints and to fasten the profile

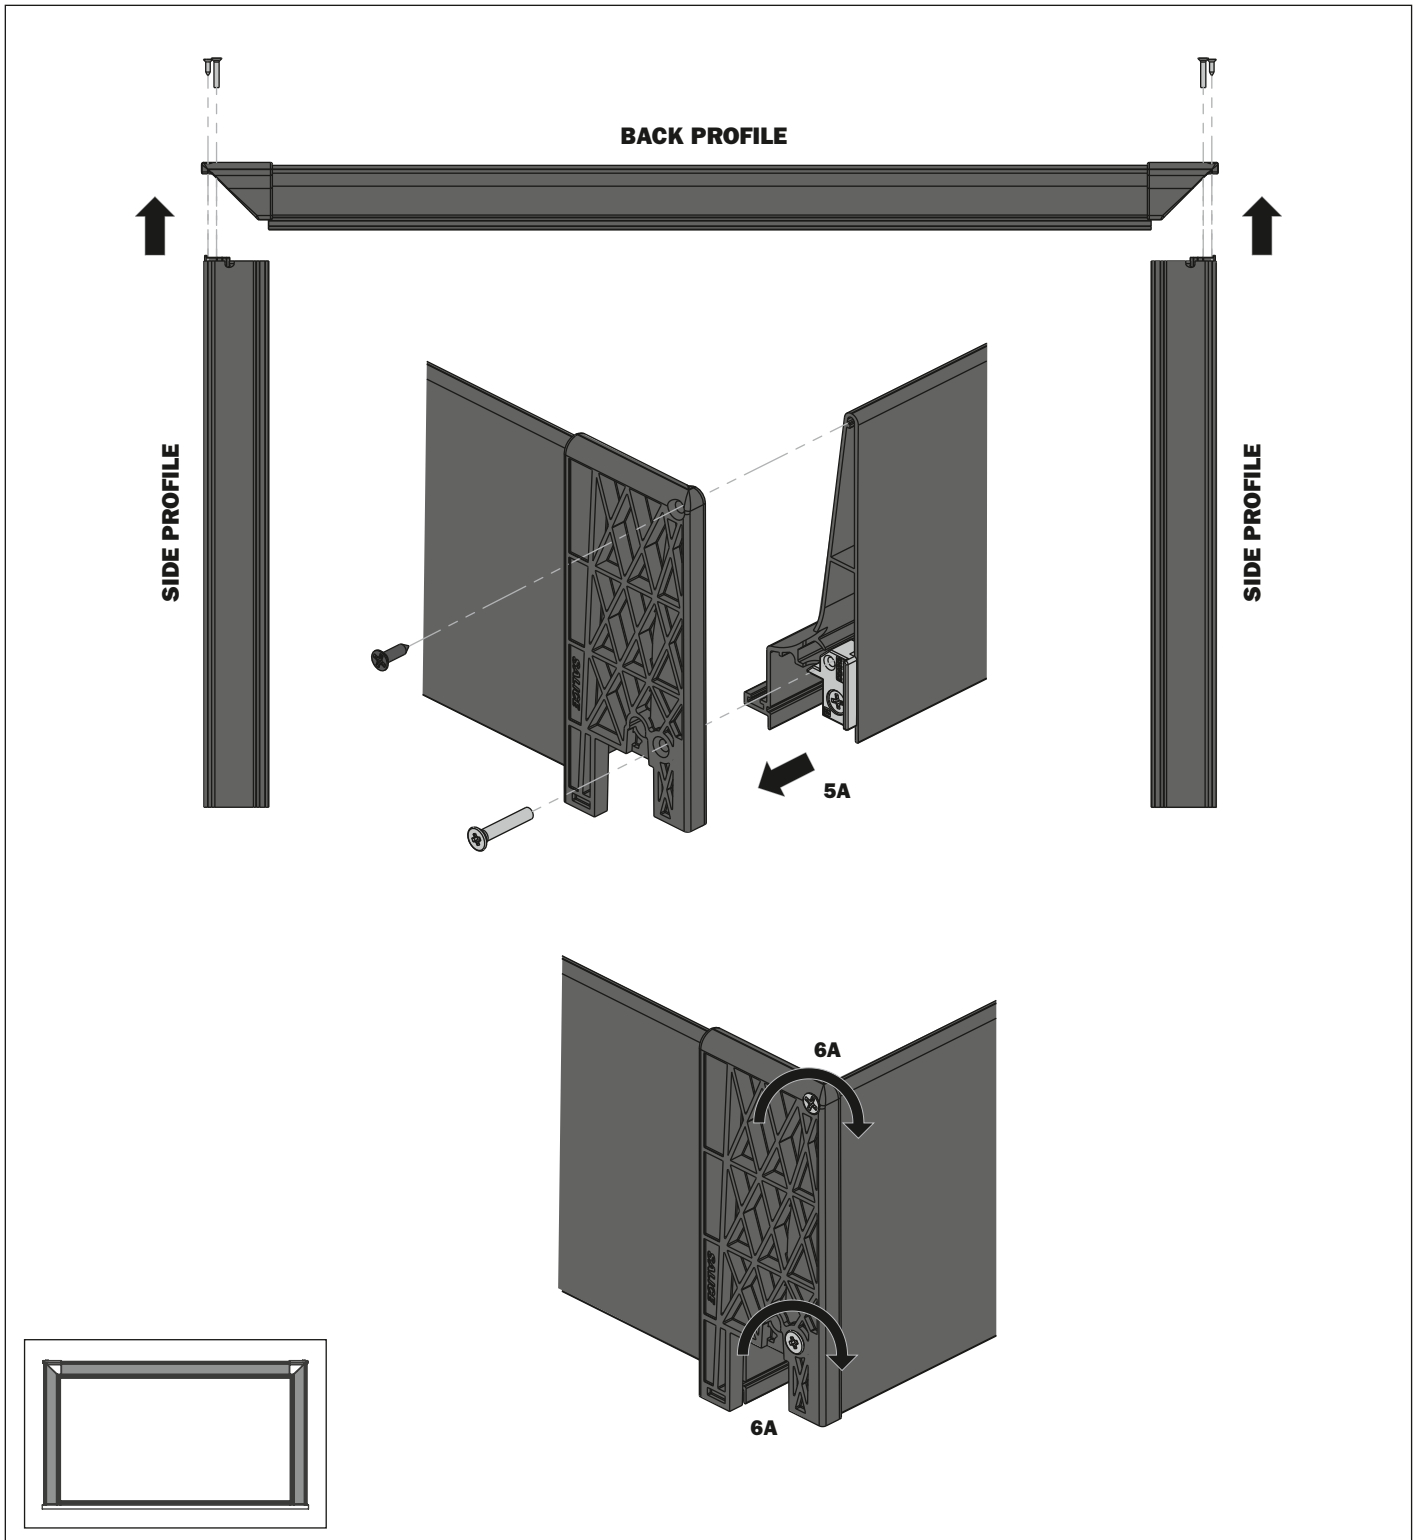


Assembly instructions

KIT FOR THE ASSEMBLY OF THE WOODEN FRONTAL


1. Screw the first cap to the frontal

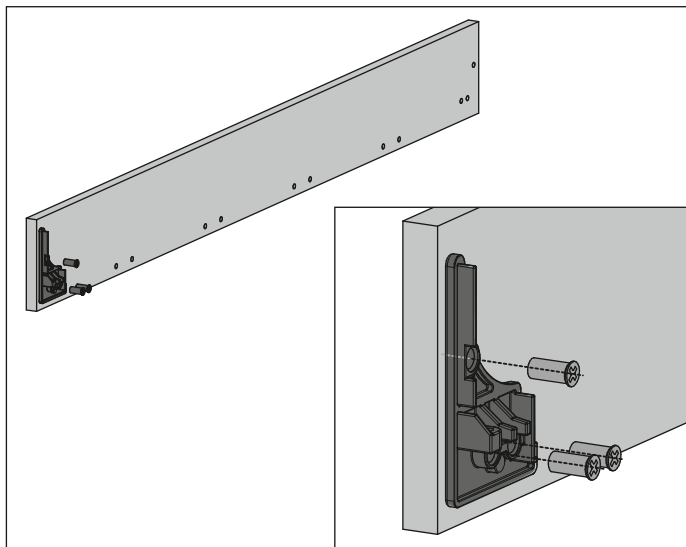


2. Screw the connecting elements to the frontal

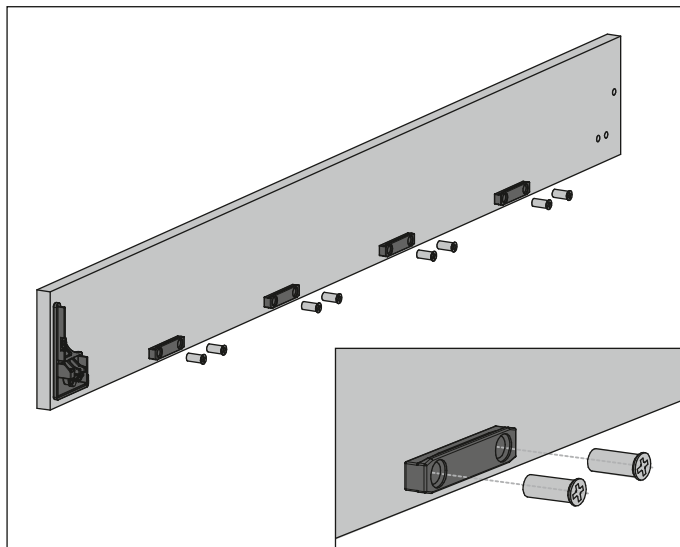


3. Insert and slide the front profile on the connecting elements
Front profile support to cut to length, 90° mitre cut end, see pages 19, 21, 23.

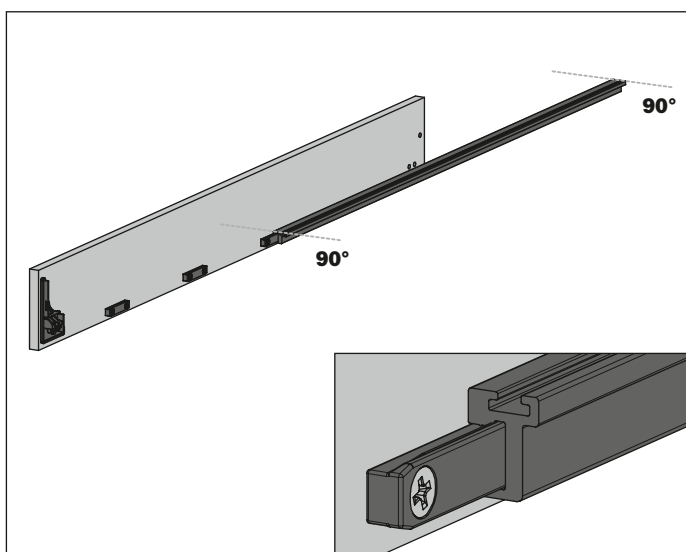


4. Screw the second cap to the frontal

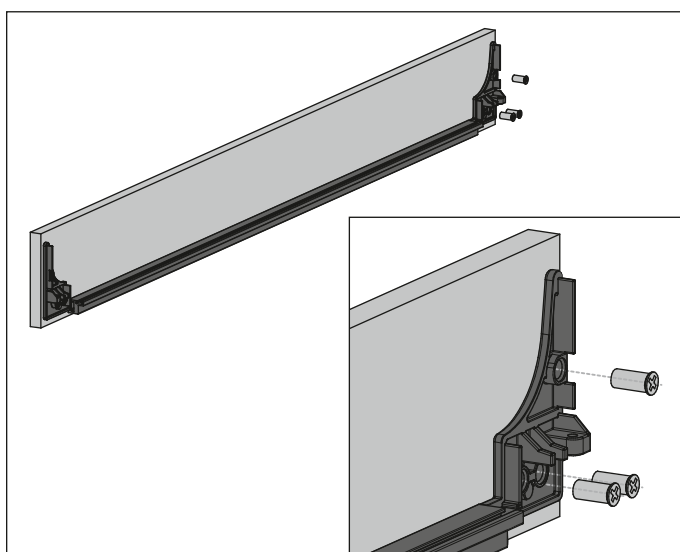

5. Insert the caps in both sides


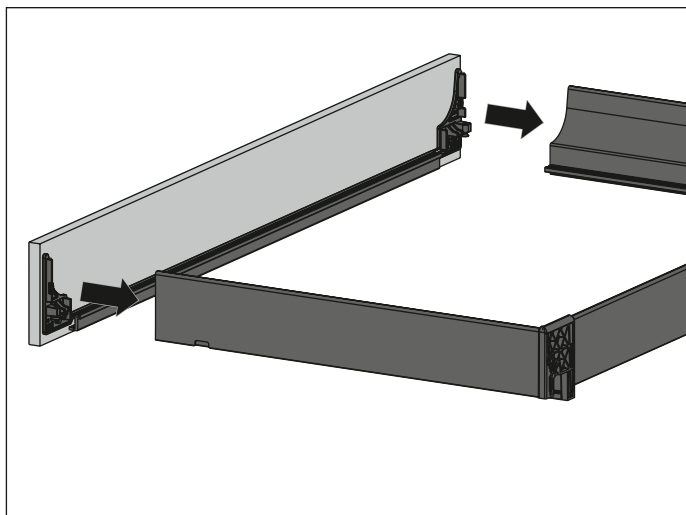


6. Screw to fix the frontal to the drawer

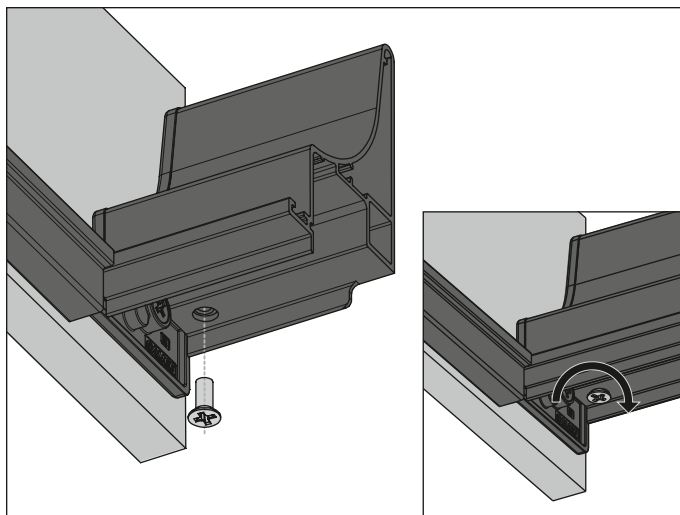


BACK PROFILE

1. Insert the joints into the recess of the back profile and into the side profiles until they reach the stop
Back profile to cut to length, 90° mitre cut end, see pages 25, 27, 29
2. Hold the joints in position and screw to fix

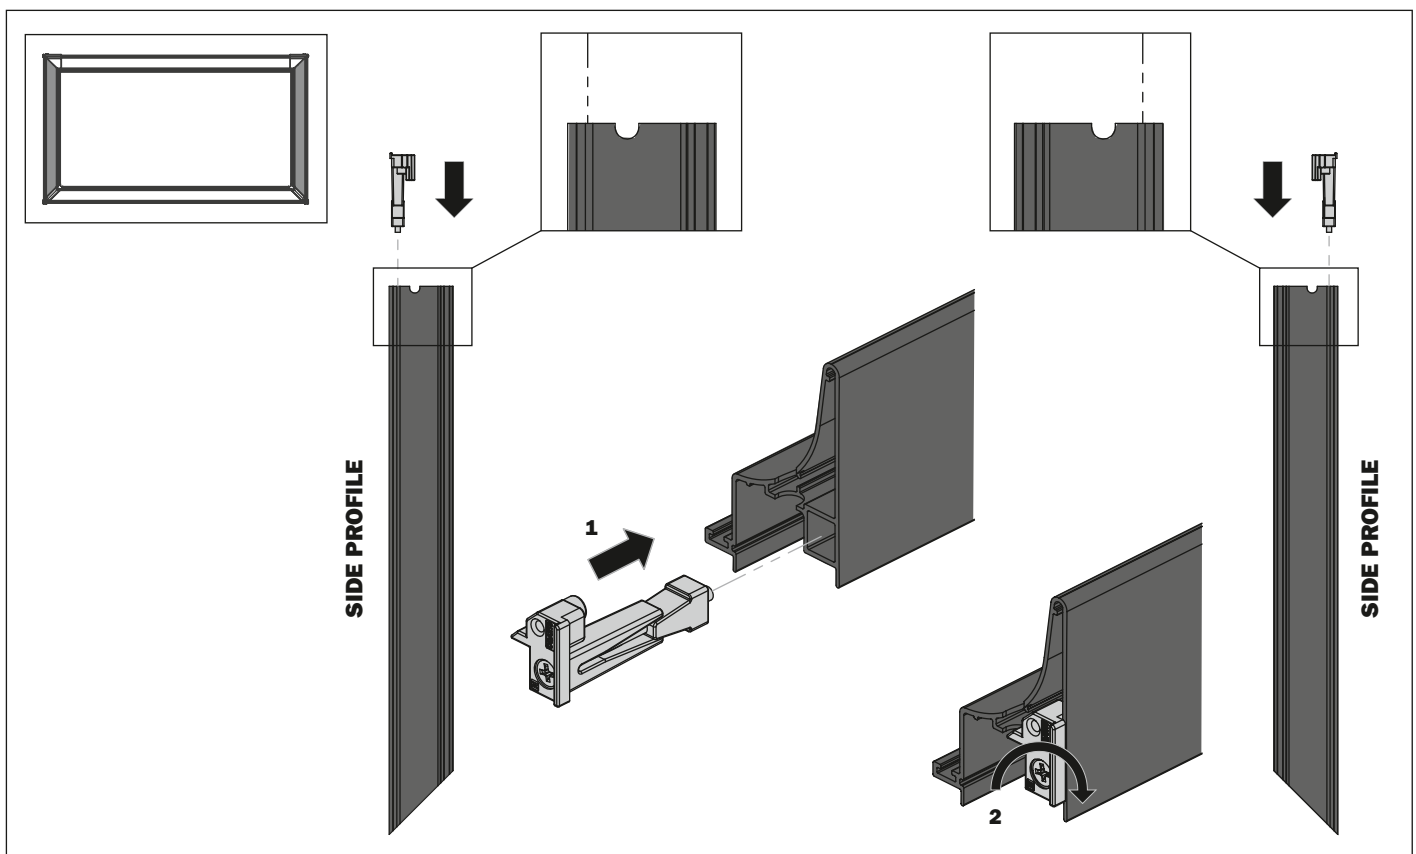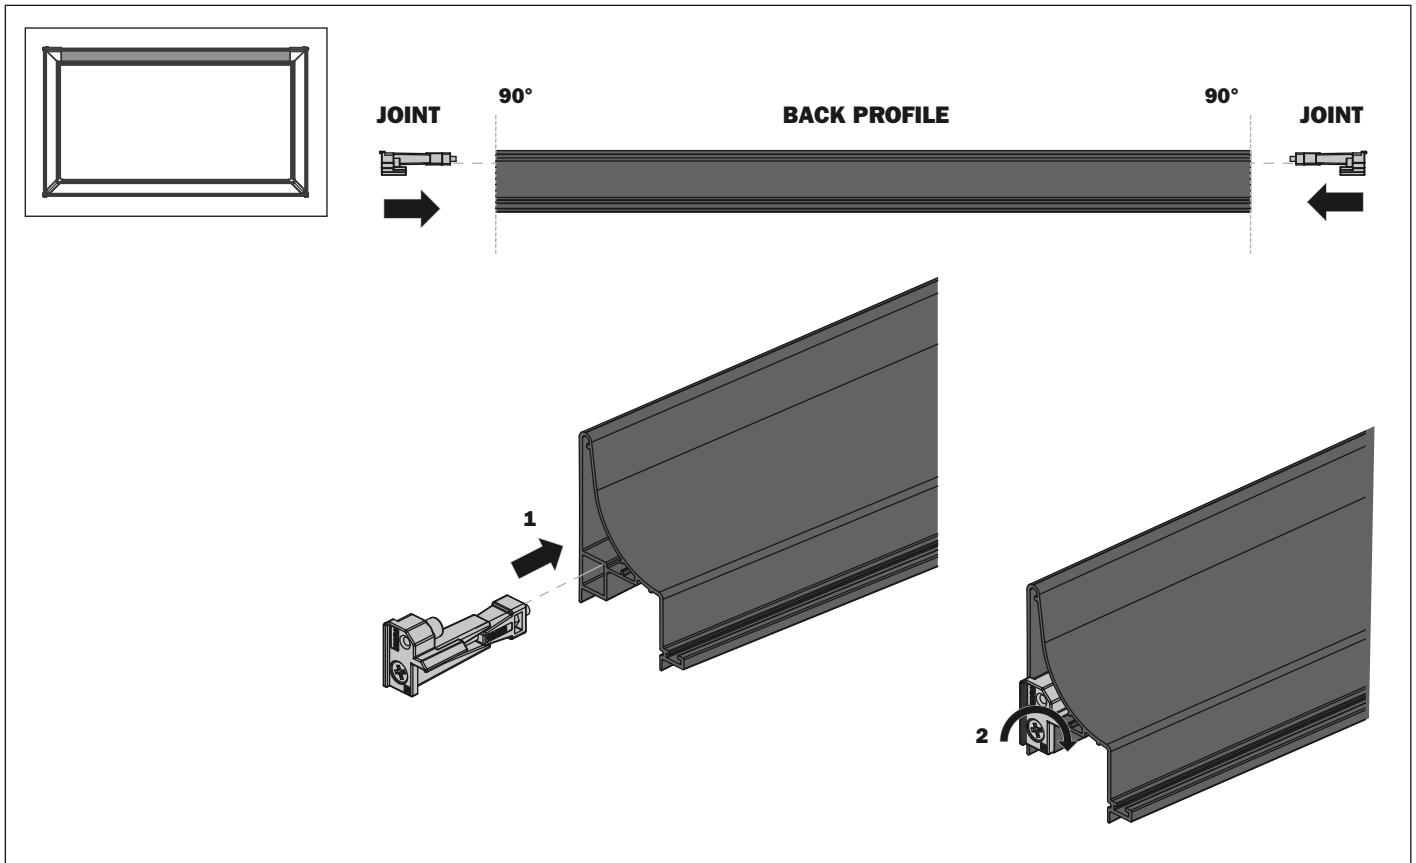


Assembly instructions

3. Insert the back corners onto the back profile until they reach the stop
4. Screw to fix the corners onto the joints

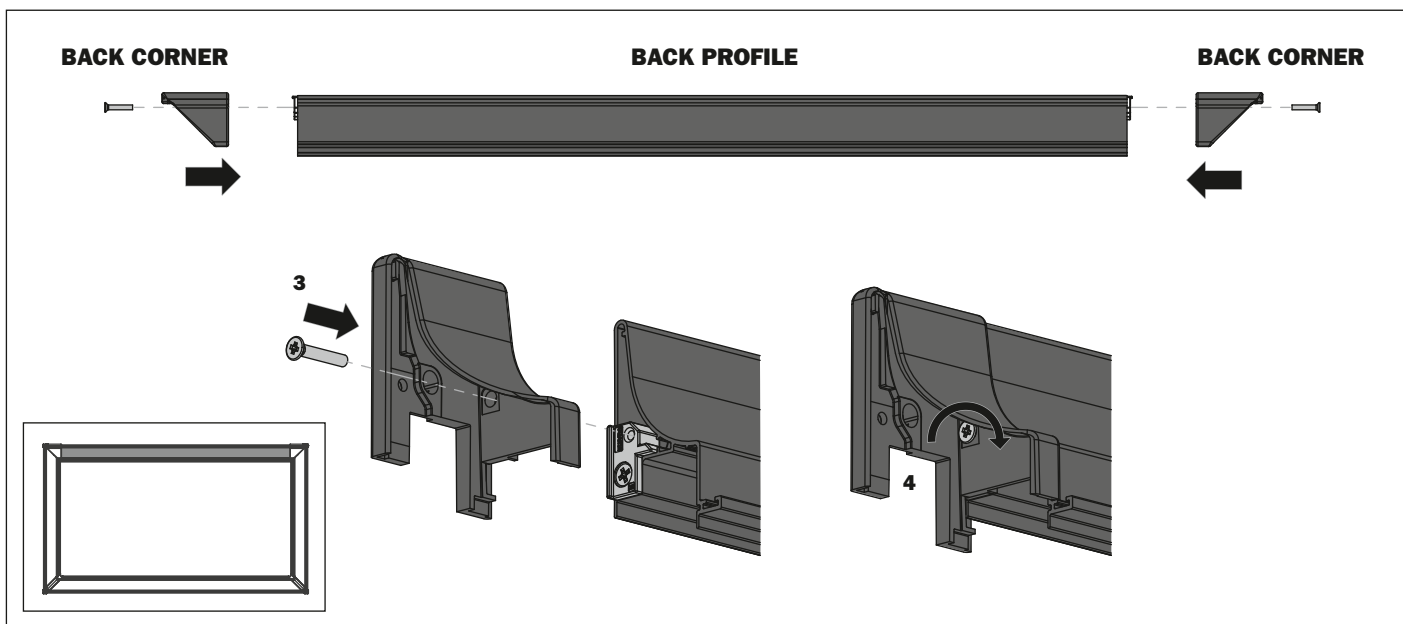


5. Insert the side profiles into the corners
6. Screw to fix the corners onto the joints

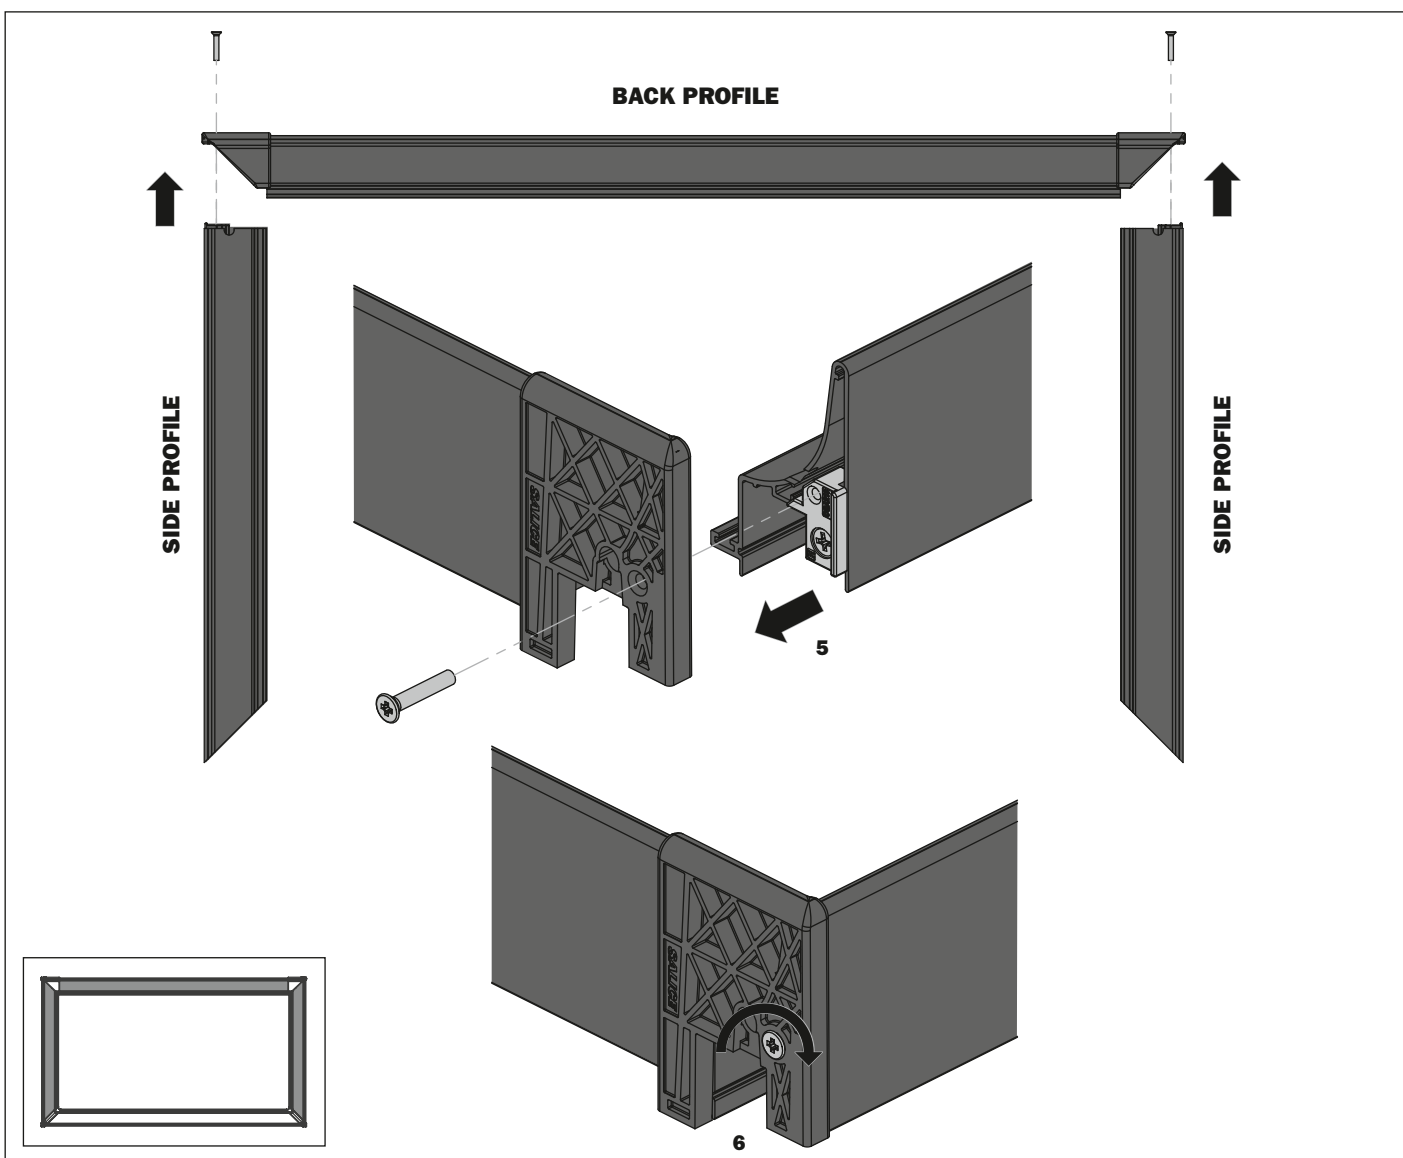

ADDITIONAL SCREW TO FIX THE BACK PROFILE WITH SIDE H 128

5A. Insert the side profiles into the corners


6A. Screw both the screws to fix the corners onto the joints and to fasten the profile

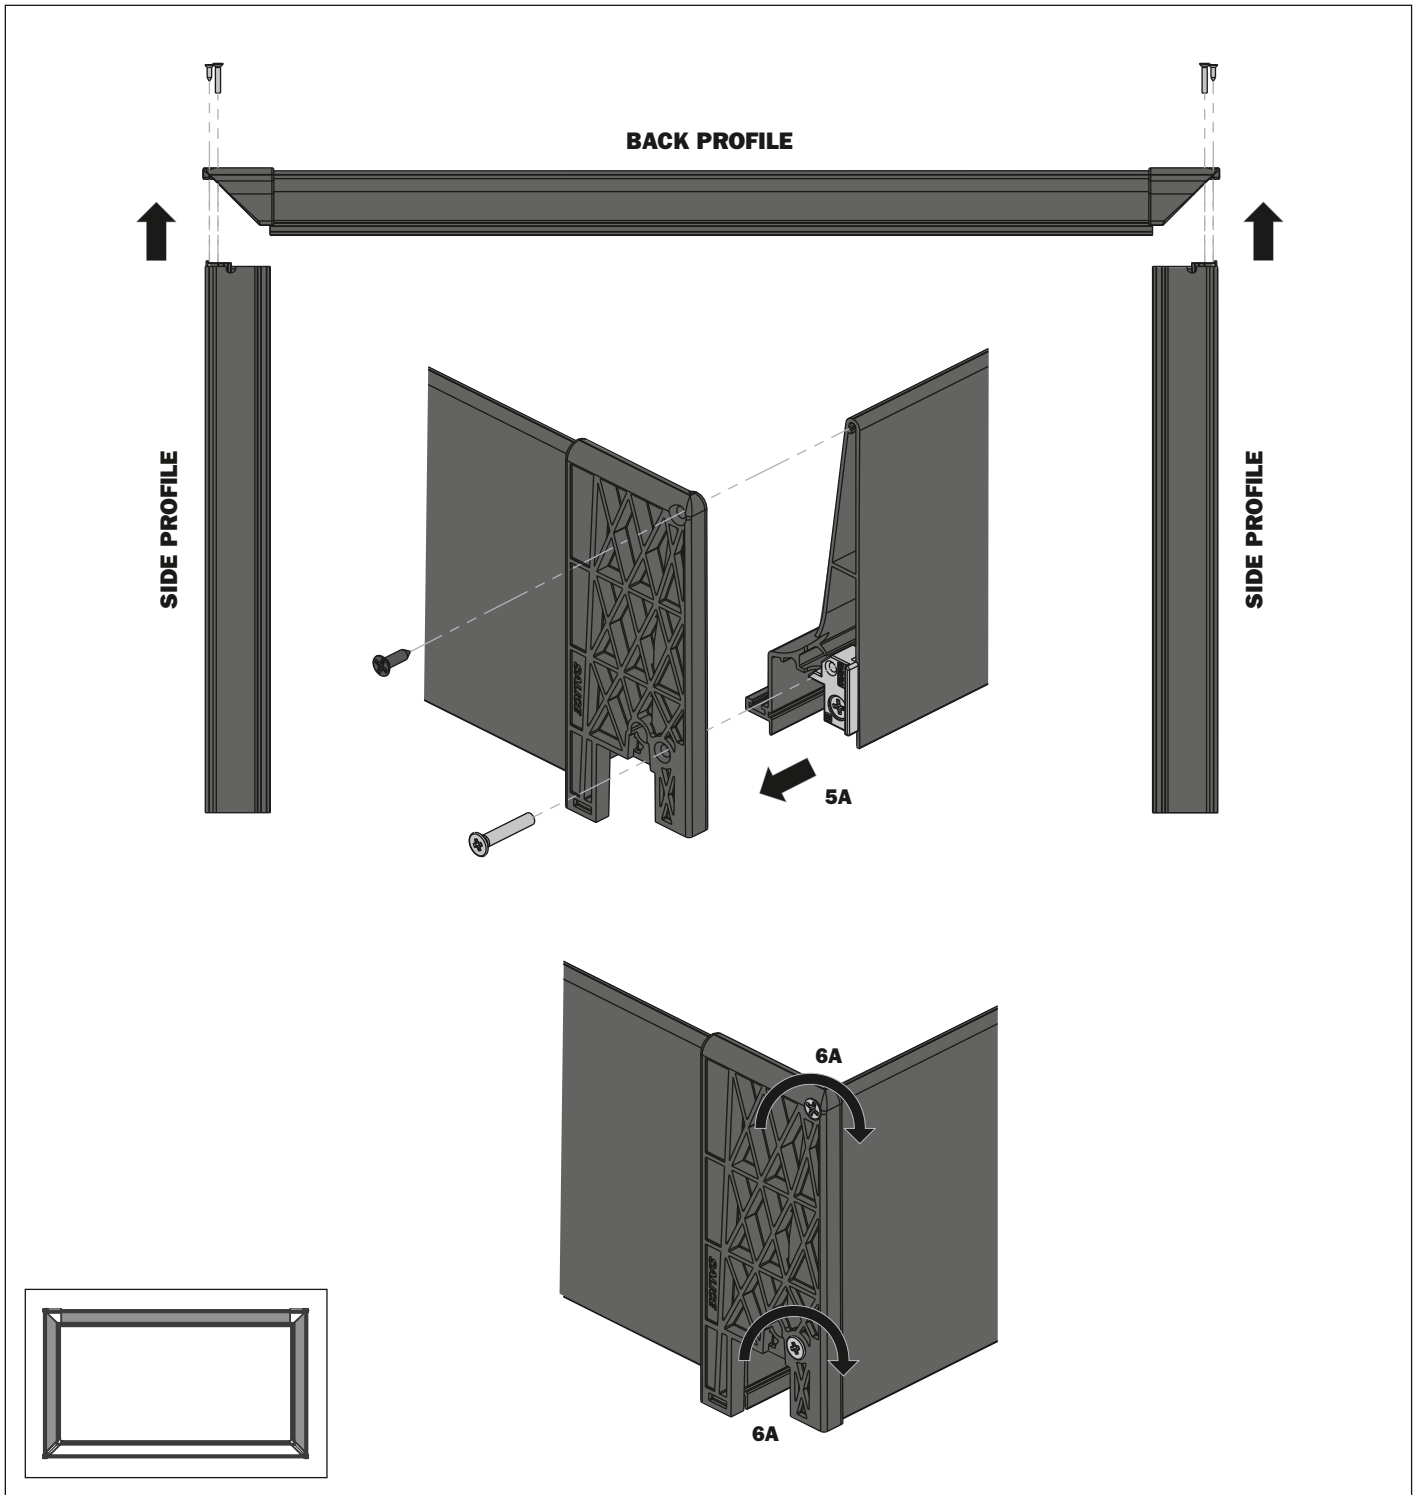


Assembly instructions

FRONT PROFILE

1. Insert the joints into the recess of the front profile until they reach the stop
Front profile to cut to length, 45° mitre cut end, see pages 25, 27, 29.
2. Hold the joints in position and screw to fix

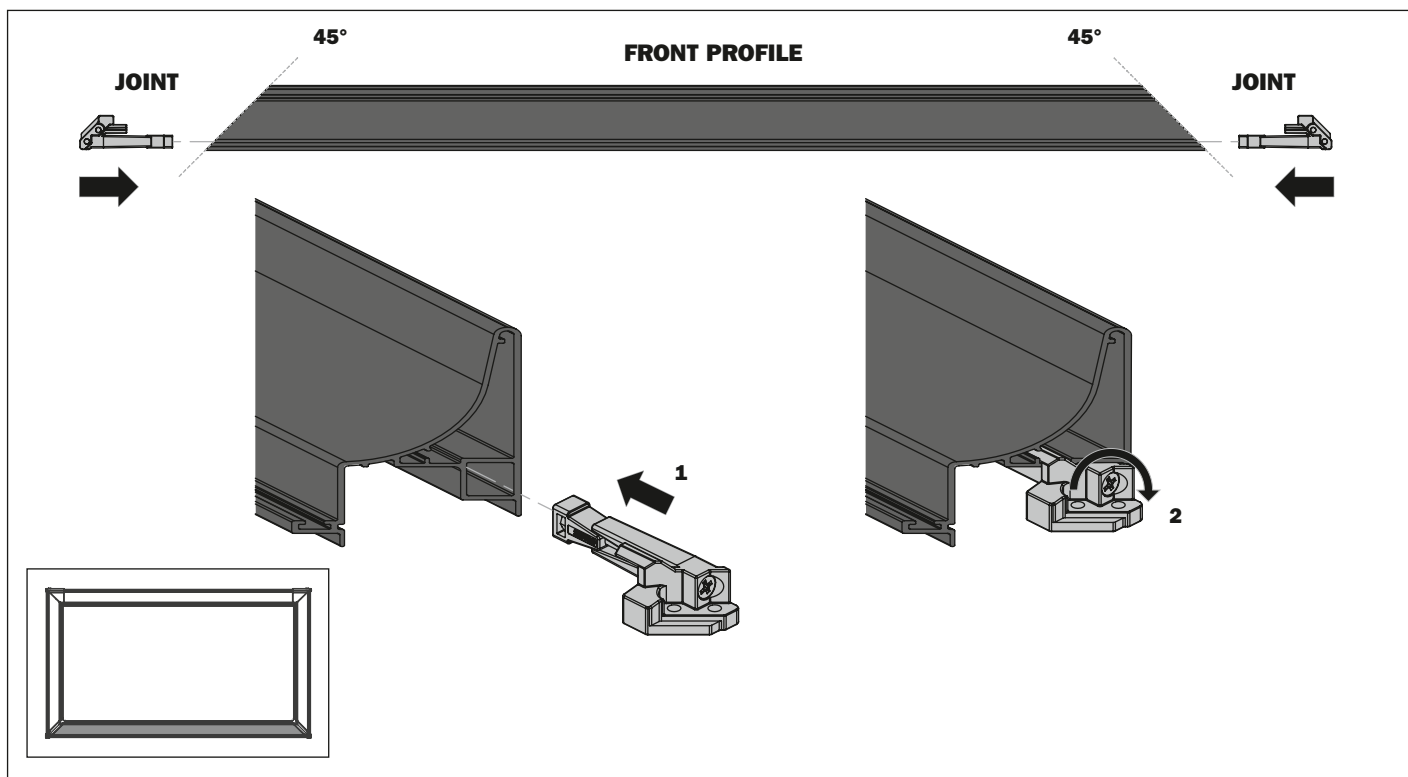


3. Insert the front corners onto the front profile until they reach the stop
4. Insert the fixing screws into the front corners onto the front profile
5. Screw to fix the corners

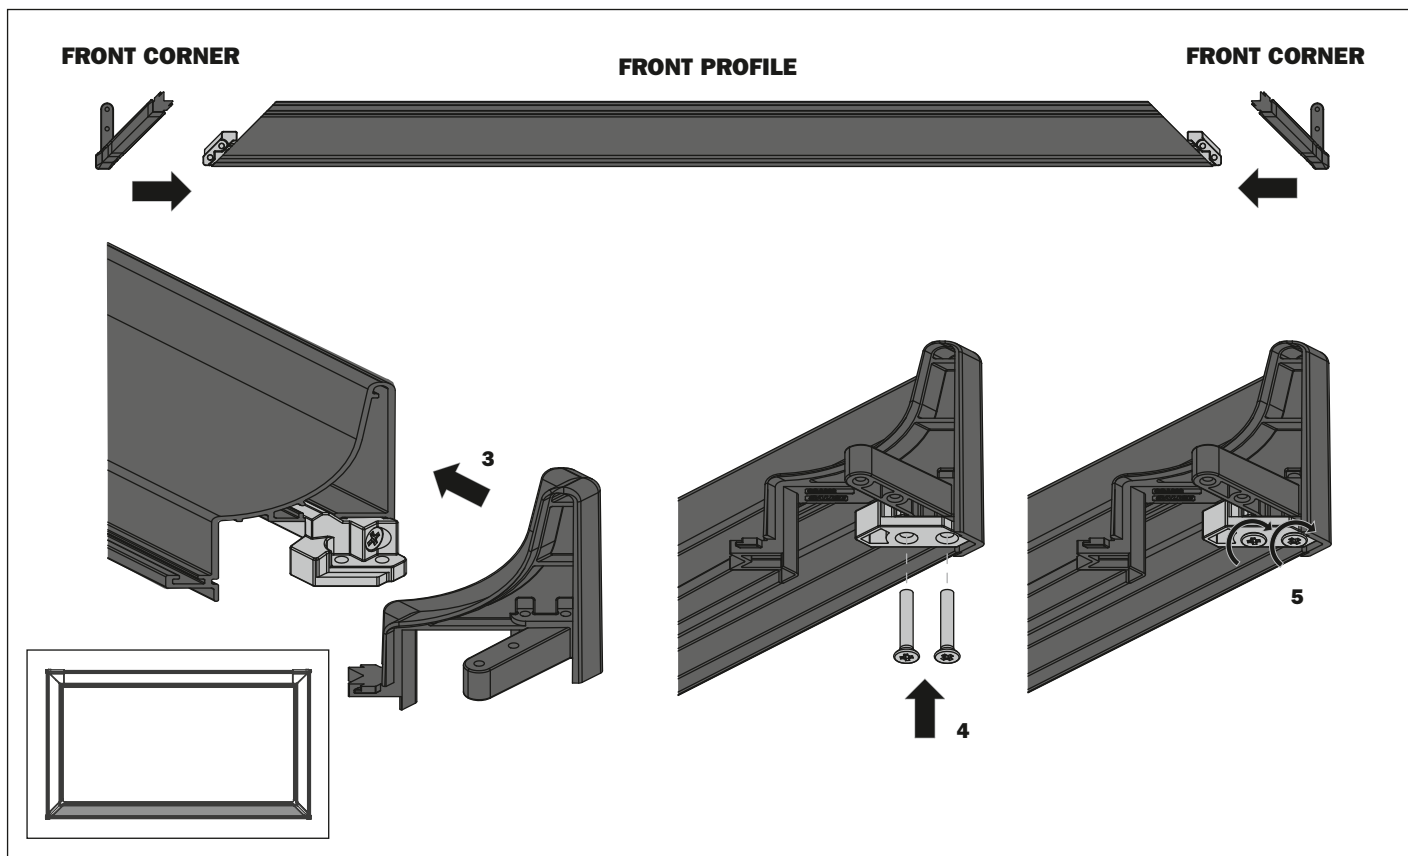

FRONT PROFILE


6. Insert the assembled front profile into the recess of the side profiles until it reaches the stop
7. Fix the assembled front profile onto the side profiles
8. Screw to fix the profiles

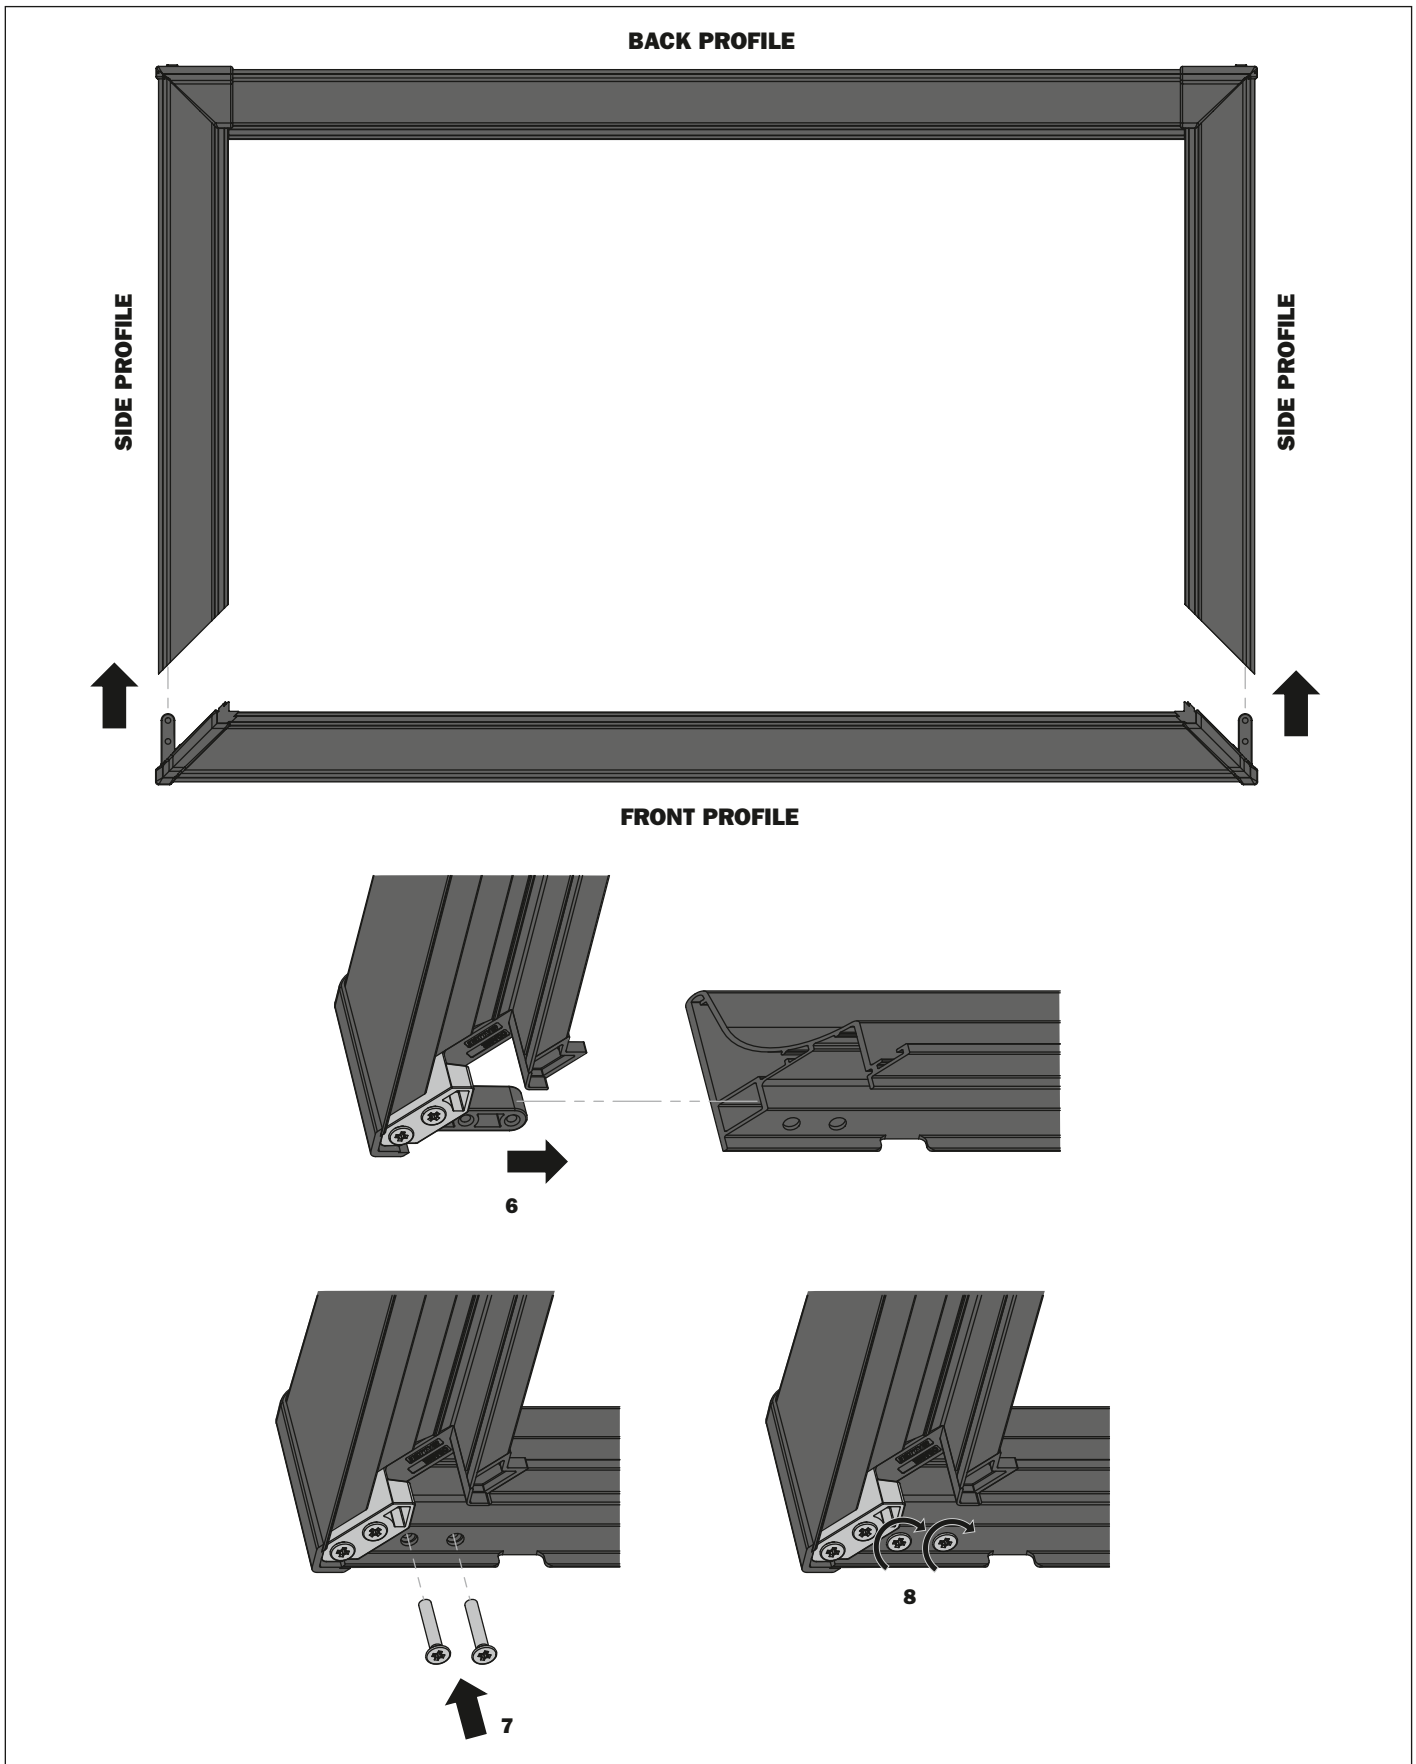

Assembly instructions


MOUNTING THE DRAWER ONTO THE RUNNERS

1. Place the drawer on the runners and close it
2. The flexibility of the fixing system enables the clips to engage
3. Engage the locking pin to prevent the overturning of the drawer
4. Locate the rear hooks

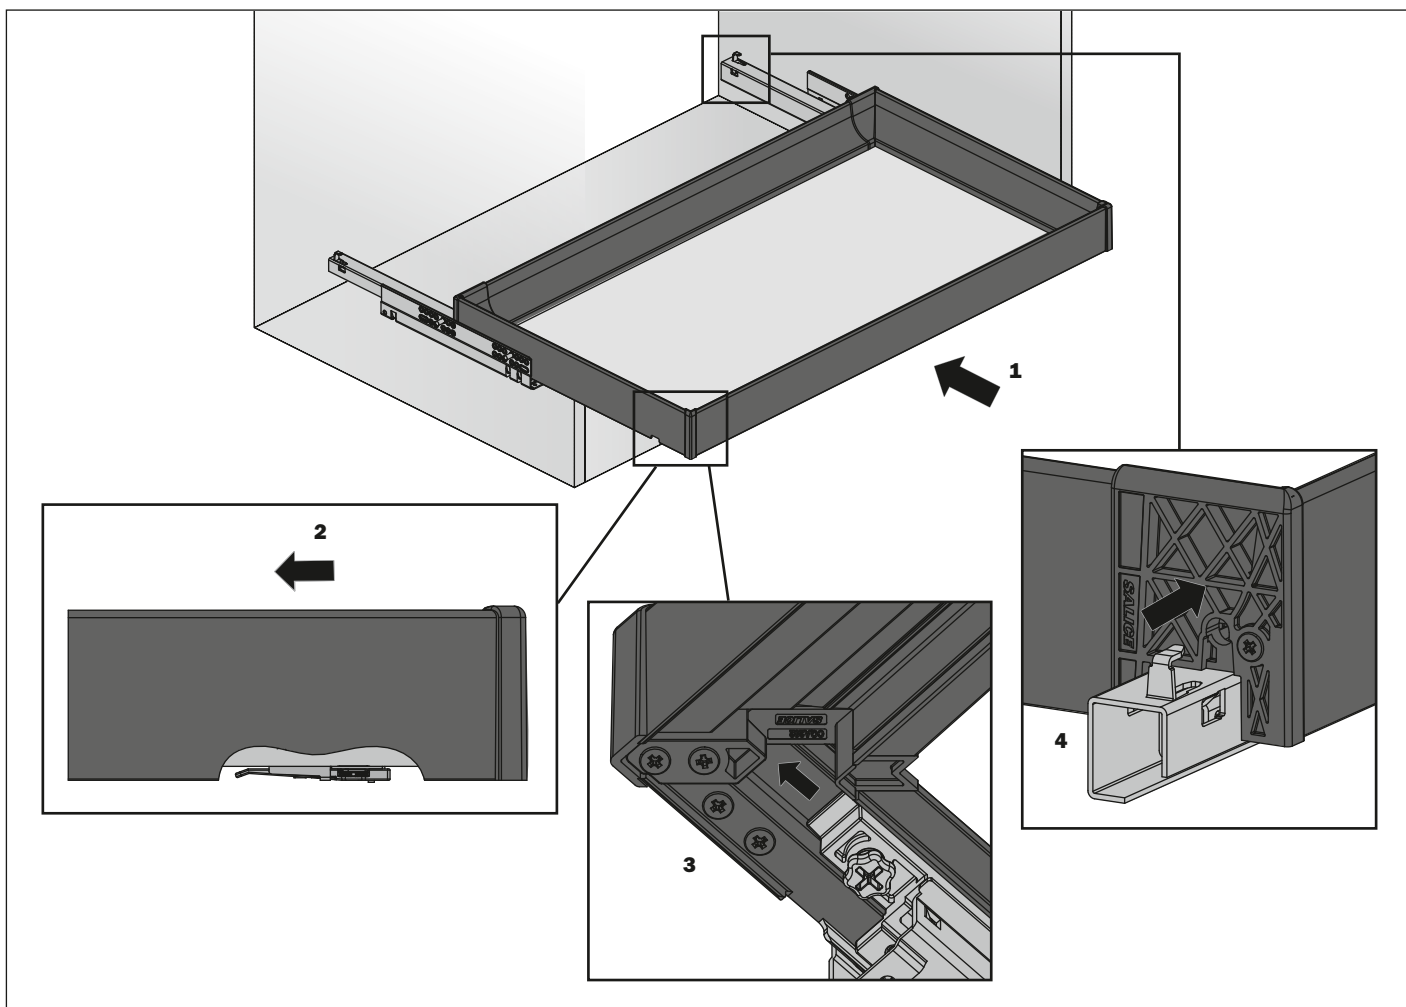

REMOVAL OF THE DRAWER


1. Open the drawer
2. Press down the lever indicated here below and pull out the drawer

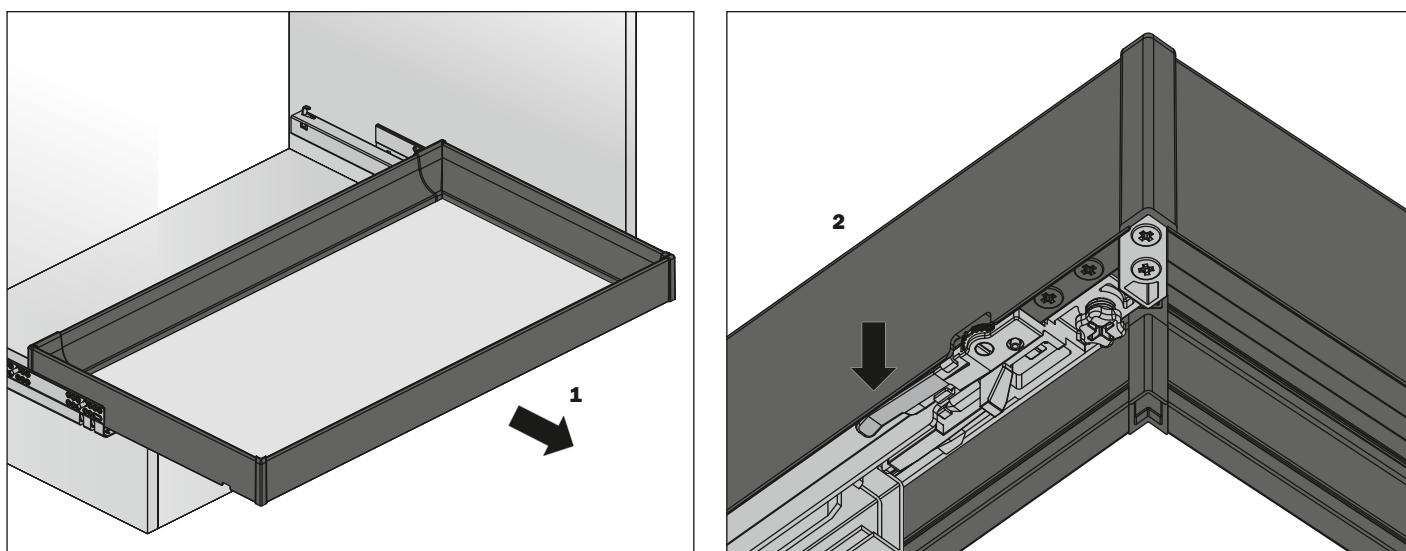

Excessories - modular drawer - Adjustments

Depth adjustment +2 -2 mm


Rotate the wheel towards the front of the drawer to move the drawer forward.
Rotate the wheel towards the back of the drawer to move the drawer backward.
This operation is tool free.

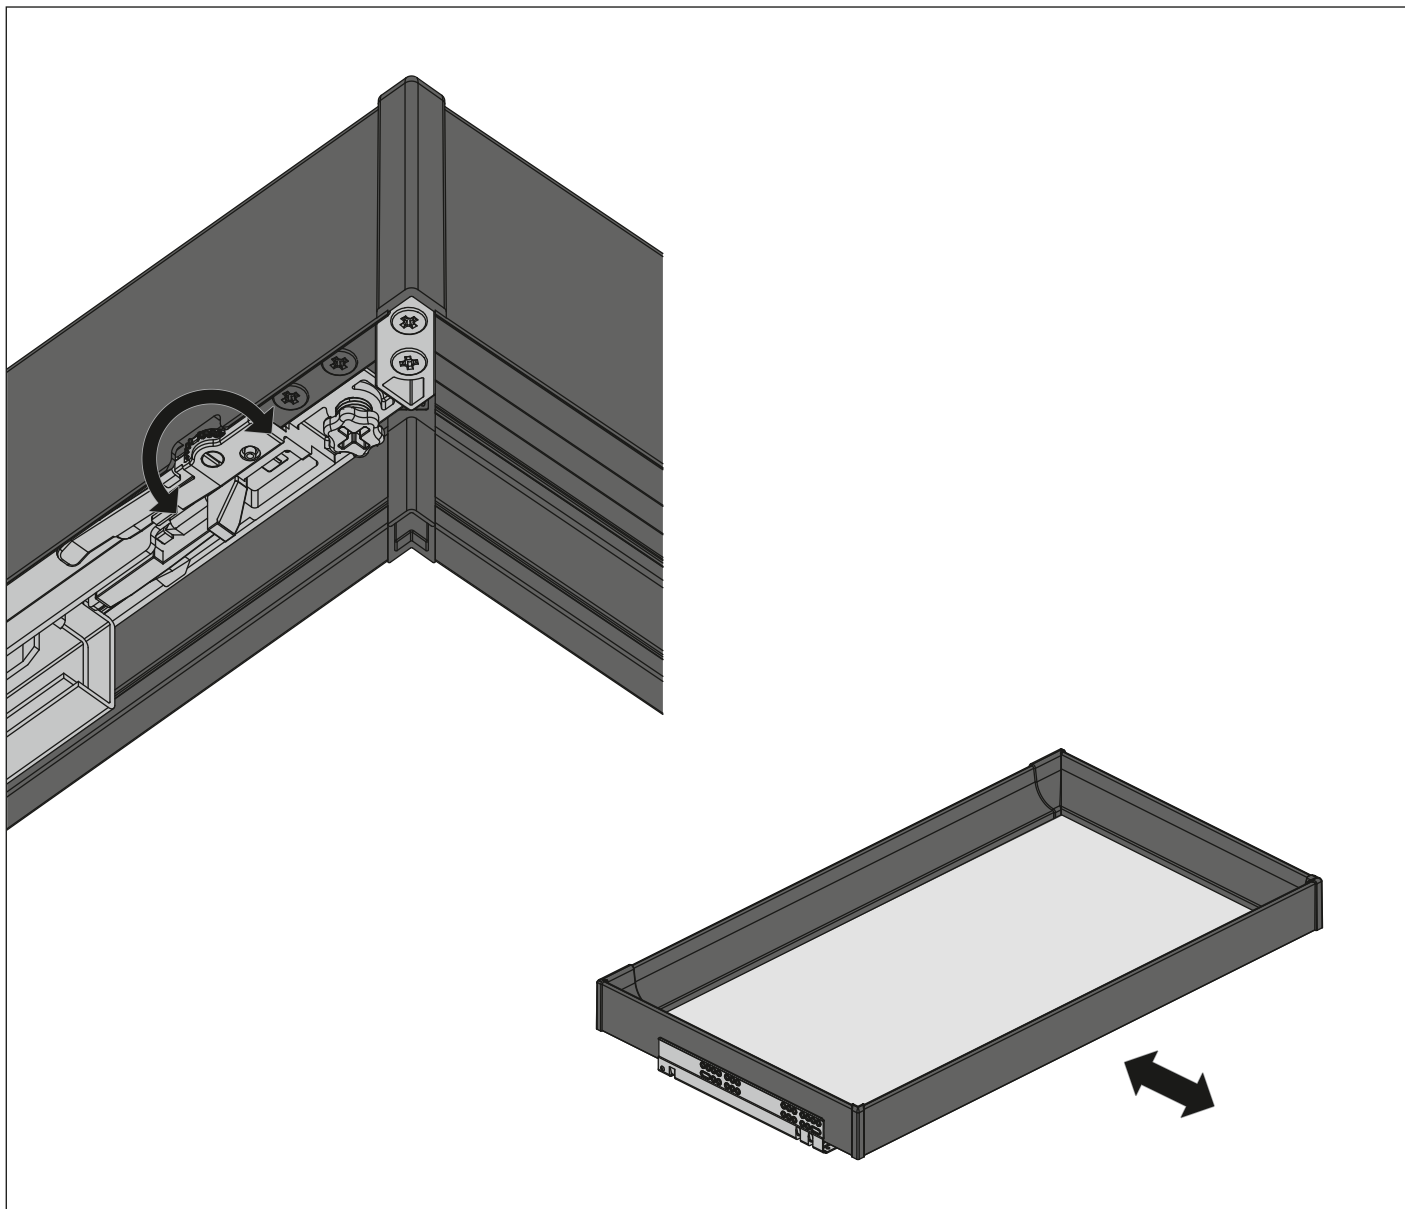


Adjustments

Height adjustment +5 mm


Rotate the lever towards the frontal of the drawer for the height adjustment.
This operation is tool free.

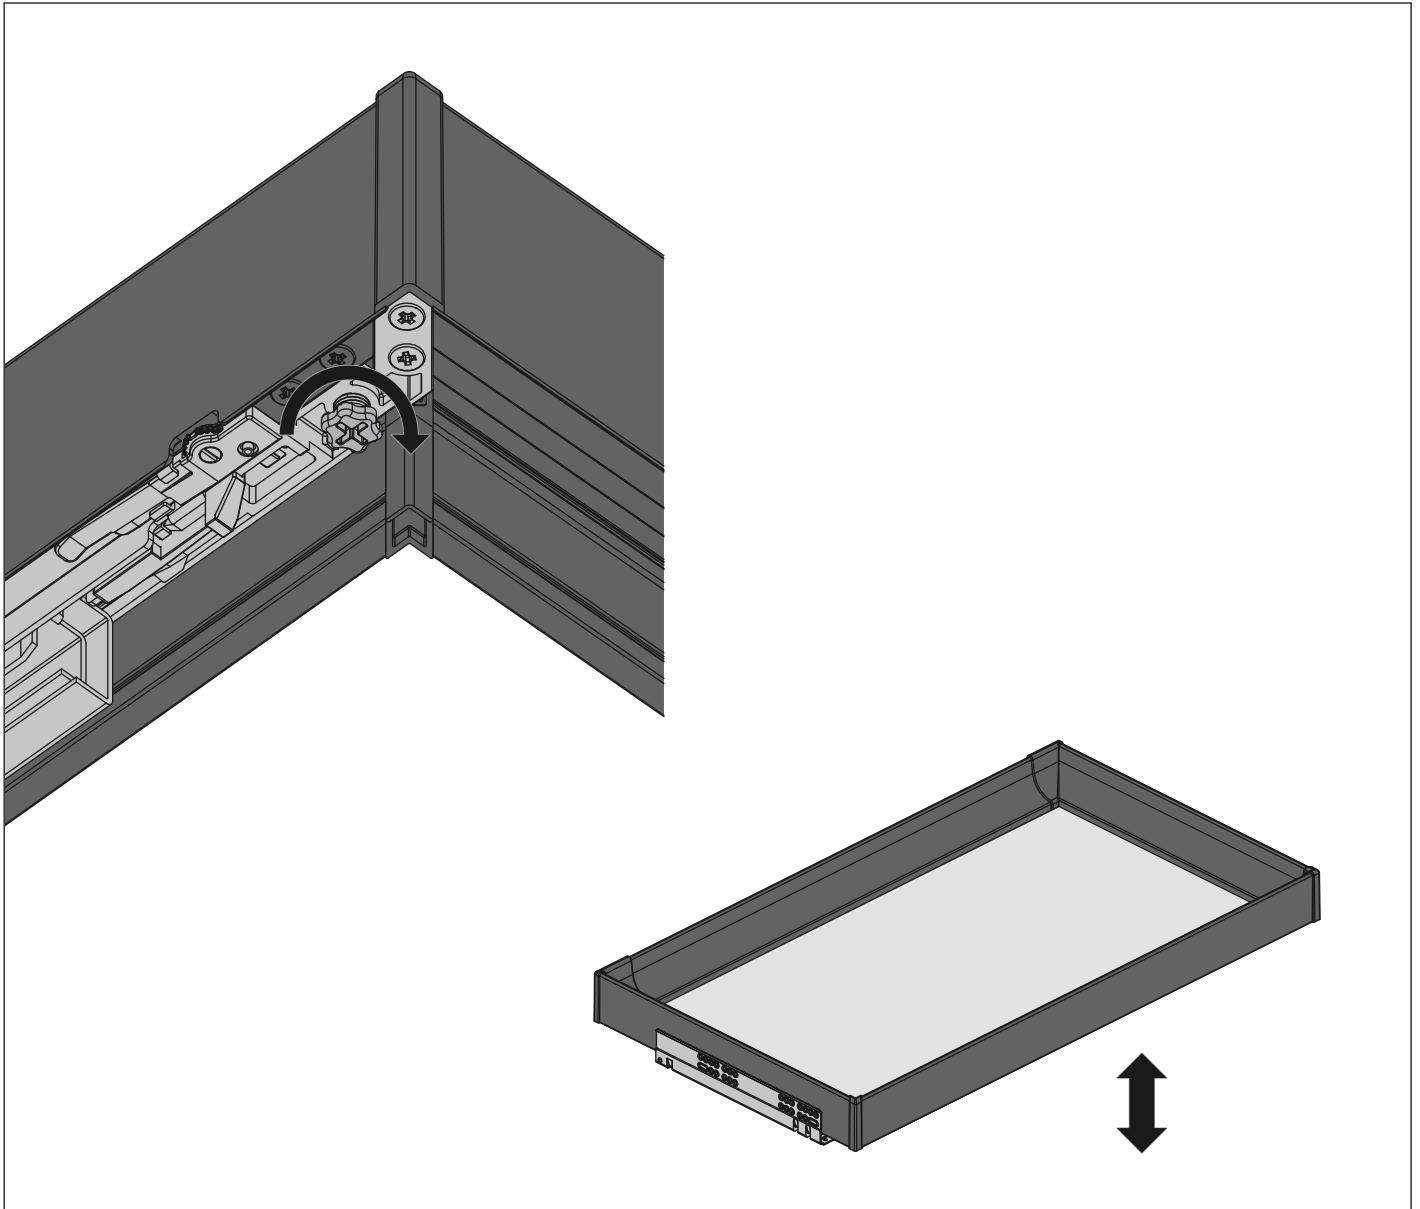


Excessories - modular drawer - 3-SIDED H 52 - wooden frontal

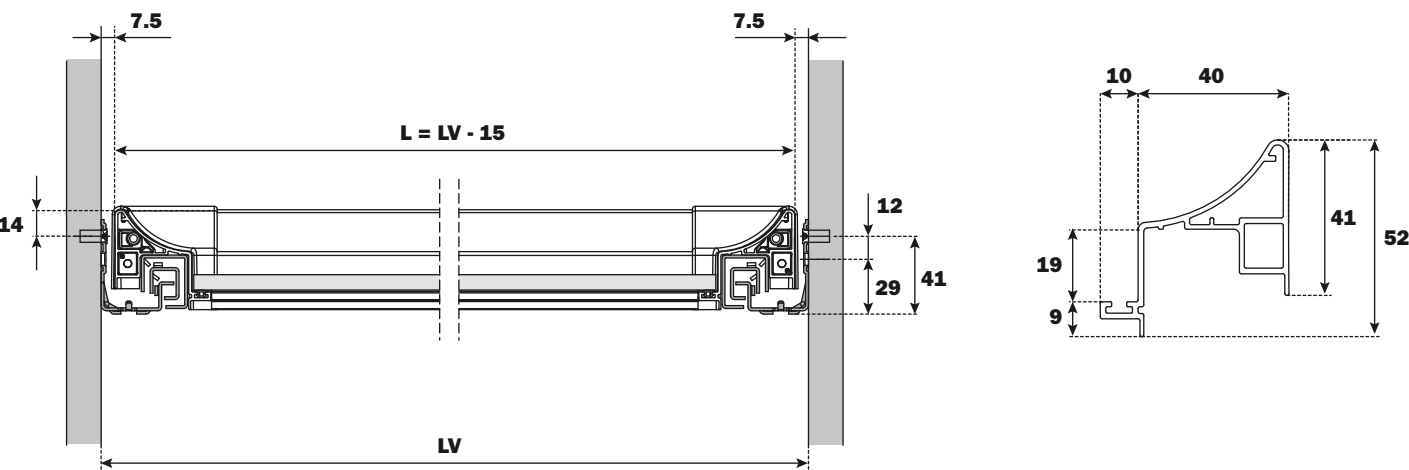

LV = cabinet width

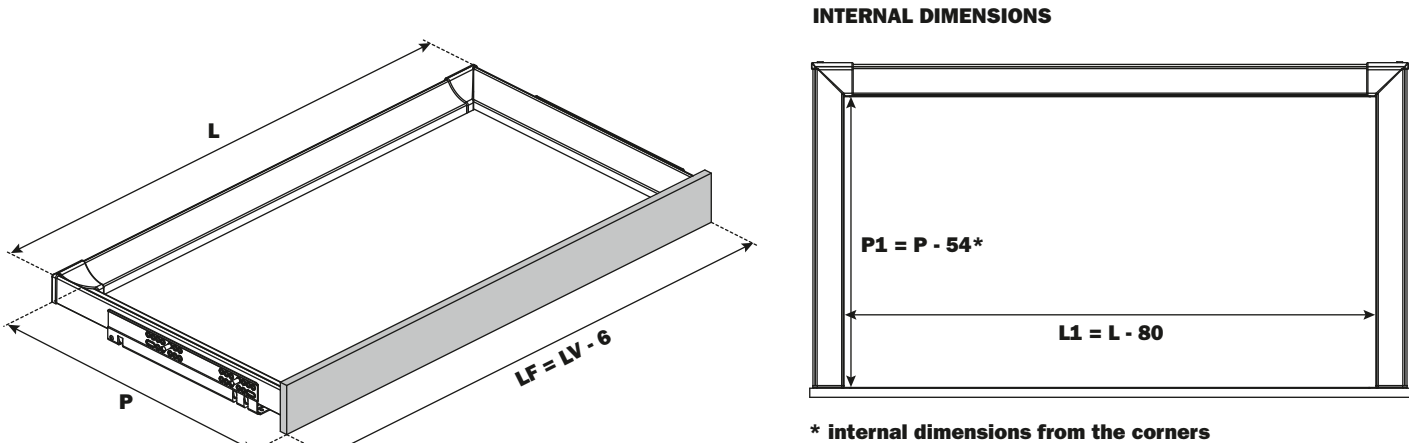

FRONTAL DRILLING

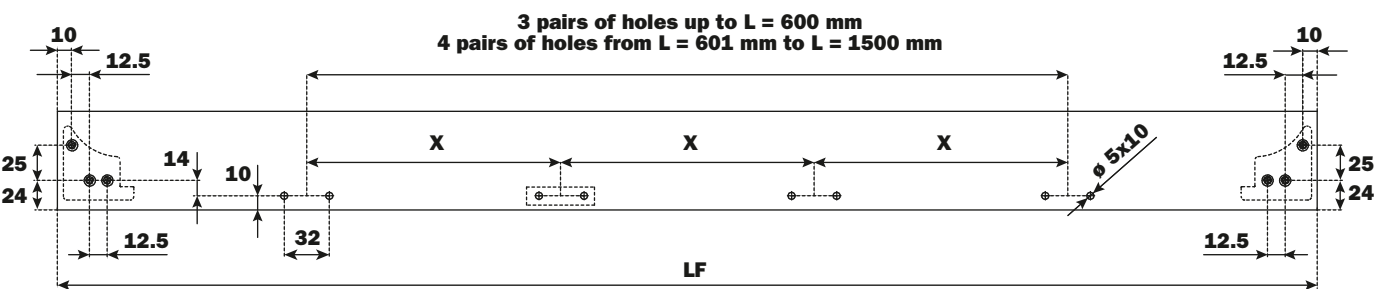


COMPONENTS

- 1. Joints for back profile
- 2. Back corners
- 3. Screws TPS DELTA PT 4x23 mm
- 4. Back profile
- 5. Side profiles


Kit for the frontal fixing
(to be ordered separately)

- 6. Euroscrews TPSV 6.3x14 mm
- 7. Fixing caps
- 8. Aluminium profile
- 9. Connecting elements for the frontal
- 10. Screws TPS M 4x12 mm

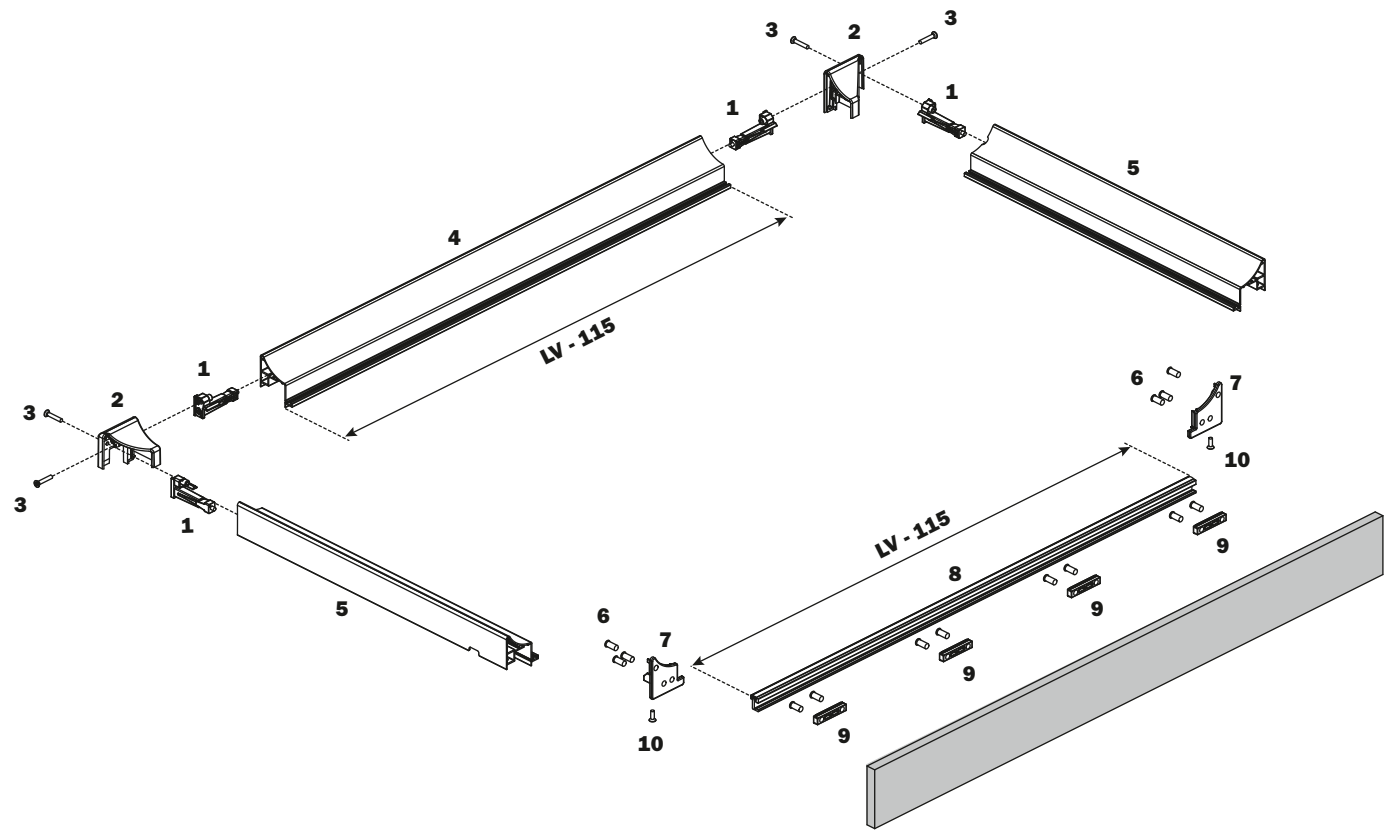


Runner length (LN) mm	Drawer width (L) mm	Frontal width (LF) mm	Internal width (L1) mm	Drawer depth (P) mm + wooden frontal 12 mm	Drawer depth (P) mm + wooden frontal 19 mm	Internal depth (P1) mm
400	LV - 15	LV - 6	L - 80	440	447	386
450				490	497	436
470				510	517	456


Excessories - modular drawer - 3-SIDED H 78 - wooden frontal

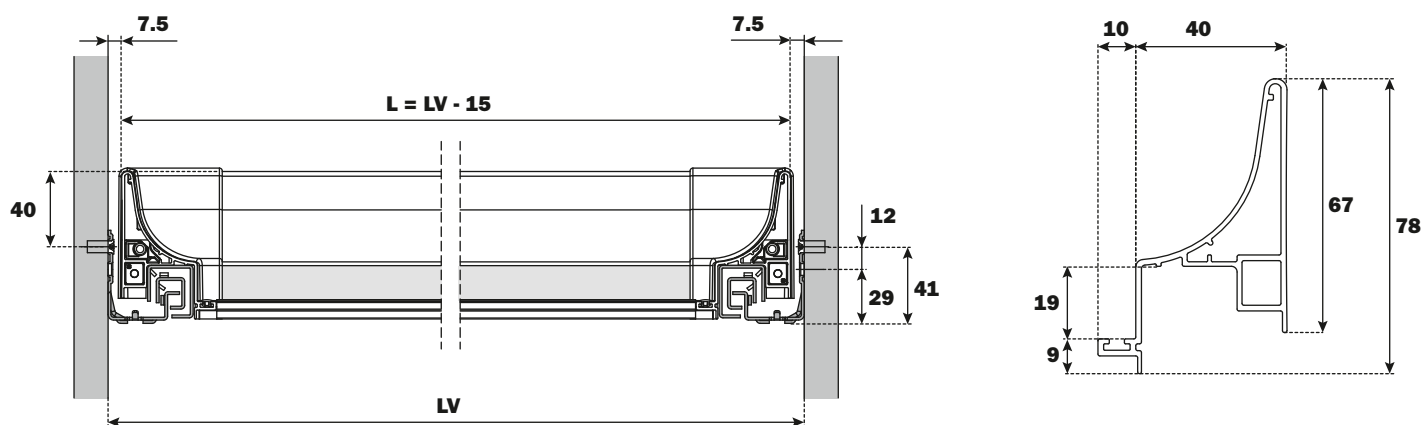

LV = cabinet width

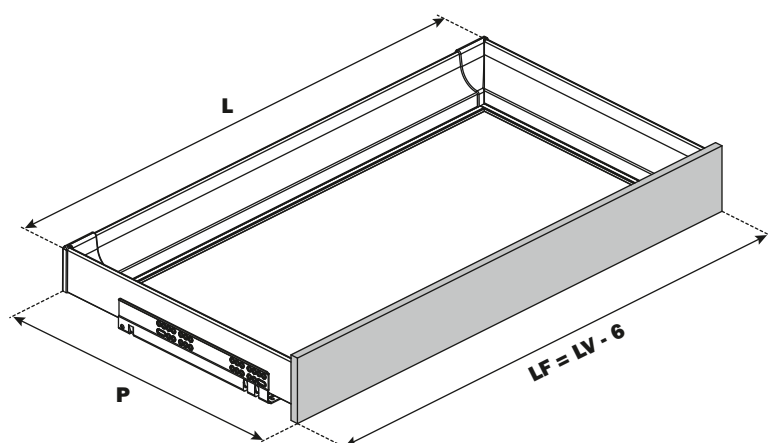


INTERNAL DIMENSIONS

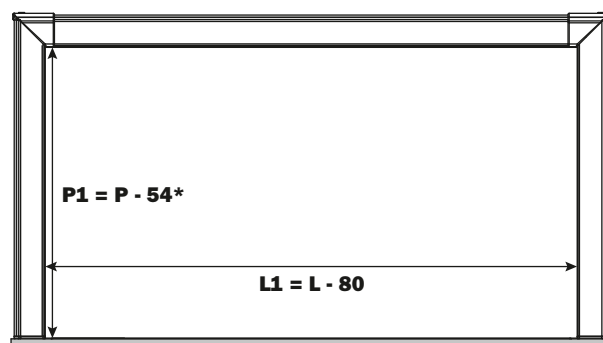

*** internal dimensions from the corners**

FRONTAL DRILLING

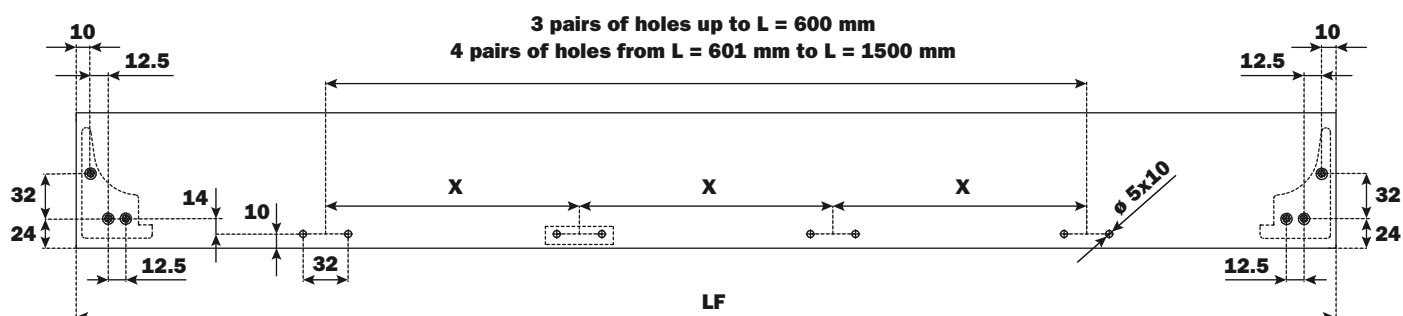


COMPONENTS

- 1. Joints for back profile
- 2. Back corners
- 3. Screws TPS DELTA PT 4x23 mm
- 4. Back profile
- 5. Side profiles


Kit for the frontal fixing
(to be ordered separately)

- 6. Euroscrews TPSV 6.3x14 mm
- 7. Fixing caps
- 8. Aluminium profile
- 9. Connecting elements for the frontal
- 10. Screws TPS M 4x12 mm

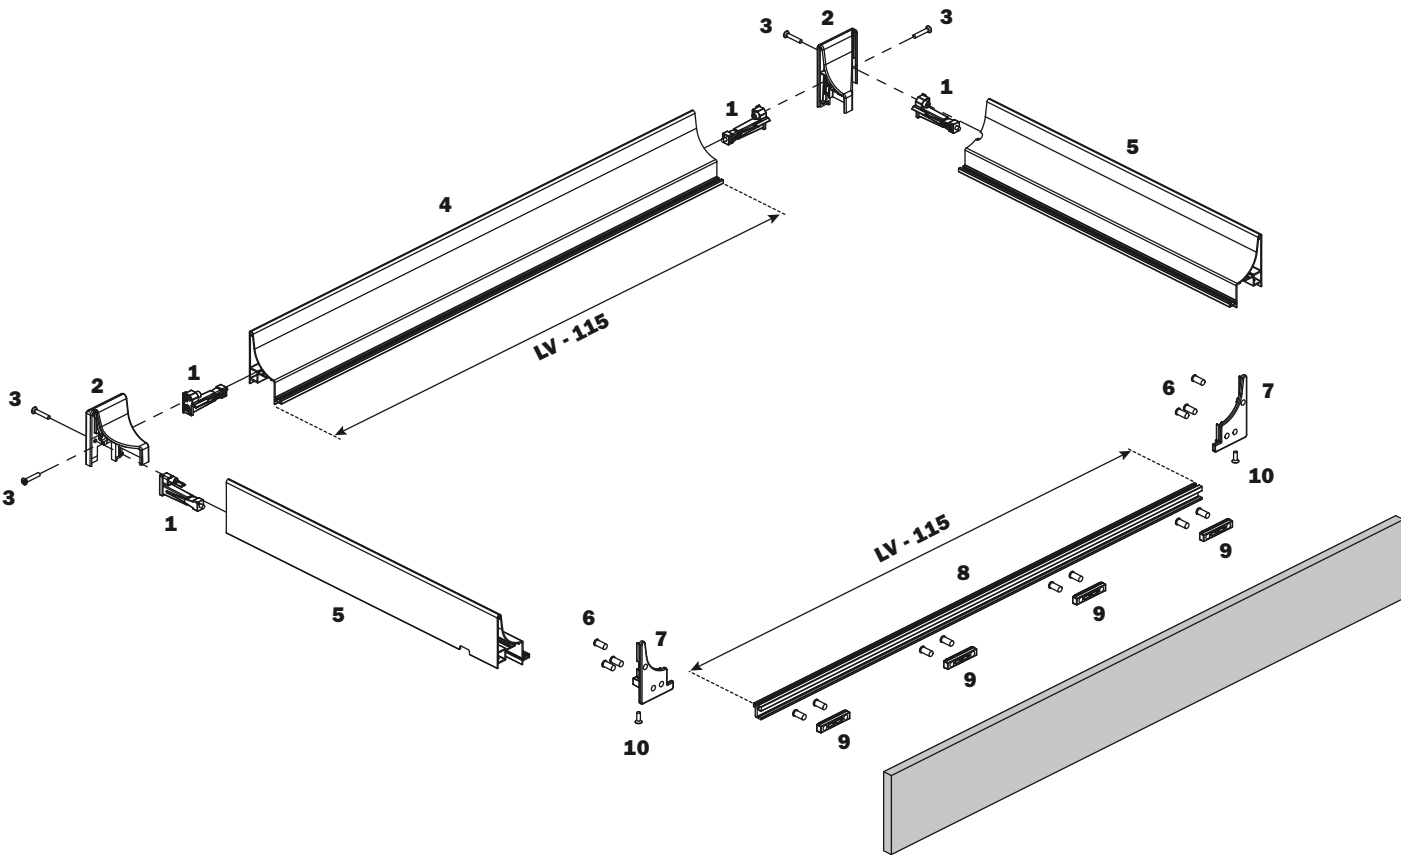


Runner length (LN) mm	Drawer width (L) mm	Frontal width (LF) mm	Internal width (L1) mm	Drawer depth (P) mm + wooden frontal 12 mm	Drawer depth (P) mm + wooden frontal 19 mm	Internal depth (P1) mm
400	LV - 15	LV - 6	L - 80	440	447	386
450				490	497	436
470				510	517	456


Excessories - modular drawer - 3-SIDED H 128 - wooden frontal

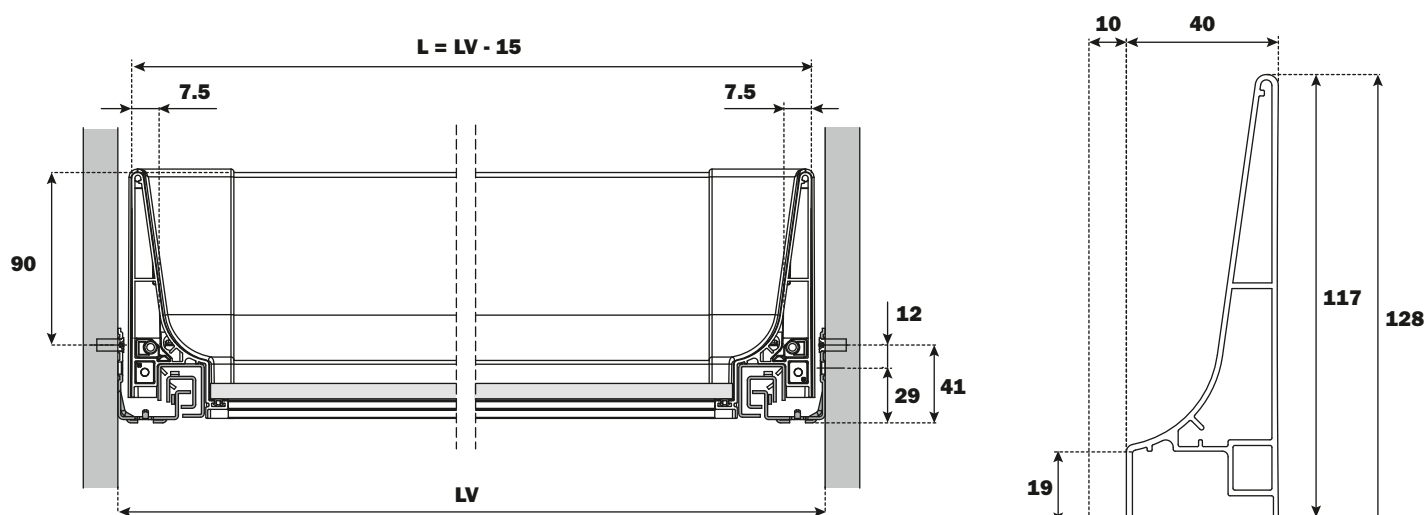

LV = cabinet width

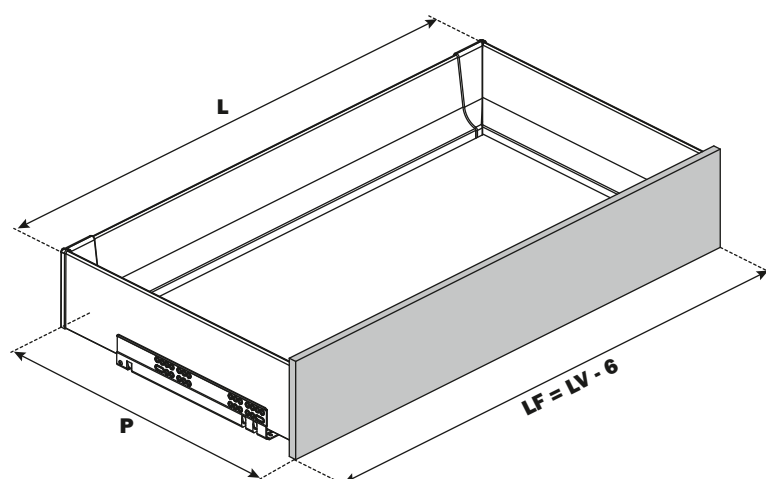


INTERNAL DIMENSIONS

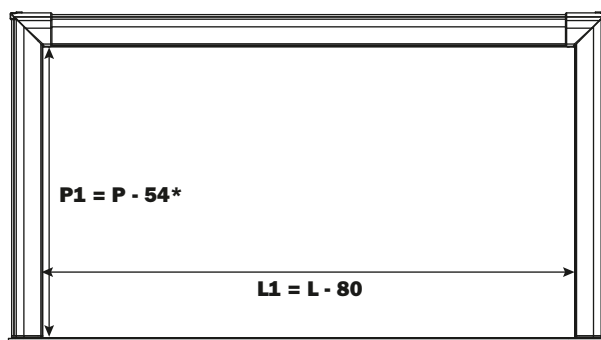

*** internal dimensions from the corners**

FRONTAL DRILLING

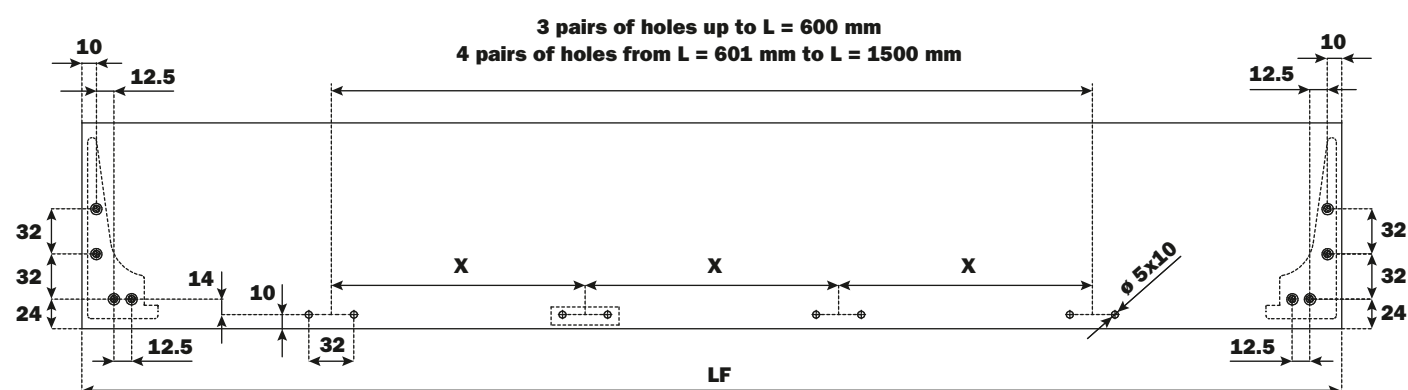


COMPONENTS

- 1. Joints for back profile
- 2. Back corners
- 3. Screws TPS DELTA PT 4x23 mm
- 3A. Screws TPS 3.5x13 mm Black
- 4. Back profile
- 5. Side profiles


Kit for the frontal fixing
(to be ordered separately)

- 6. Euroscrews TPSV 6.3x14 mm
- 7. Fixing caps
- 8. Aluminium profile
- 9. Connecting elements for the frontal
- 10. Screws TPS M 4x12 mm

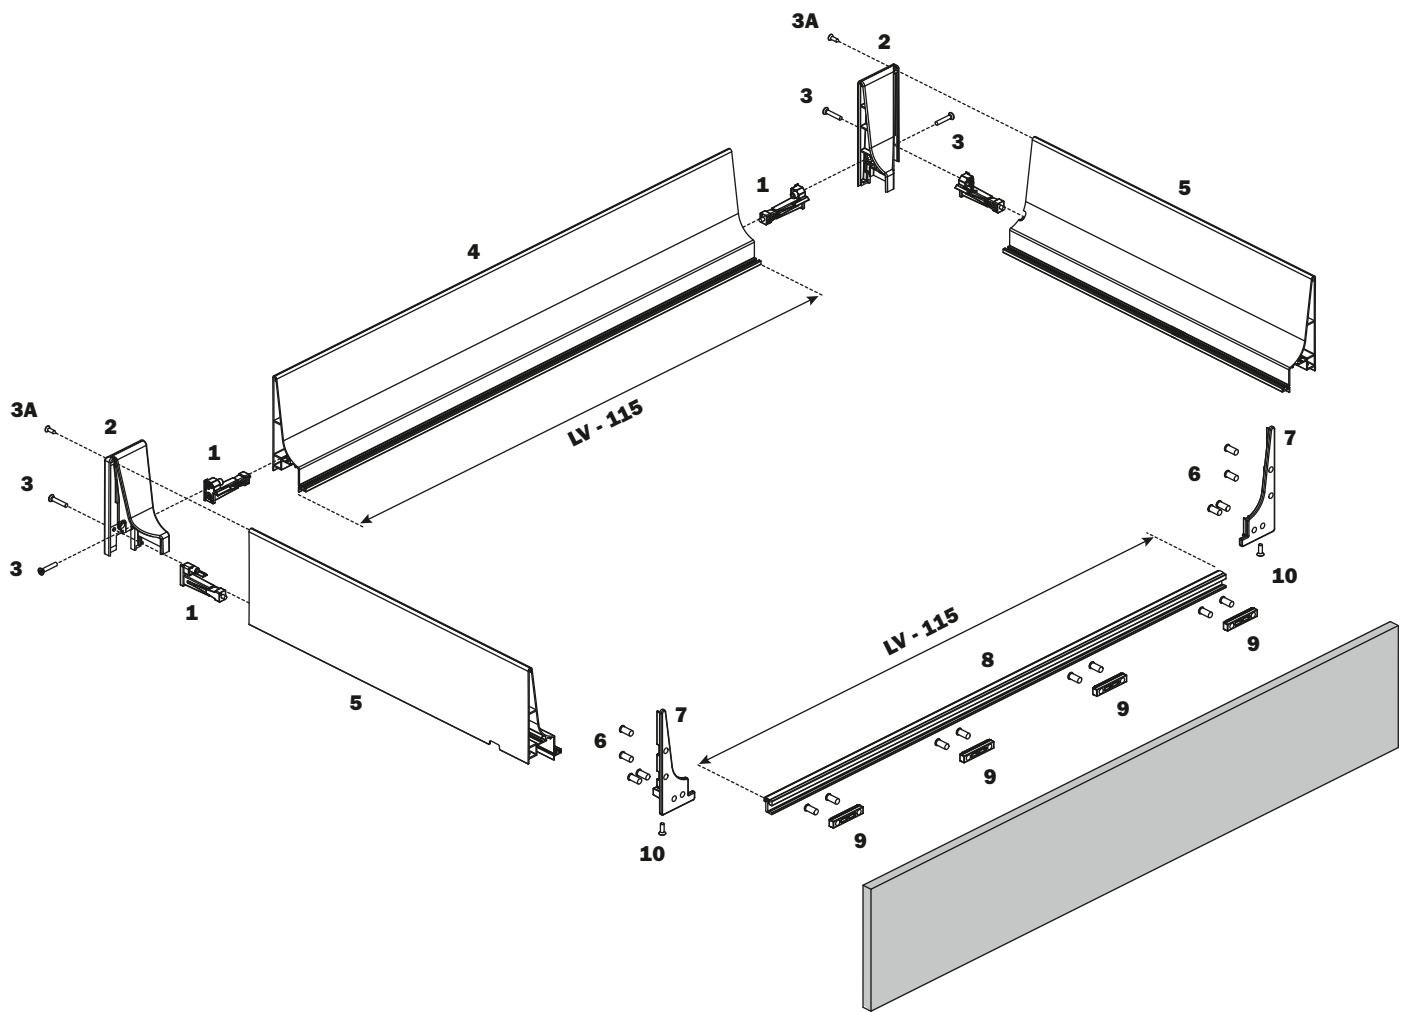


Runner length (LN) mm	Drawer width (L) mm	Frontal width (LF) mm	Internal width (L1) mm	Drawer depth (P) mm + wooden frontal 12 mm	Drawer depth (P) mm + wooden frontal 19 mm	Internal depth (P1) mm
400	LV - 15	LV - 6	L - 80	440	447	386
450				490	497	436
470				510	517	456


Excessories - modular drawer - 4-SIDED H 52

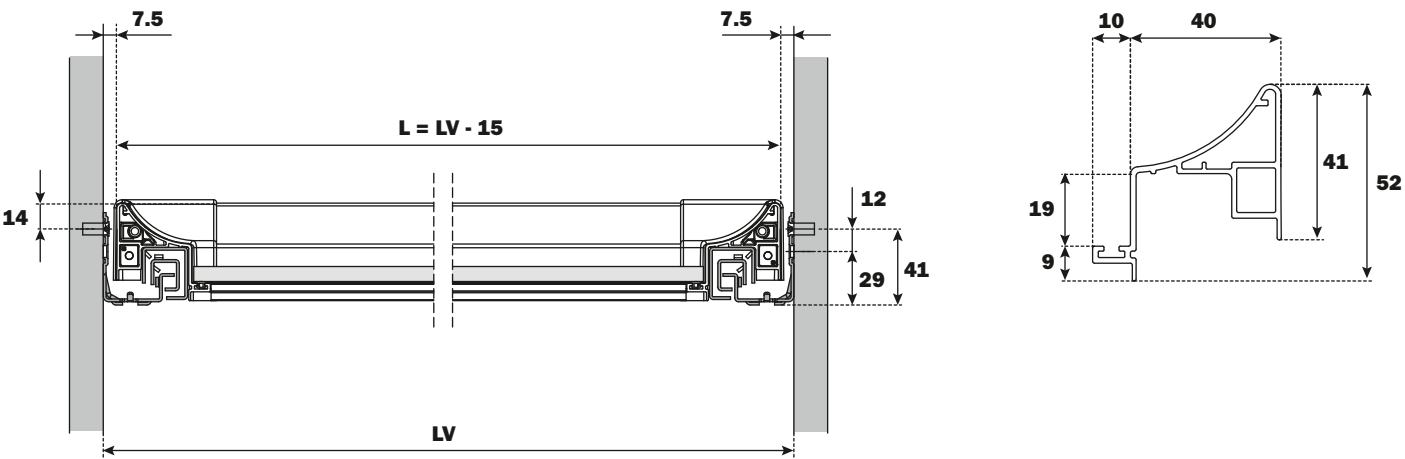

LV = cabinet width

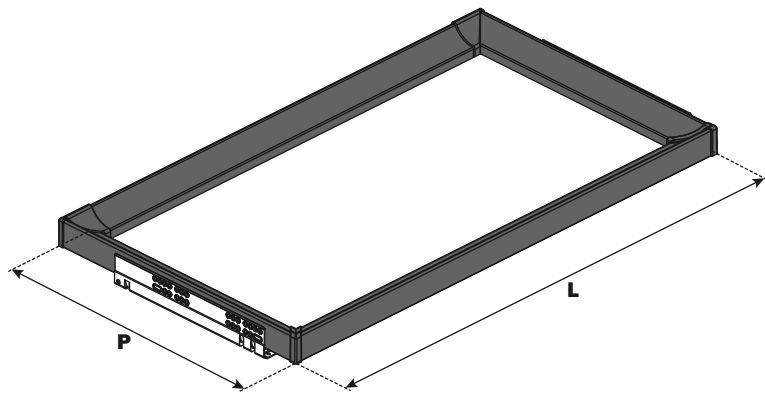


INTERNAL DIMENSIONS

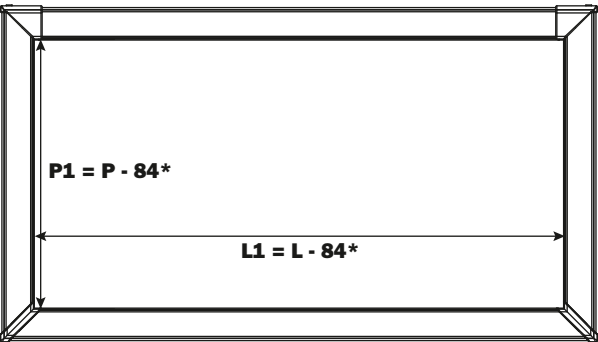

* internal dimensions from the corners


COMPONENTS

- 1. Joints for back profile
- 2. Back corners
- 3. Screws TPS DELTA PT 4x23 mm
- 4. Back profile
- 5. Side profiles
- 6. Joints for front profile
- 7. Front corners
- 8. Front profile

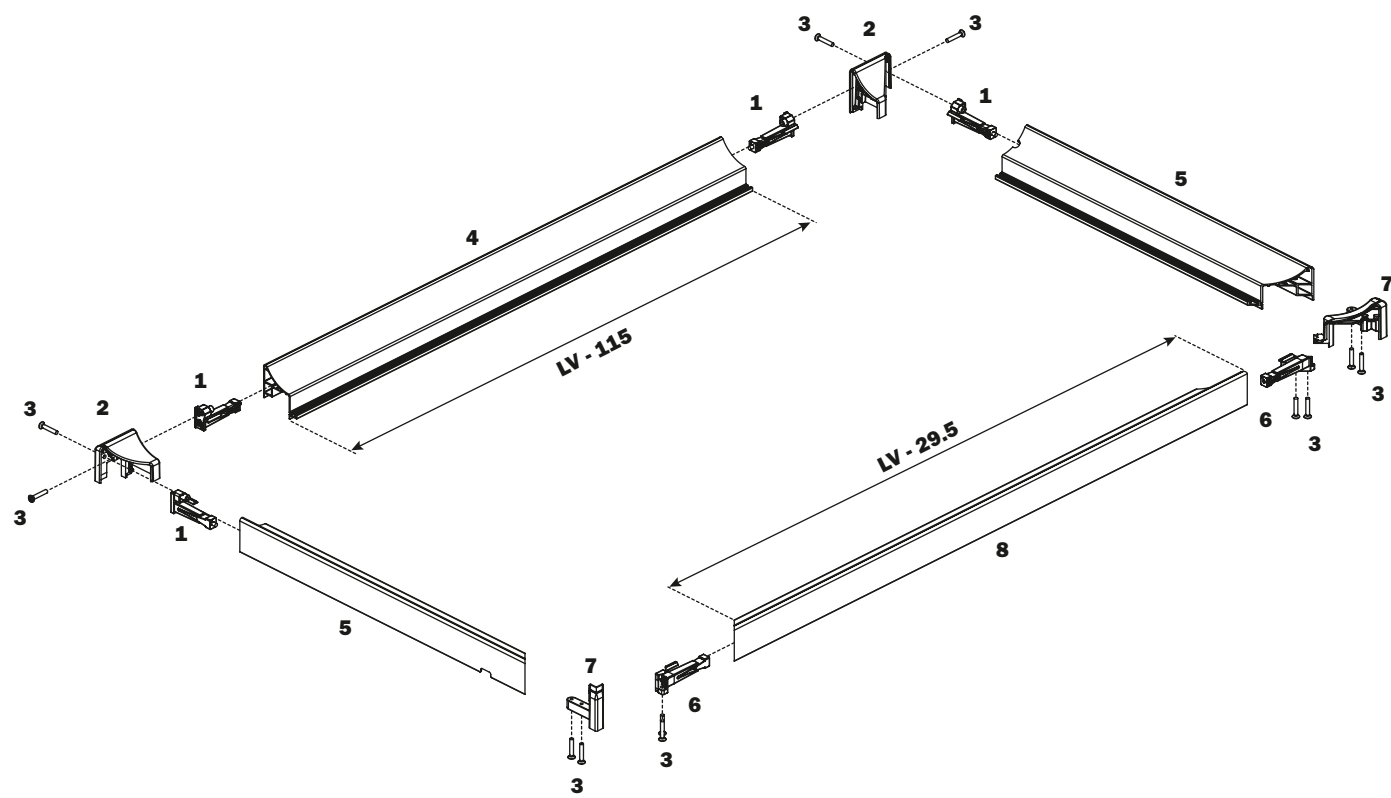


Runner length (LN) mm	Drawer width (L) mm	Internal width (L1) mm	Drawer depth (P) mm	Internal depth (P1) mm
400	LV - 15	L - 84	440	356
450			490	406
470			510	426


Excessories - modular drawer - 4-sided drawer H 78

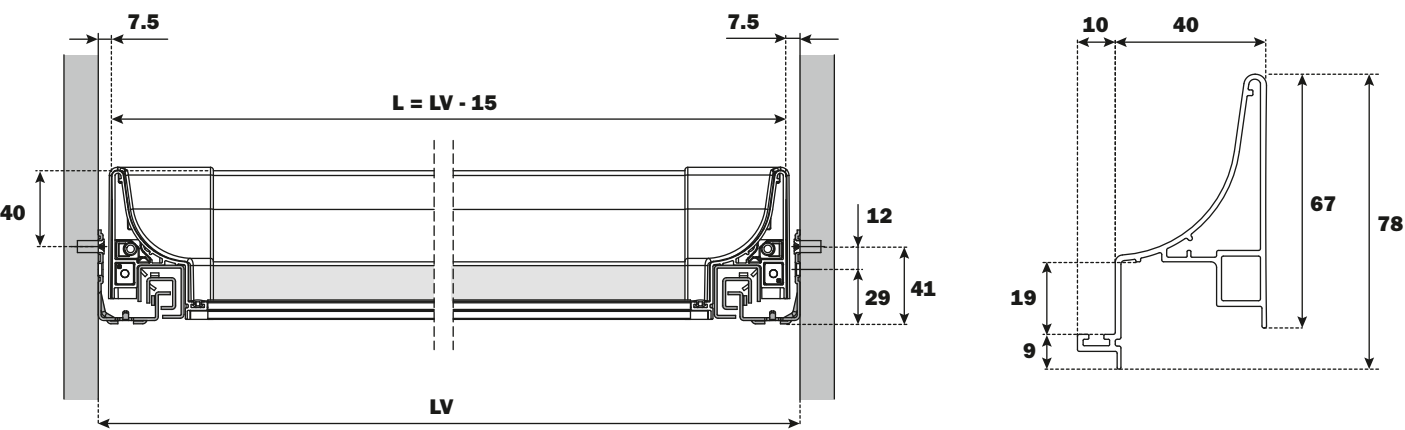

LV = cabinet width

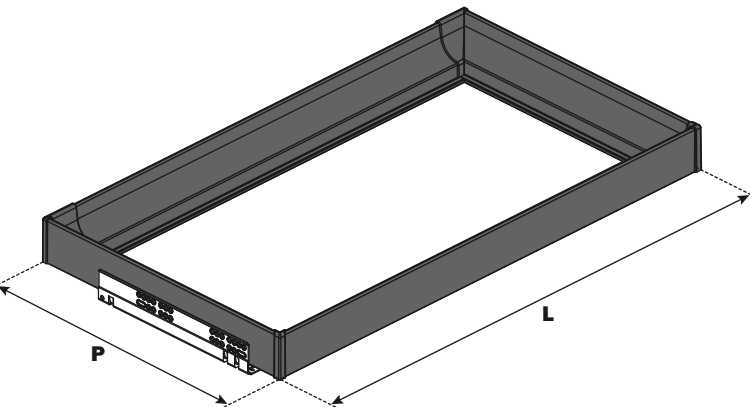


INTERNAL DIMENSIONS

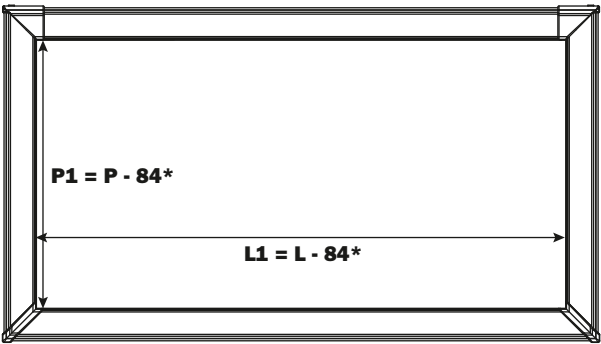

* internal dimensions from the corners


COMPONENTS

- 1. Joints for back profile
- 2. Back corners
- 3. Screws TPS DELTA PT 4x23 mm
- 4. Back profile
- 5. Side profiles
- 6. Joints for front profile
- 7. Front corners
- 8. Front profile

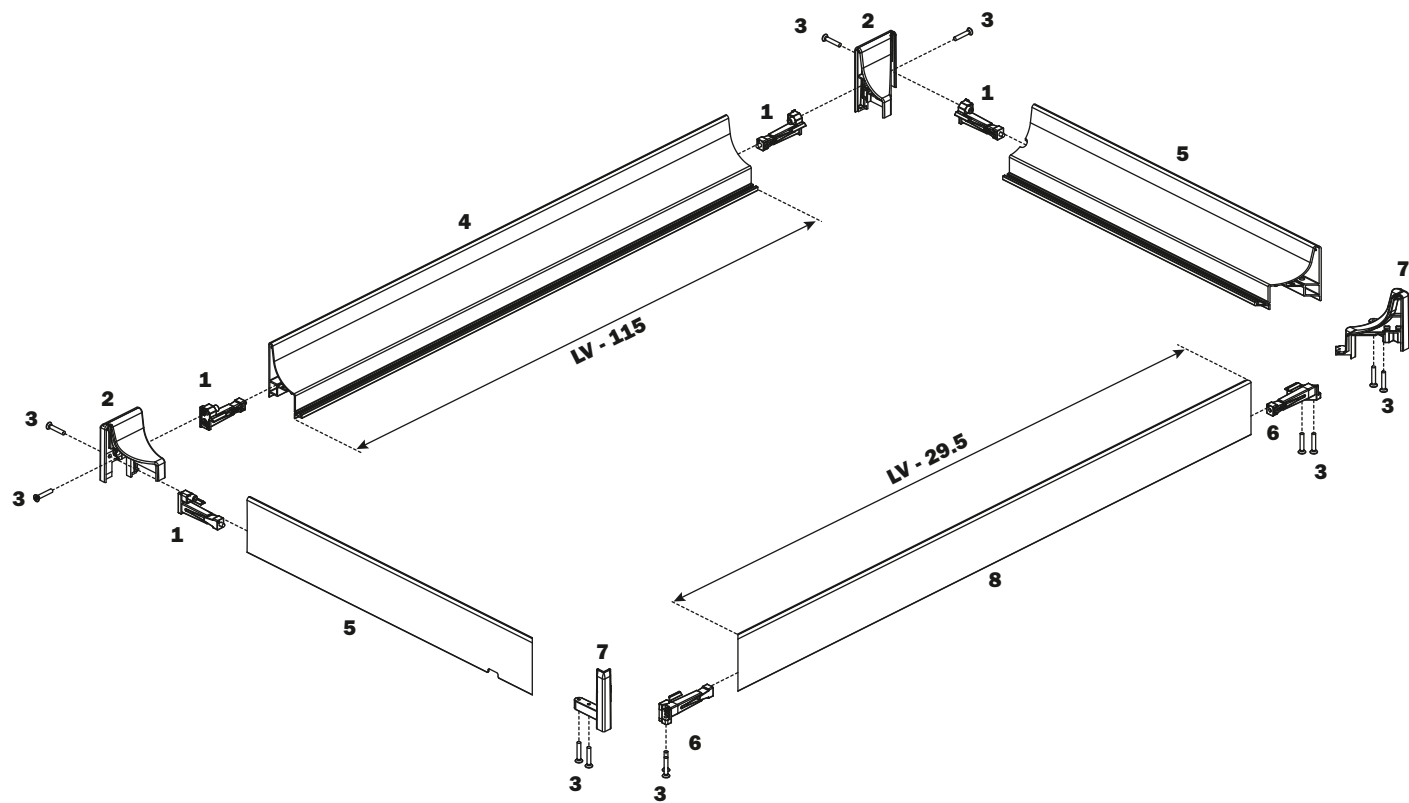


Runner length (LN) mm	Drawer width (L) mm	Internal width (L1) mm	Drawer depth (P) mm	Internal depth (P1) mm
400	LV - 15	L - 84	440	356
450			490	406
470			510	426


Excessories - modular drawer - 4-SIDED H 128

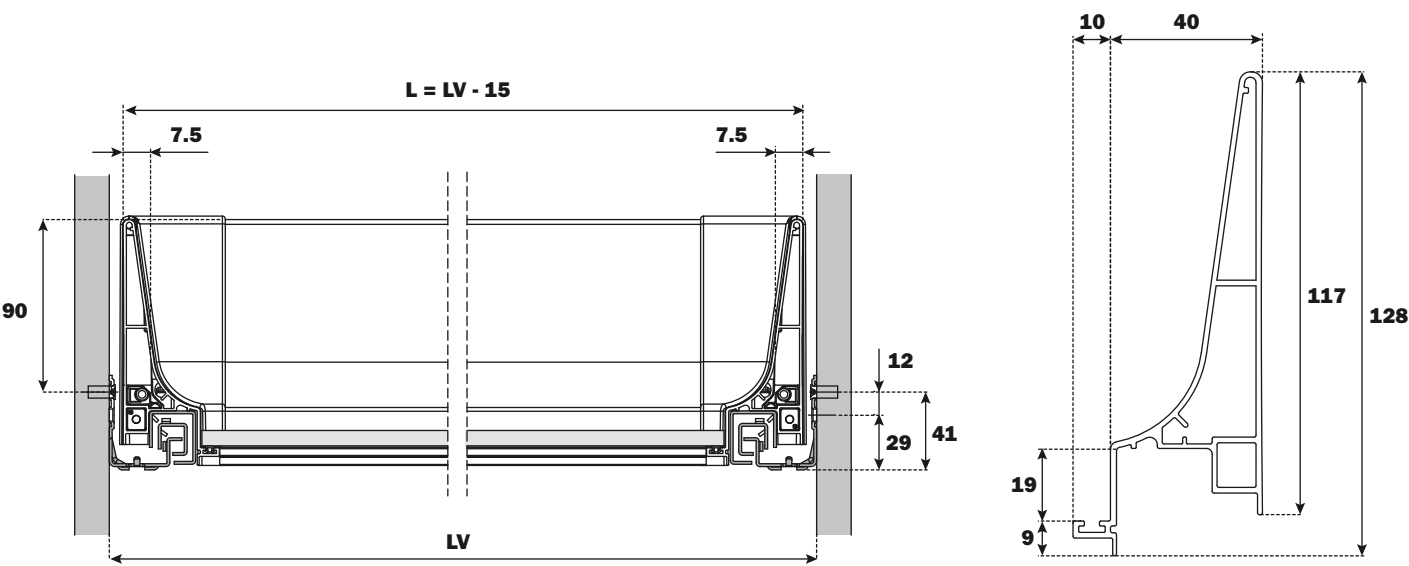

LV = cabinet width

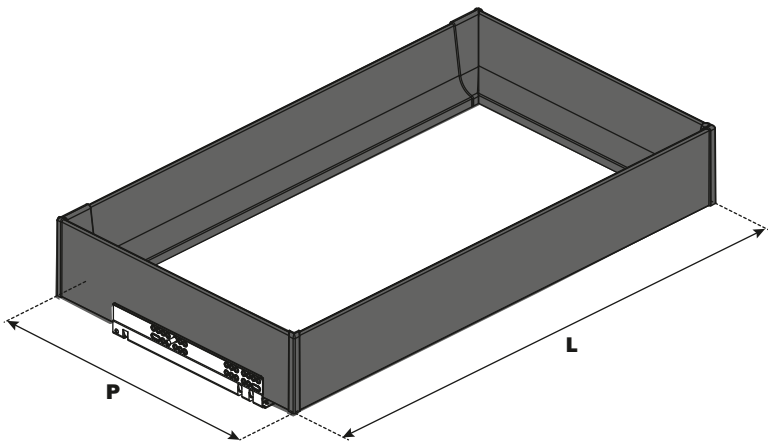


INTERNAL DIMENSIONS

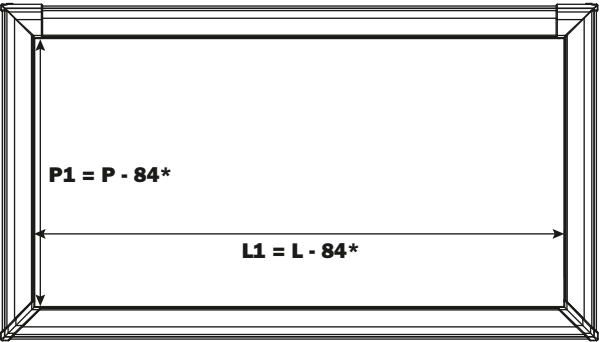

* internal dimensions from the corners

COMPONENTS

1. Joints for back profile
2. Back corners
3. Screws TPS DELTA PT 4x23 mm
- 3A. Screws TPS 3.5x13 mm Black
4. Back profile
5. Side profiles
6. Joints for front profile
7. Front corners
8. Front profile

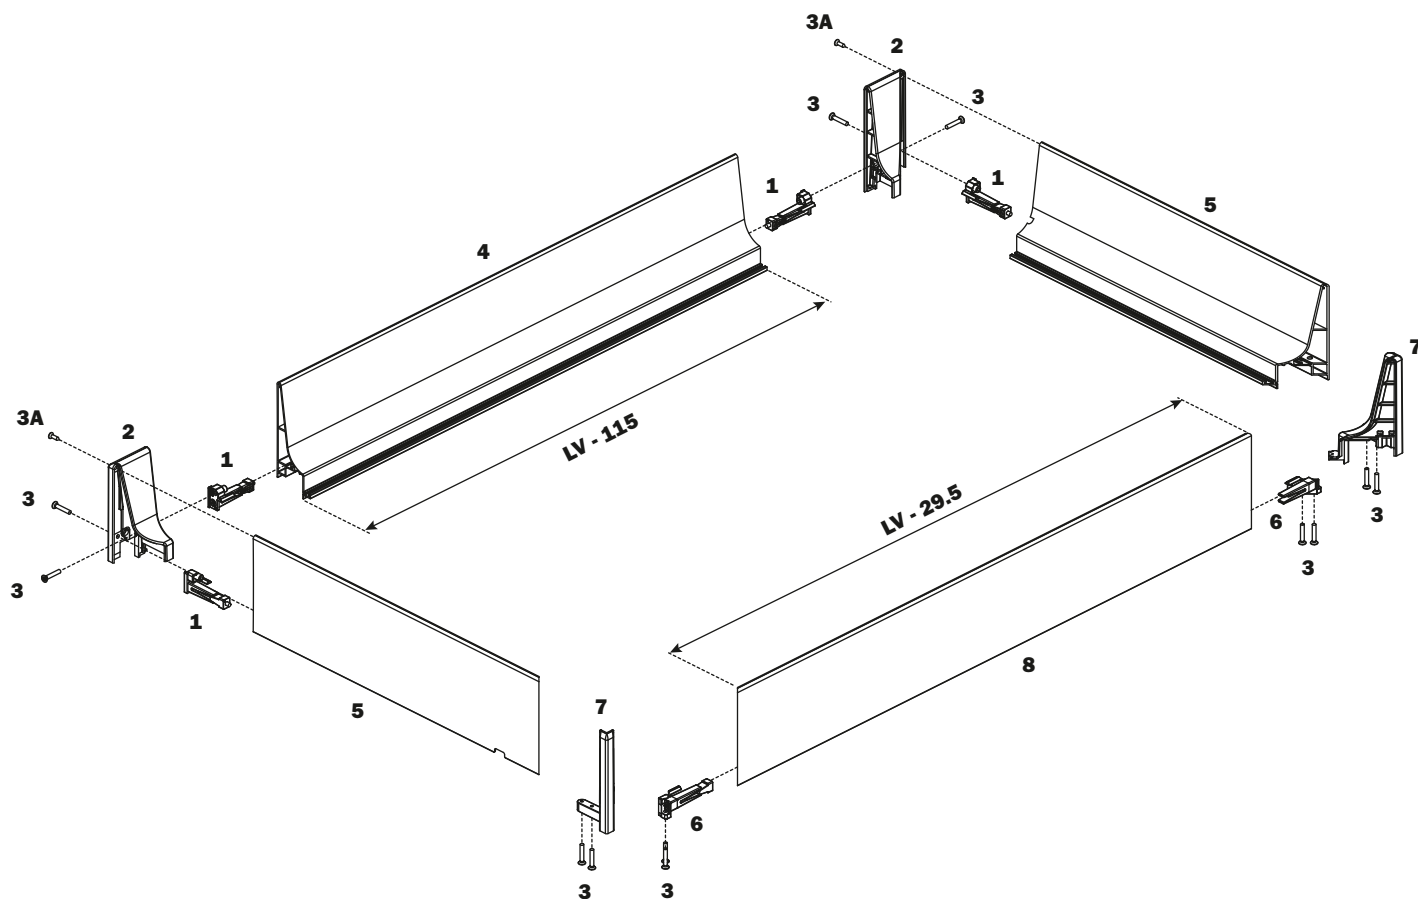

Runner length (LN) mm	Drawer width (L) mm	Internal width (L1) mm	Drawer depth (P) mm	Internal depth (P1) mm
400	LV - 15	L - 84	440	356
450			490	406
470			510	426

Notes

[illegible]

Notes

[illegible]

ARTURO SALICE S.p.A.

VIA PROVINCIALE NOVEDRATESE, 10
22060 NOVEDRATE (COMO) ITALIA
TEL. 031 790424 - FAX 031 791508
info.salice@salice.com - www.salice.com

BORTOLUZZI SISTEMI S.p.A.

VIA CADUTI 14 SETTEMBRE 1944, 45
32100 BELLUNO ITALIA
TEL. 0437 930866 - FAX 0437 931442
info@bortoluzzi.com - www.bortoluzzi.com

DEUTSCHE SALICE GMBH

RUDOLF DIESEL STR. 10
74382 NECKARWESTHEIM
TEL. 07133 9807-0
FAX. 07133 9807-16
info.salice@deutschesalice.de
www.salice.com

DEUTSCHE SALICE GMBH

VERKAUFSBÜRO NORD
RINGSTRASSE 36/A30 CENTER
32584 LÖHNE
TEL. 05731 15608-0
FAX. 05731 15608-10
vknord@deutschesalice.de
www.salice.com

SALICE UK LTD.

KINGFISHER WAY
HINCHINGBROOKE BUSINESS PARK
HUNTINGDON CAMBS PE 29 6FN
TEL. 01480 413831
FAX. 01480 451489
info.salice@saliceuk.co.uk
www.salice.com

SALICE FRANCE S.A.R.L.

285 RUE DE GOA ZAC LES 3 MOULINS
06600 ANTIBES
TEL. 0493 330069
FAX. 0493 330141
info.salice@salicefrance.com
www.salice.com

SALICE ESPAÑA, S.L.U.

C/ AIGUAFREDA 4, P.I. AMETLLA PARK
08480 L'AMETLLA DEL VALLÈS (BARCELONA)
TEL. 00351 938 46 88 61
info.salice@saliceespana.es
www.salice.com

SALICE PORTUGAL UNIP. LDA

SHOWROOM:

TV SÁ E MELO 161 FA
4470-116 MAIA - PORTO
TEL: 00351 224 154 221
Info@saliceportugal.pt
www.salice.com

ARMAZÉM:

VIA ROTA DOS MÓVEIS I 399
4585-325 GANDRA

SALICE CHINA (SHANGHAI) CO. LTD.

1st FLOOR, B1 BLDG 928 MINGZHU ROAD
XUJING, QINGPU DISTRICT
SHANGHAI 201702 - CHINA
TEL. 021 3988 9880
FAX. 021 3988 9882
info.salice@salicechina.com
www.salicechina.com

SALICE INDIA PVT. LTD.

1001 & 1002, 10TH FLOOR,
CENTRUM, PLOT NO. C-3,
OPP. WAGLE PRABHAG SAMITI OFFICE,
MIDC AREA, WAGLE INDUSTRIAL ESTATE,
THANE - 400604, MAHARASHTRA
TEL. 022 20812050
info@saliceindia.com
www.salice.com

SALICE CANADA INC.

3500 RIDGEWAY DRIVE,
UNIT#1
MISSISSAUGA, ONTARIO, L5L 0B4
TEL. 905 820 8787
FAX. 905 820 7226
info.salice@salicecanada.com
www.salicecanada.com

SALICE AMERICA INC.

2123 CROWN CENTRE DRIVE
CHARLOTTE NC. 28227
TEL. 704 841 7810
FAX. 704 841 7808
info.salice@saliceamerica.com
www.saliceamerica.com



Digital contents

