


**Universal hinges**  
for doors with a min. thickness of 8 mm

Hinges for doors with a minimum thickness of 8 mm made with special materials.

The number of hinges required depends on the size, weight and material of the door. The distance between the top and bottom must be greater than the width of the door. Additional hinges should be added if doors are near the border line of size or weight chart. Use the diagram below to determine number of hinges needed.

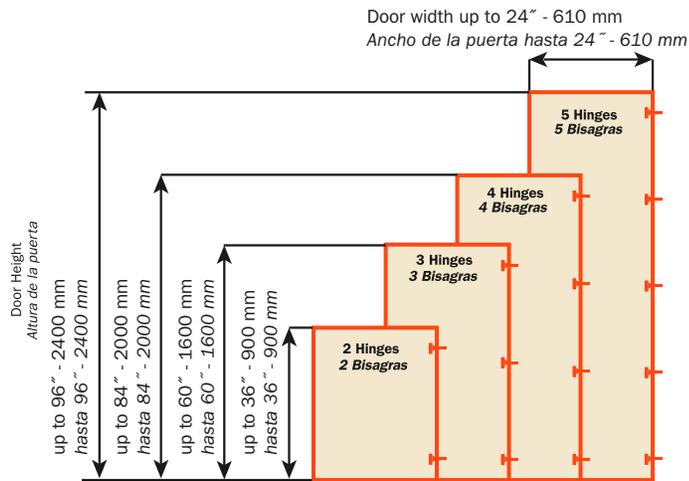

**Technical features**

**Disclaimer**

**Salice Universal (CBY) hinges have been developed for use on doors with a min. thickness of 8 mm. The hinges must be fixed, if possible, with the screws included in the packaging. For special materials, we suggest to contact our Technical Assistance Service. Salice will accept no responsibility for any problems associated with the use of screws different from those included or for any consequences of the incorrect method of installation.**



**Adjustments**

Parallel side adjustment from -1.5 mm to +4.5 mm.  
Height adjustment  $\pm 2$  mm.  
Depth adjustment with Series 200 mounting plates +2.8 mm.  
Depth adjustment with Domi snap-on mounting plates from -0.5 mm to +2.8 mm.

N.B. : Use POZIDRIVE No. 2 screwdrivers for all screws.

**Mounting plates**

Snap-on assembly on Domi mounting plates.  
Symmetrical and asymmetrical bright nickel plated steel or die-cast Series 200 mounting plates.  
Positioning with pre-determined stop on traditional Series 200 mounting plates.

## 110° opening





### Technical information

**Hinges for doors with a minimum thickness of 8 mm made with special materials.**

Attachment inset distance on the door (K): from 0 to 22 mm. 110° opening. To limit the opening of the hinge, see page 17 "Accessories".

Compatible with all traditional Series 200 mounting plates and with all Domi snap-on mounting plates.

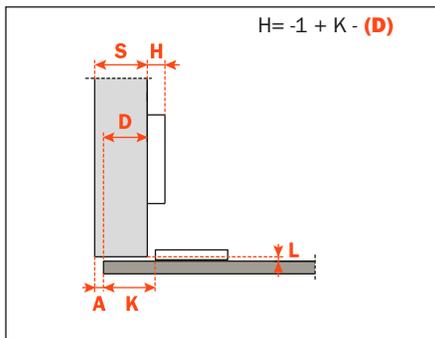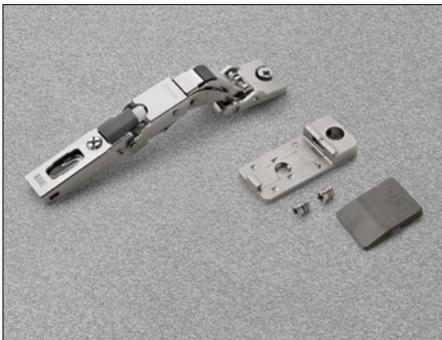



**CBY2AE9** = with integrated soft-close

**CBY2AC9** = self-close

**CBYQAC9** = with Push opening



#### Packaging

Boxes 150 pcs. • Pallets 3.600 pcs

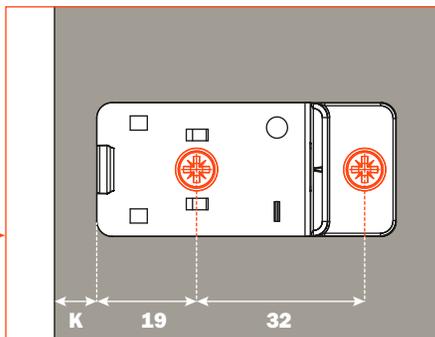
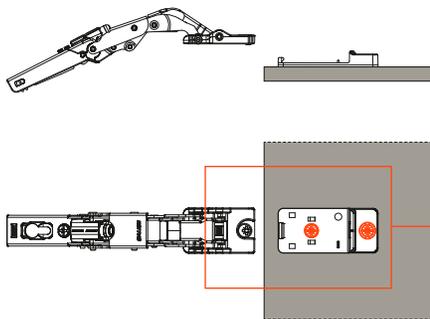


**1) The hinge plate must be attached to the door with the included Euro screws.**

Use a #2 Pozzi screwdriver.

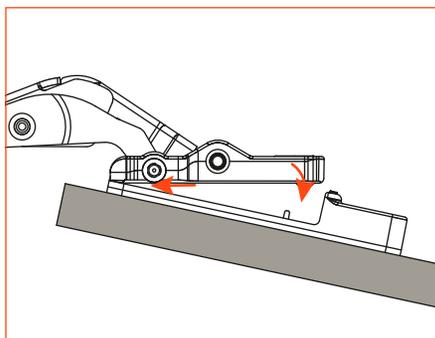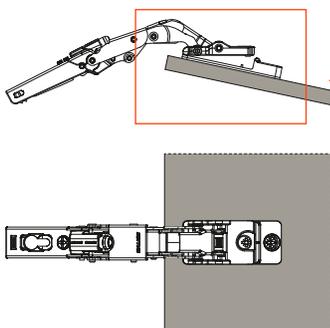

**2) Locate the hinge onto the plate when it is attached to the door.**

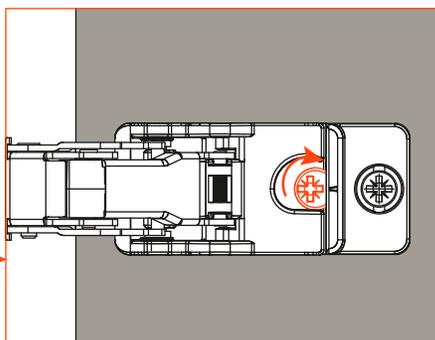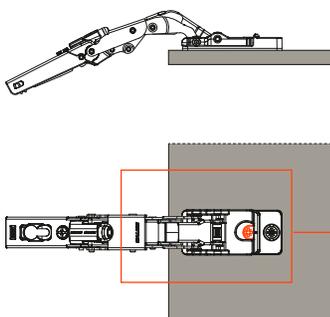

**3) Rotate the locking cam.**  
Use a #2 Pozzi screwdriver.