
4-Sided Internal Drawer - H 101 mm




Assembly features

Cutting of the horizontal profile

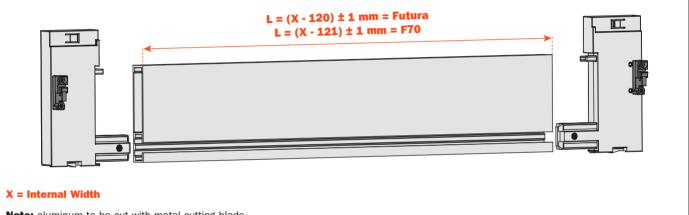


Note: aluminum to be cut with metal cutting blade Screws ø 3.5×20 mm included. Can use #6 x 3/4" screws as a replacement


Insert the front panel adapters into the front panel and tighten the locking screws. Frontal fixings are already premounted.

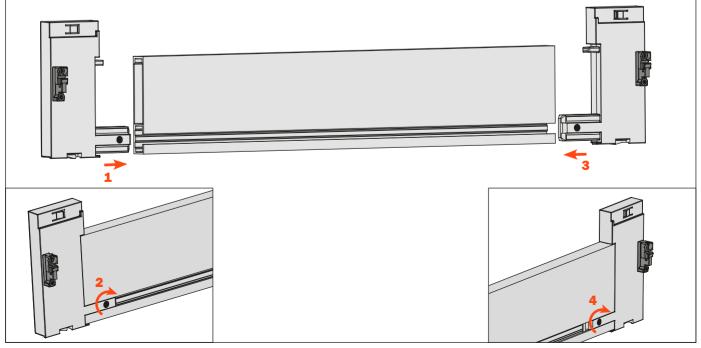

Fix the front panel to the drawer

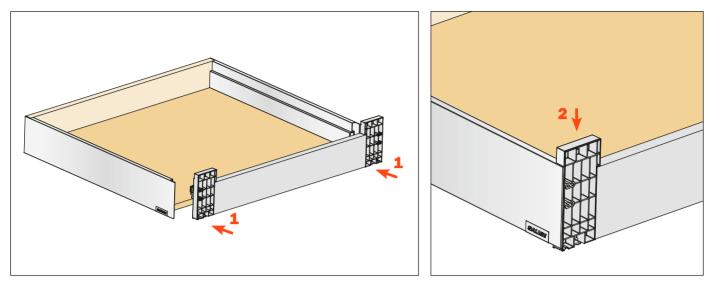

Fix the covers

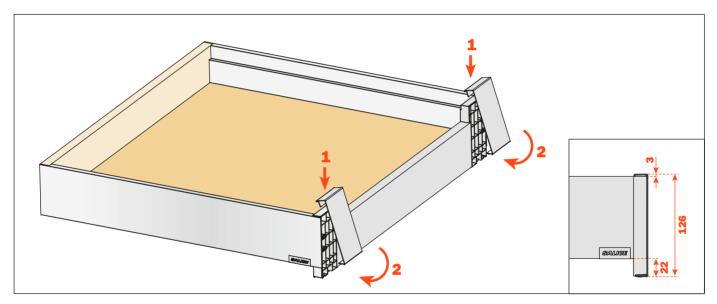

To correct possible cutting errors of the front profile, loosen and retighten the indicated screws

