



Space required to accommodate the system and position of the M SERIES INSTITUTIONAL HINGES

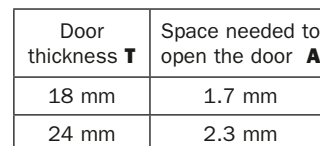


The corner alignment magnet kit for **BASE** version is suggested for doors ≥ 1200 in height to allow an optimal door closing.




Folder • BASE - Corner alignment magnet kit

Cabinet top


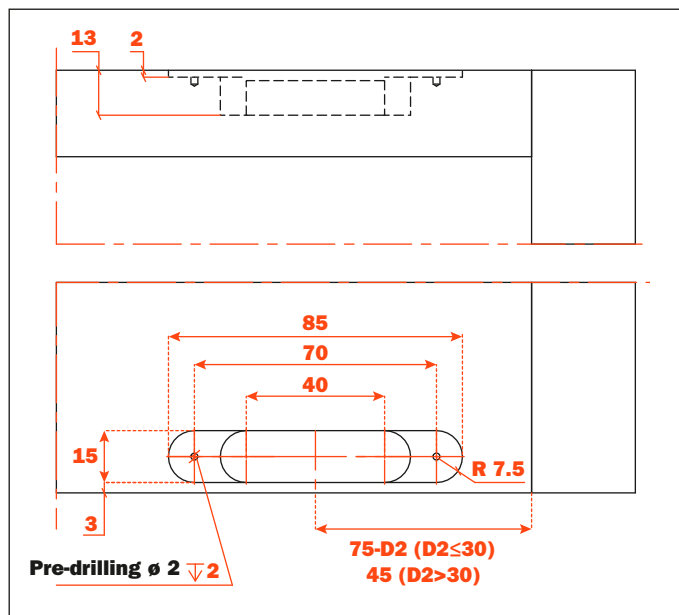


Corner alignment magnet kit assembly.

Insert the magnets and lock the plate with the screws.

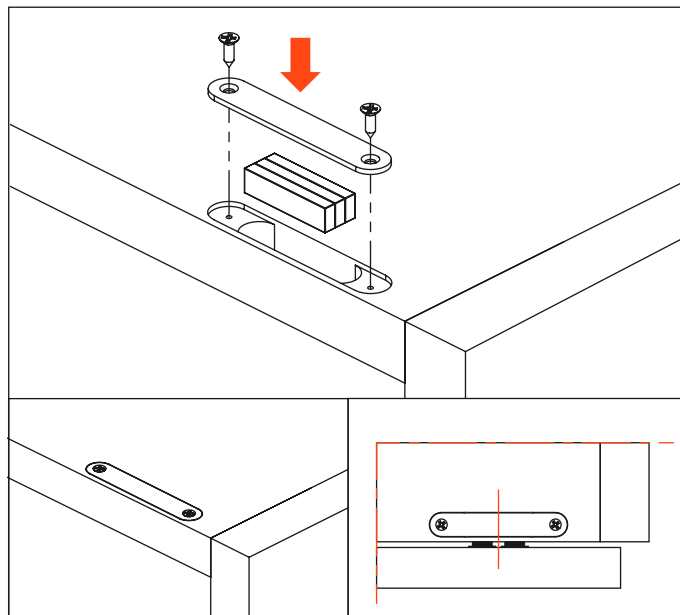





Fix the magnetic holders on wood door

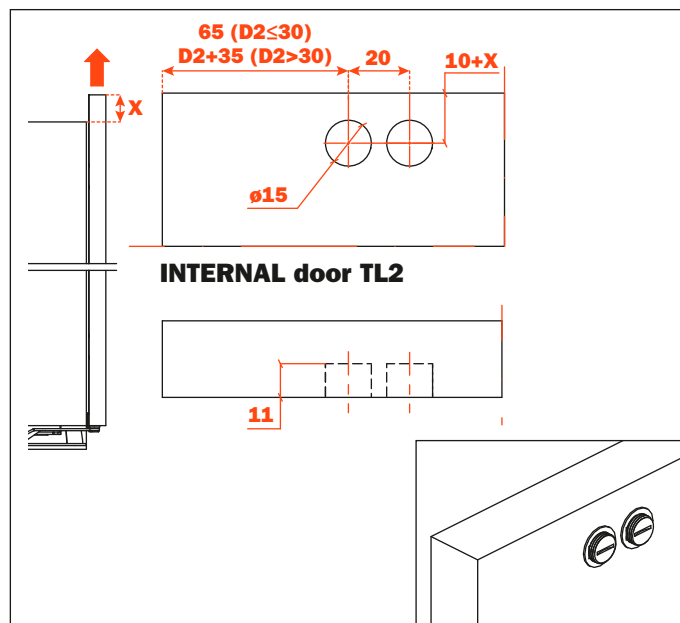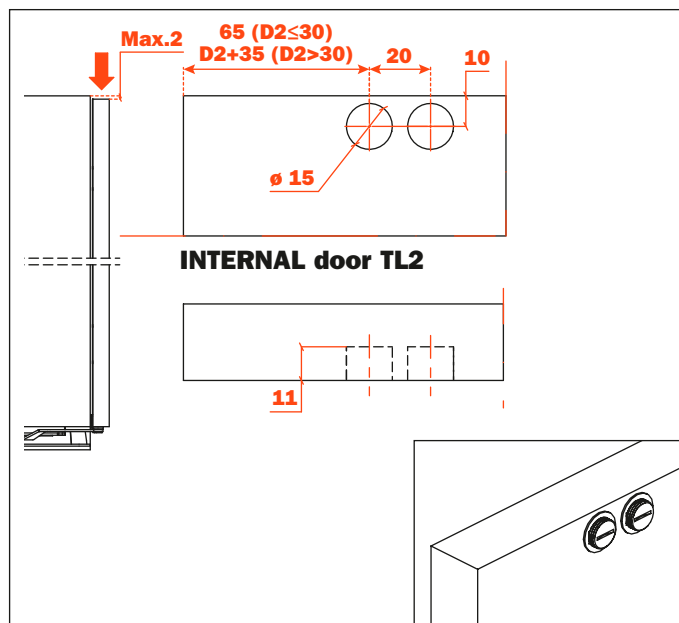

Folder • BASE

Assembly on wood doors with M SERIES INSTITUTIONAL HINGES

Drawing shows left-hand assembly.
For right-hand, invert the assembly instructions.

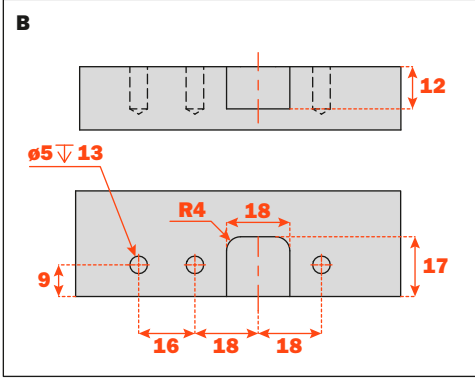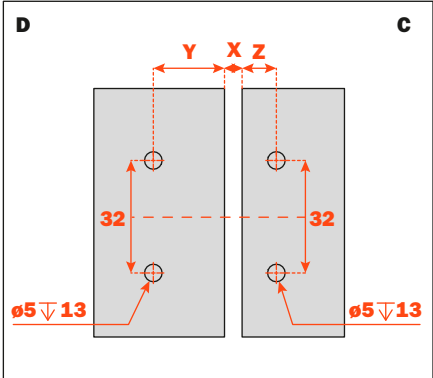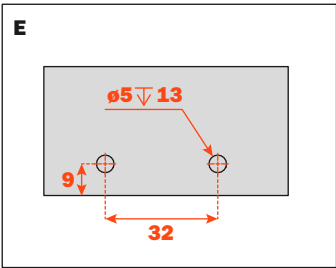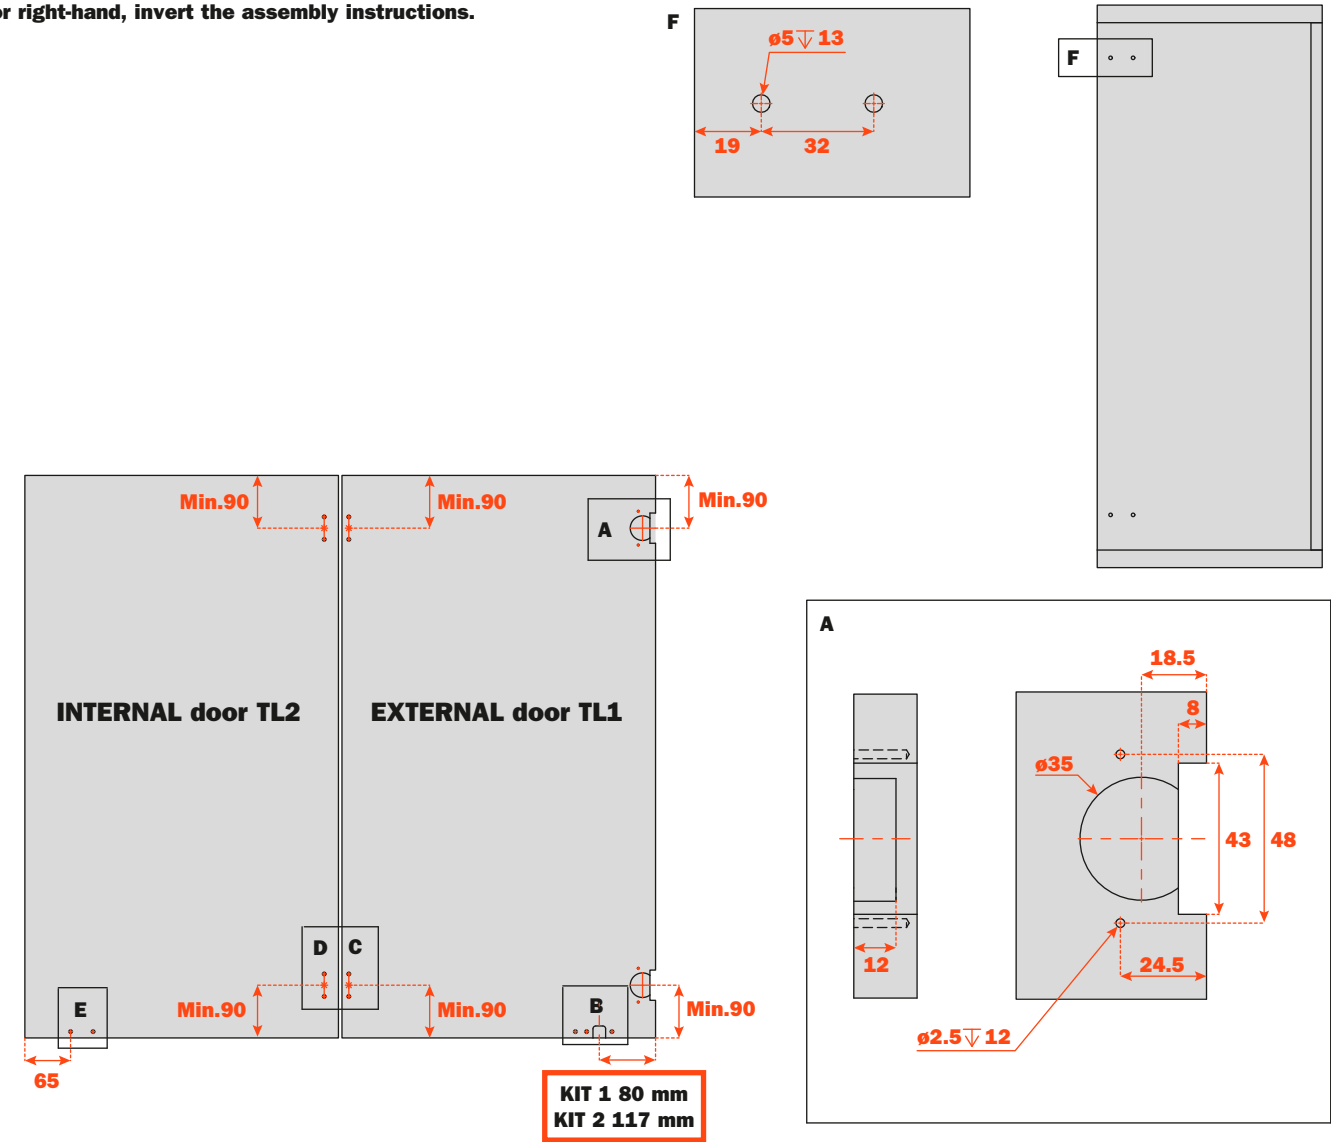


X (mm)	Y (mm)	Z (mm)
3	20.75	10.25
4	20.25	9.75
5	19.75	9.25

Folder • M SERIES INSTITUTIONAL HINGES


Adjustments

Compensating side adjustment from -3 to +3 mm.

With mounting plates H = 0 the negative side adjustment cannot be used.

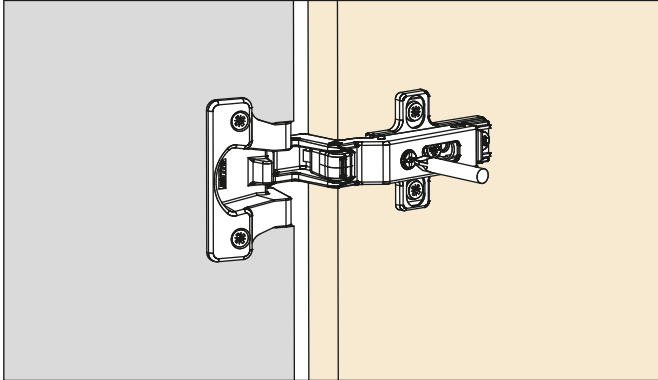

Height adjustment ± 2 mm

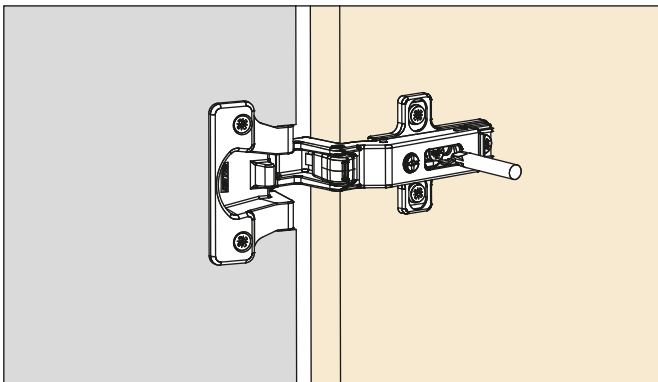

Depth adjustment from -0.5 to +2.8 mm

