

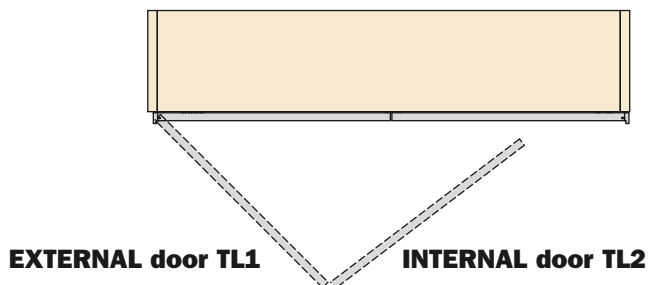


Folder • CONECTA HINGES

Space required to accommodate the system and position of the CONECTA HINGES

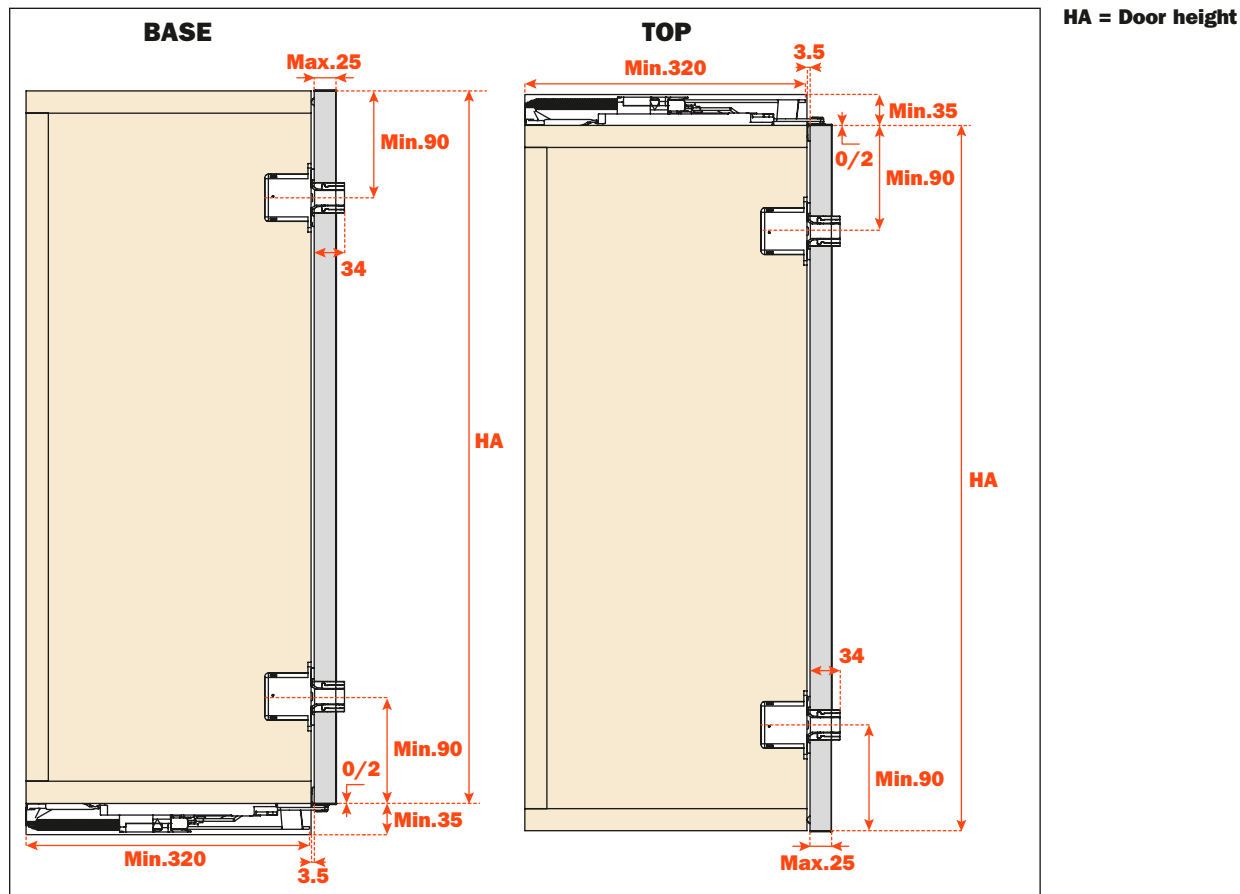


Reveal required for the opening of the INTERNAL door TL2 for wood door

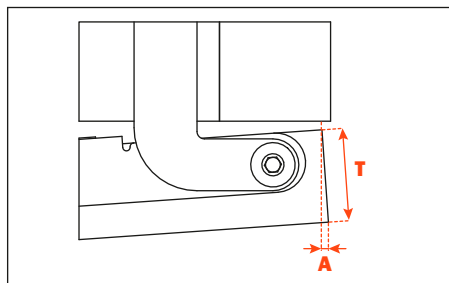


Door thickness T	Space needed to open the door A
18 mm	1.7 mm
25 mm	2.3 mm

Reveal required for the opening of the EXTERNAL door TL1 for wood door with profile YE79KITE710_A and for aluminum-framed glass door with profile YE79KITE700_A

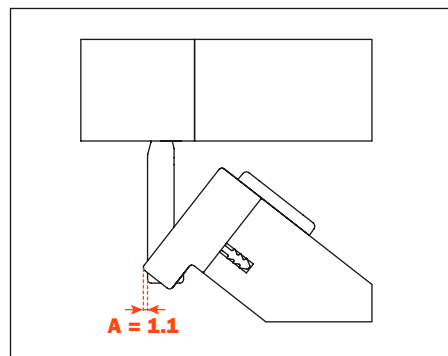

Reveal required for the opening of the INTERNAL door TL2 for wood door with profile YE79KITE710_A and for aluminum-framed glass door with profile YE79KITE700_A

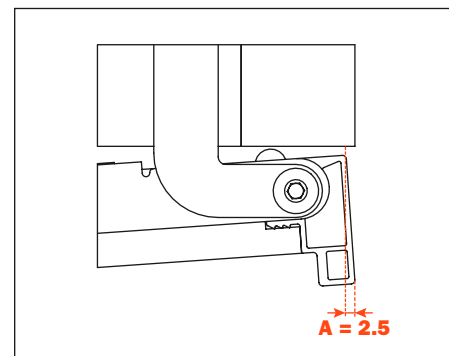

Assembly on cabinet side with CONECTA HINGES

Holder DQG5B




- For single door
- For double doors and 25-mm side thickness


To be screw-fixed to the cabinet side:

- For single door with Euro screws, drilling $\varnothing 5 \times 12.5$ mm
- For double doors with $\varnothing 5$ mm interscrews
- Fixing screws and cover caps included in packaging

- Door overlay on hinged side **D1 = 10 mm**

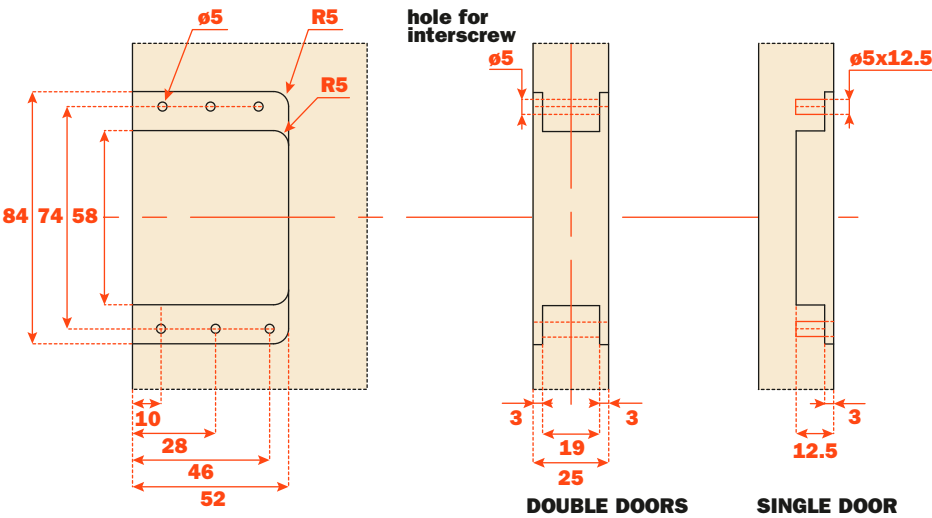

Holder DQG3B

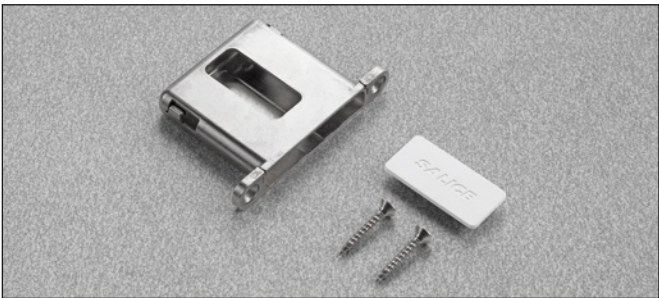


- For single door
- For double doors and 30-mm side thickness

To be screw-fixed to the cabinet side:

- For single door and double doors with $\varnothing 4 \times 25$ mm screws
- Fixing screws and cover caps included in packaging

- Door overlay on hinged side **D1 = see chart**

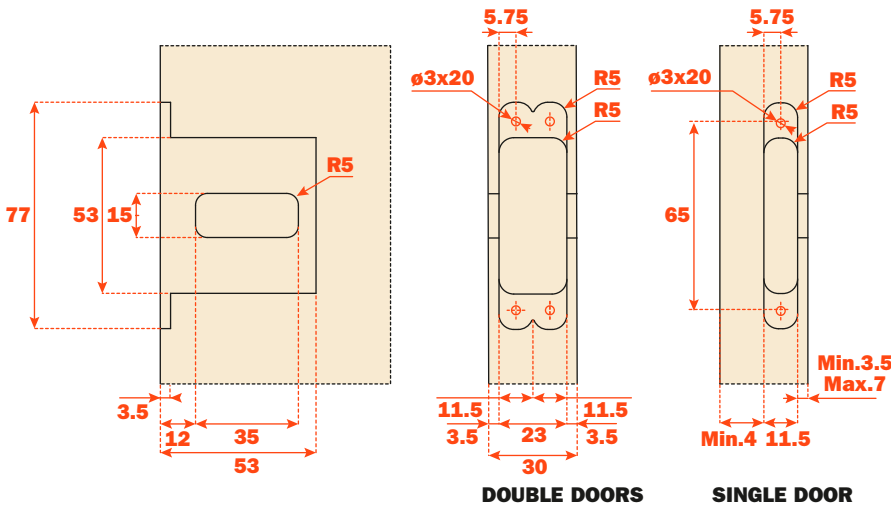

Overlay D1 with single door




Drillings	Overlay D1	Side thickness Min.
3.5 mm	12.5 mm	19 mm
4.5 mm	13.5 mm	20 mm
5.5 mm	14.5 mm	21 mm
6.5 mm	15.5 mm	22 mm
7 mm Max.	16 mm	22.5 mm

Folder • TOP



Assembly on wood doors without profile YE79KITE710_A with CONECTA HINGES

Drawing shows left-hand assembly.



For right-hand, invert the assembly instructions.

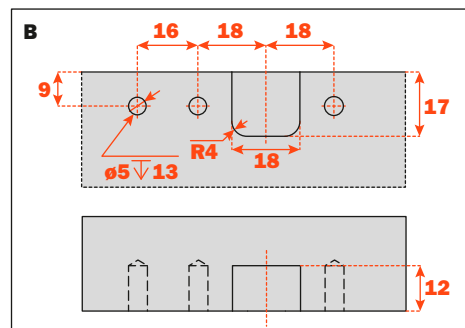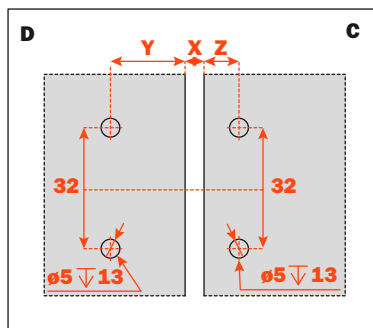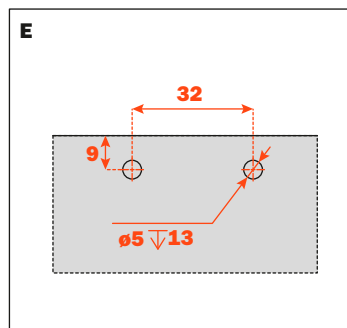




X (mm)	Y (mm)	Z (mm)
3	20.75	10.25
4	20.25	9.75
5	19.75	9.25

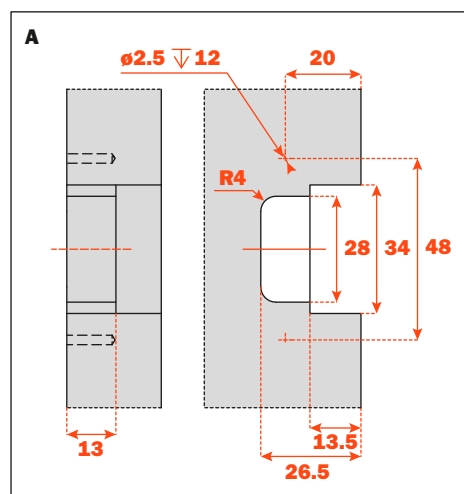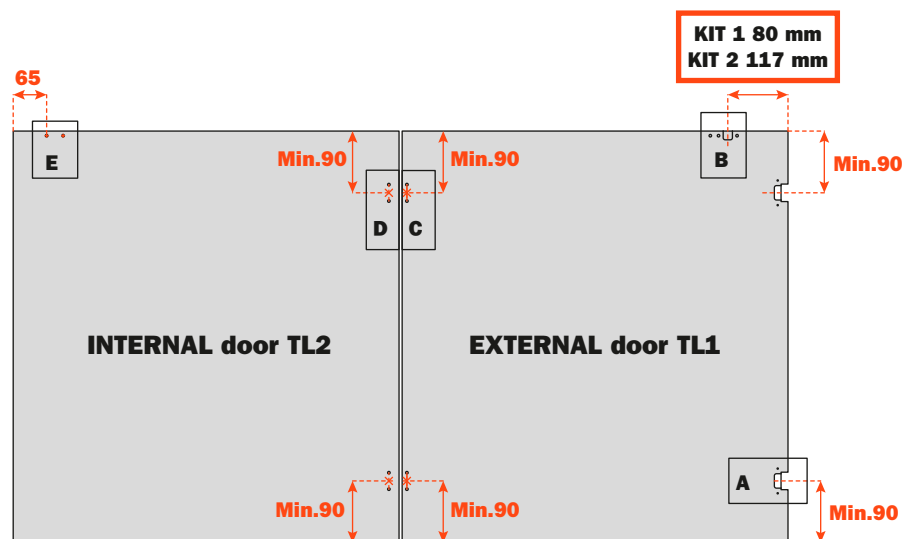

**Drawing shows left-hand assembly.
For right-hand, invert the assembly instructions.**

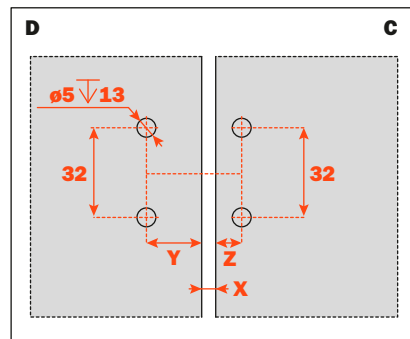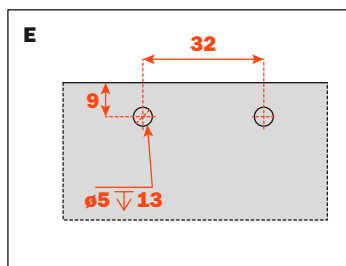

X (mm)	Y (mm)	Z (mm)
3	20.75	10.25
4	20.25	9.75
5	19.75	9.25

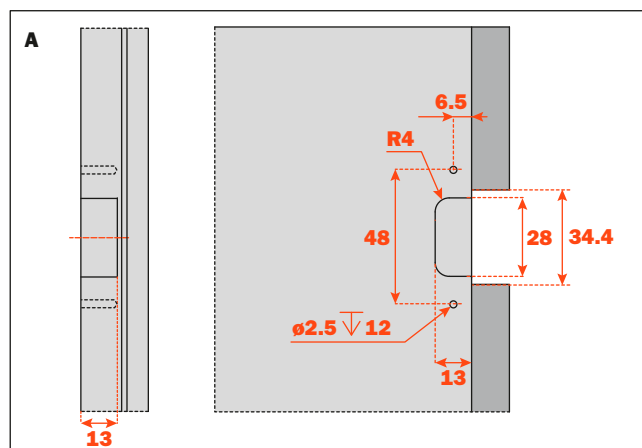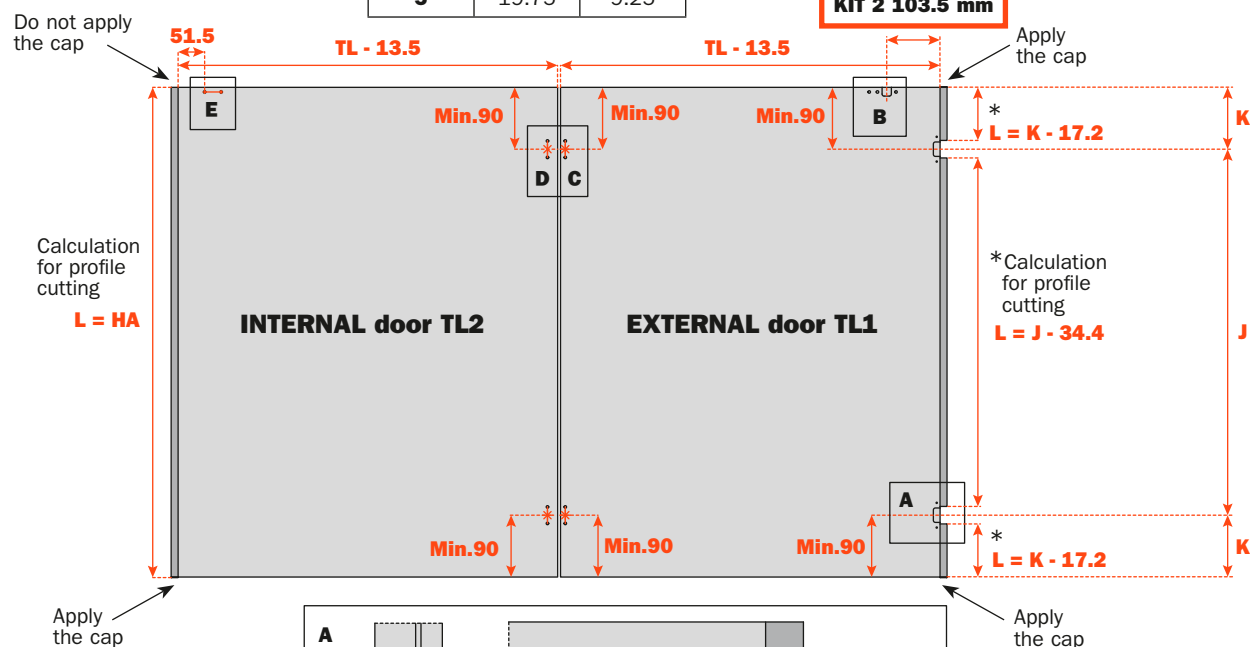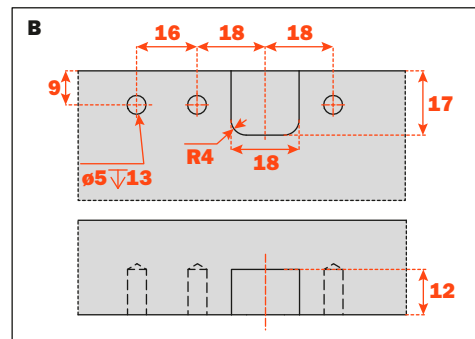







Folder • TOP

Assembly on aluminum-framed INTERNAL door (TL2) with profile YE79KITE700_A with CONECTA HINGES


Use the M4 metric bushels provided in the hardware kit to fix the center hinges and the folding arm (as shown in C2-C2 and D2-D2 sections).

Drawing shows left-hand assembly.


**Drawing shows left-hand assembly.
For right-hand, invert the assembly instructions.**

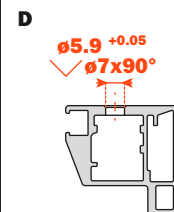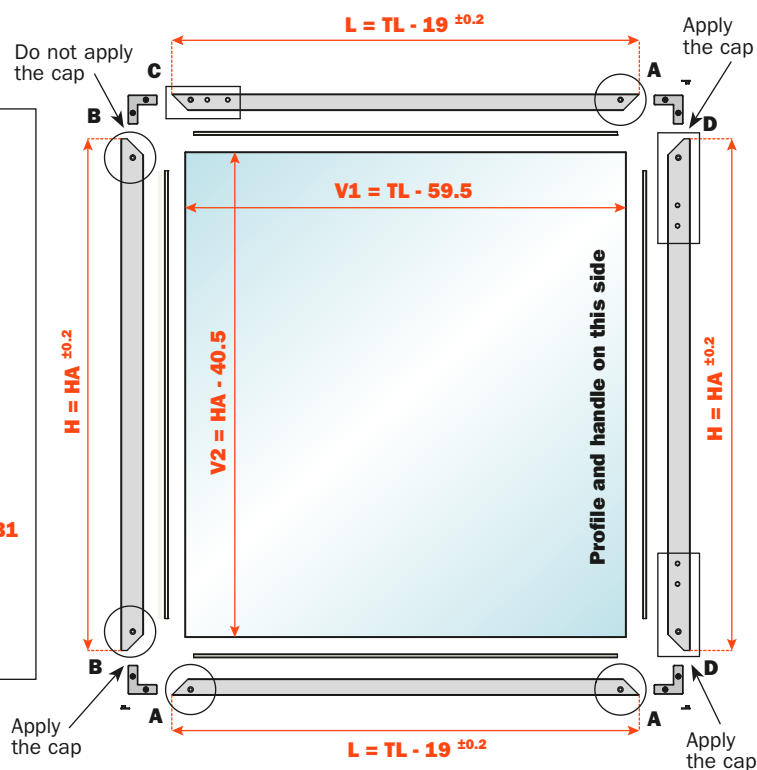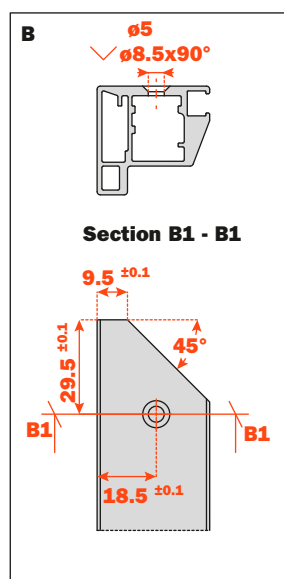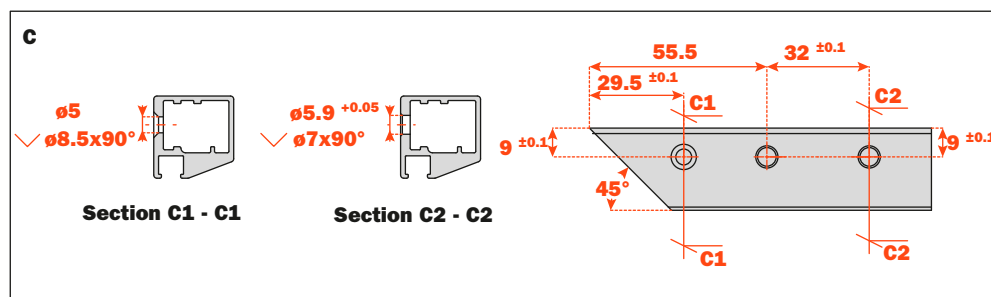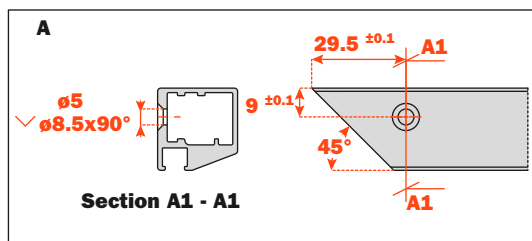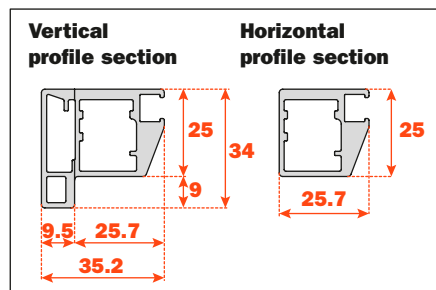


Section D2 - D2

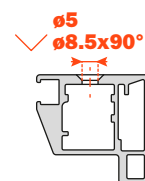

Section D1 - D1

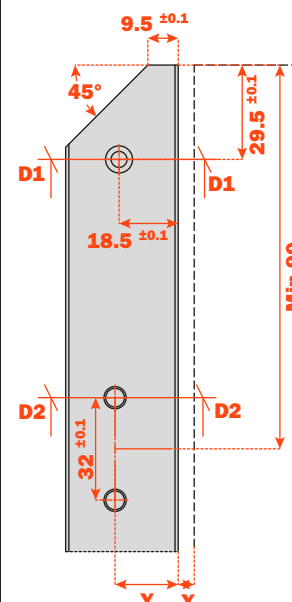

Profile with handle






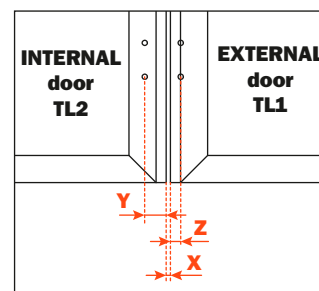


X (mm)	Y (mm)	Z (mm)
3	20.75	10.25
4	20.25	9.75
5	19.75	9.25

Assembly on aluminum-framed EXTERNAL door (TL1) with profile YE79KITE700_A with CONECTA HINGES

Use the M4 metric bushels provided in the hardware kit to fix the side hinges, the center hinges and the folding arm (as shown in B2-B2, C2-C2 and D2-D2 sections).



Drawing shows left-hand assembly.
For right-hand, invert the assembly instructions.

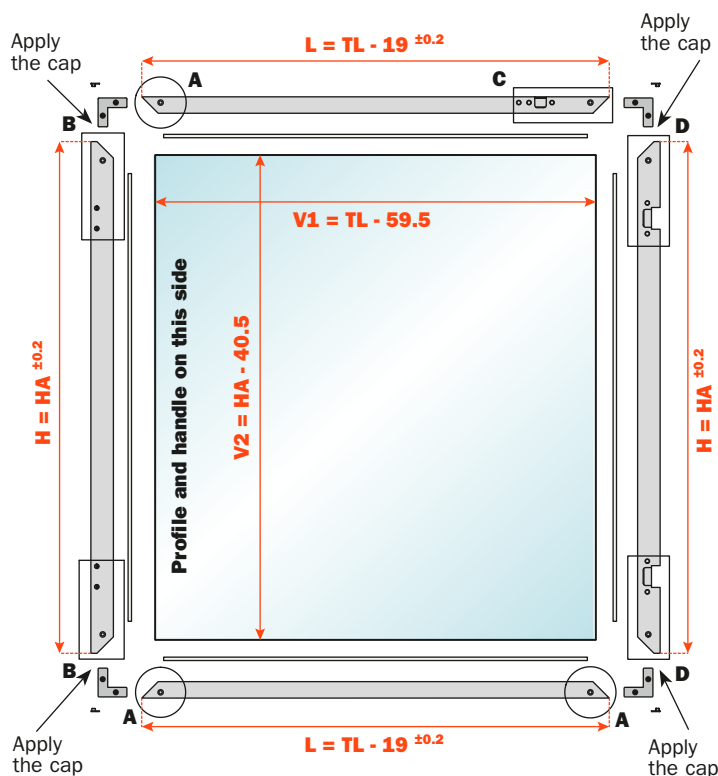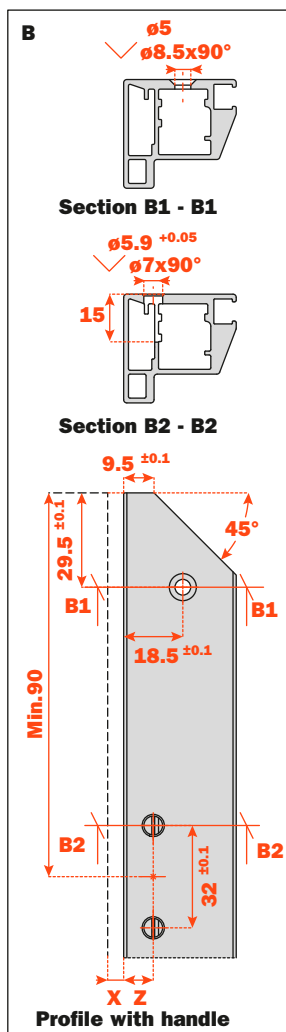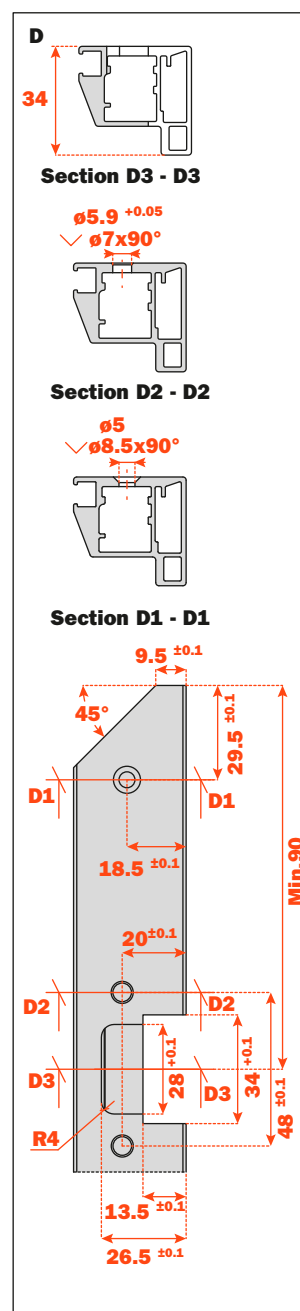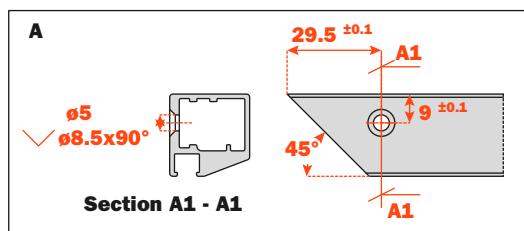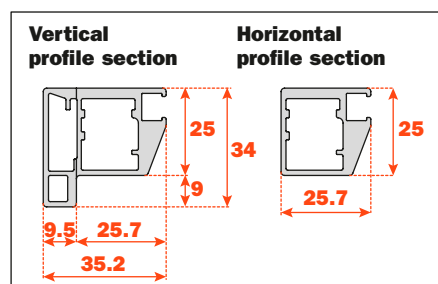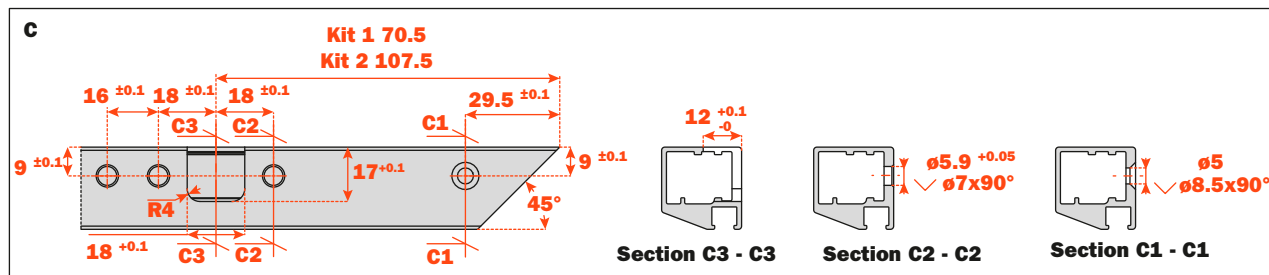

Folder • CONECTA HINGES



Assembly

Fully insert the hinge into the holder.
Once fully inserted, lock the hinge into place using the back cam.

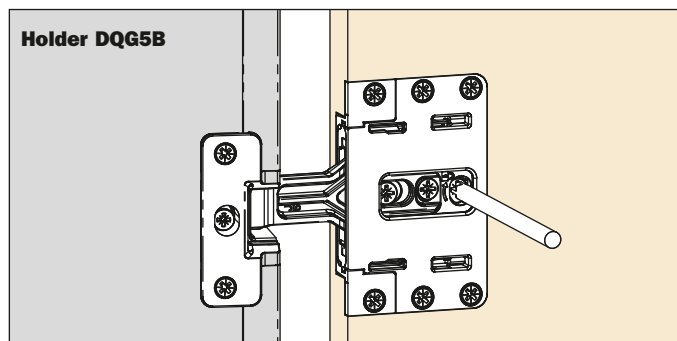
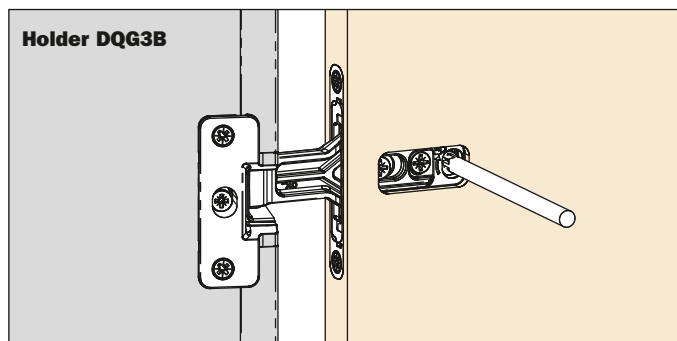


Adjustments

Sideways adjustment -2 +2 mm

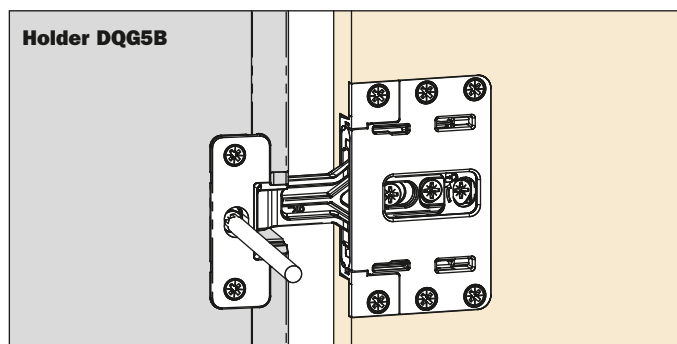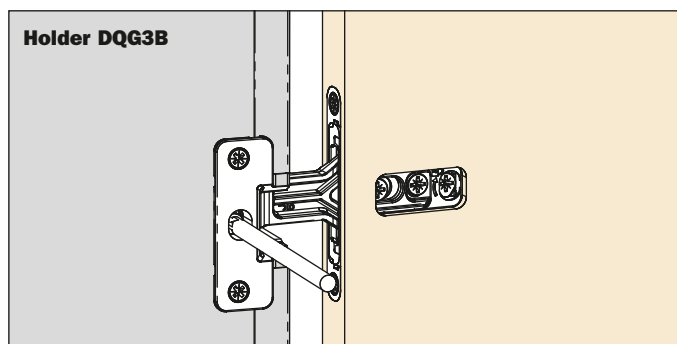

Height adjustment -2.5 +2.5 mm

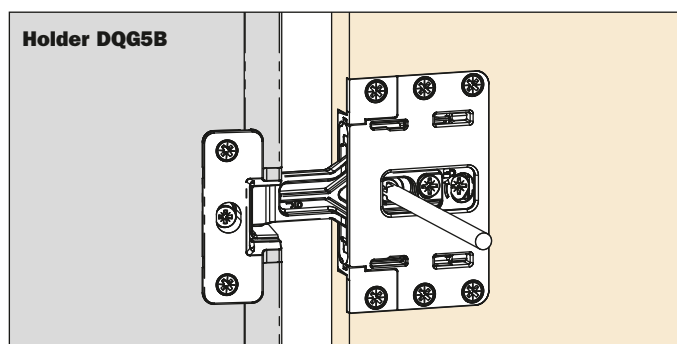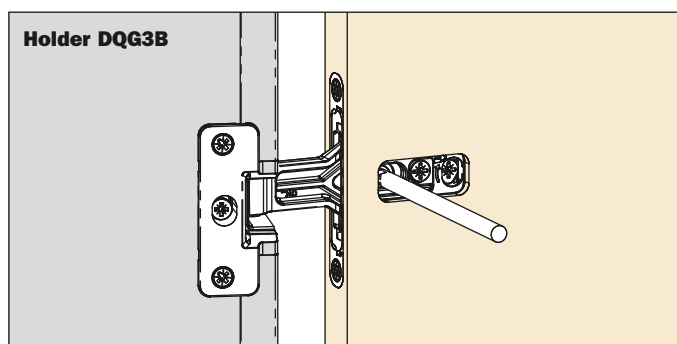

Depth adjustment 0 +3 mm

