



Front locking devices


Front locking devices - Standard mount - Side and depth adjustments

For all Progressa, Progressa+ and Progressa+ Shelf slides


- Dual steel/fiber glass-nylon construction
- Compatible with all Progressa slides
- Tool free lateral and depth adjustments
- Pre-drilling recommended \varnothing 2.5 mm (3/32")

AFCGXX3B


PACKAGING: 2 boxes = 100 pcs right and 100 pcs left

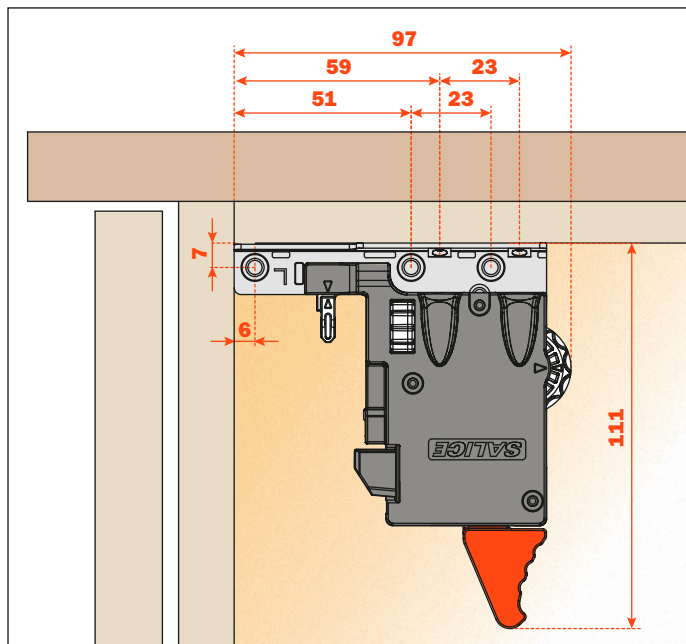

Assembly to the bottom

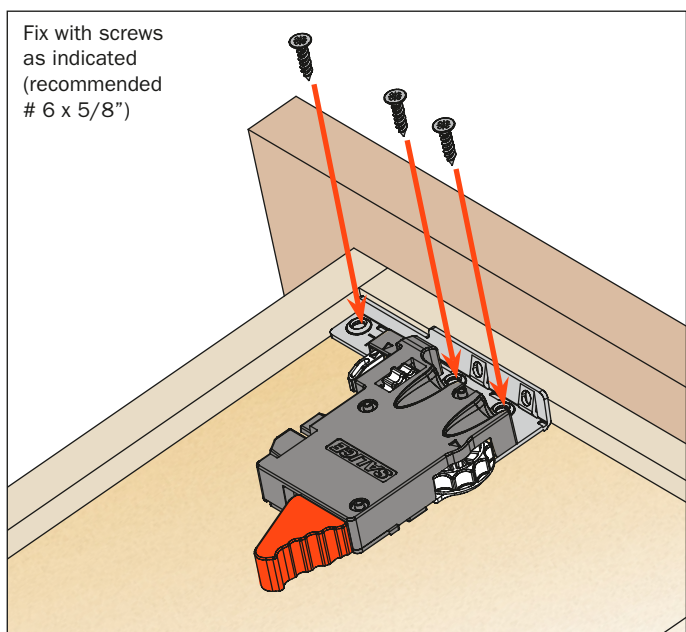

Assembly to the drawer

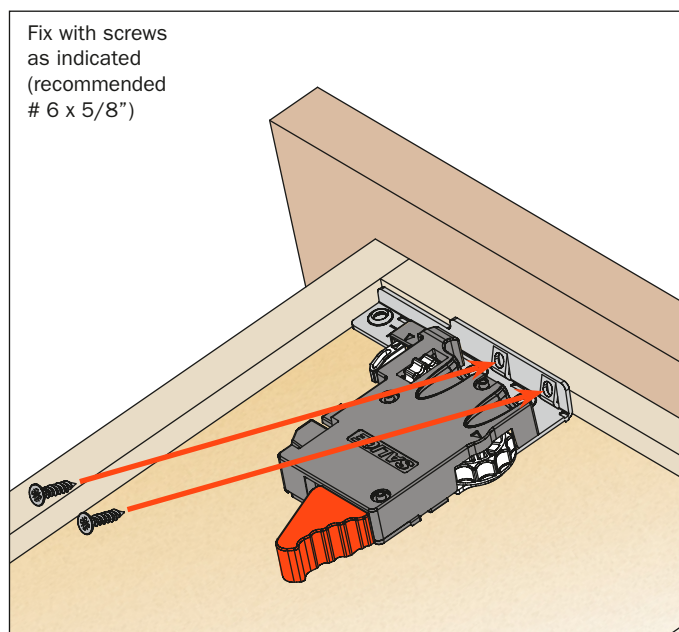

Use **drilling templates** for accurate installation of the clips, see page 60.


Front locking devices - Vertical mount - Side and depth adjustments

For all Progressa and Progressa+ slides



- Dual steel/fiber glass-nylon construction
- Compatible with all Progressa slides
- Tool free lateral and depth adjustments
- Height of the sub front must be 13 mm (1/2")
- Pre-drilling recommended \varnothing 2.5 mm (3/32")

AFCGX43B

PACKAGING: 2 boxes = 100 pcs right and 100 pcs left

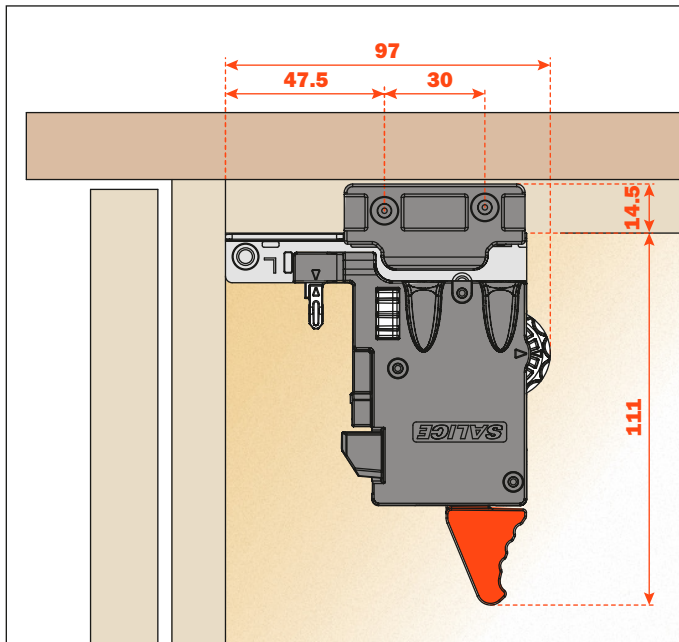

Assembly to the drawer top side

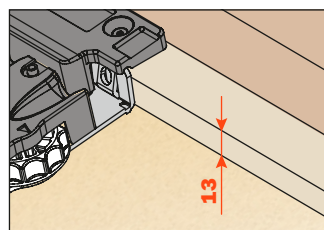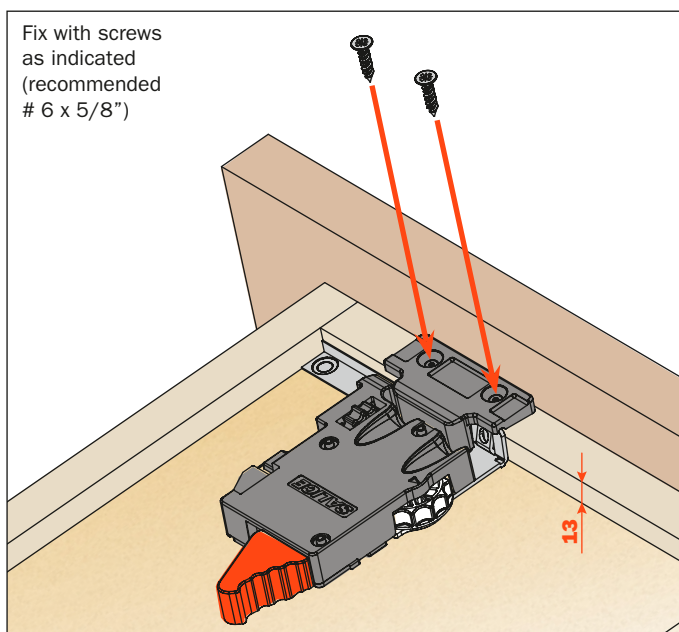

Use **drilling templates** for accurate installation of the clips, see page 60.

Height of the sub front must be 13 mm (1/2").


Front locking devices - Standard mount - Front and side fixing

For all Progressa, Progressa+ and Progressa+ Shelf slides


- Engineered thermoplastics
- Compatible with all Progressa slides
- Side fixing option
- Pre-drilling recommended \varnothing 2.5 mm (3/32")
- Minimum inside drawer width 5-1/8"
- Minimum inside cabinet width 6-3/4"

AFCEX56B


PACKAGING: 2 boxes = 100 pcs right and 100 pcs left

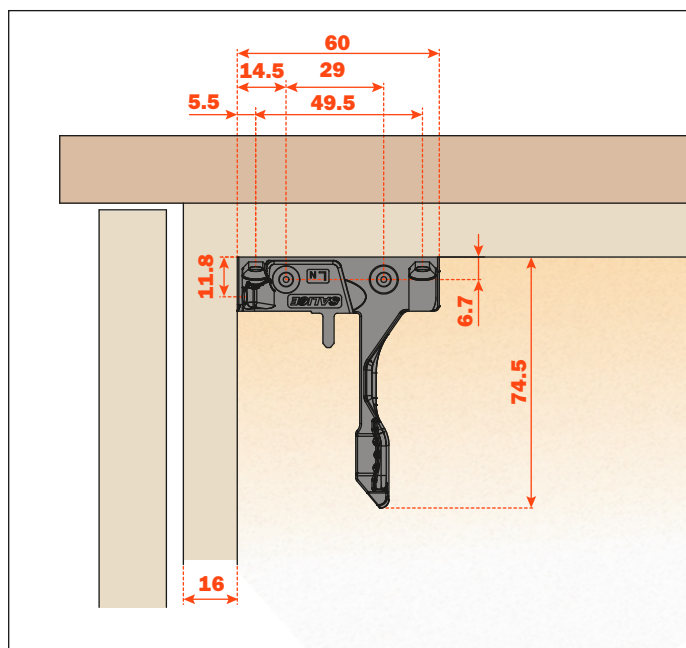

Assembly to the bottom

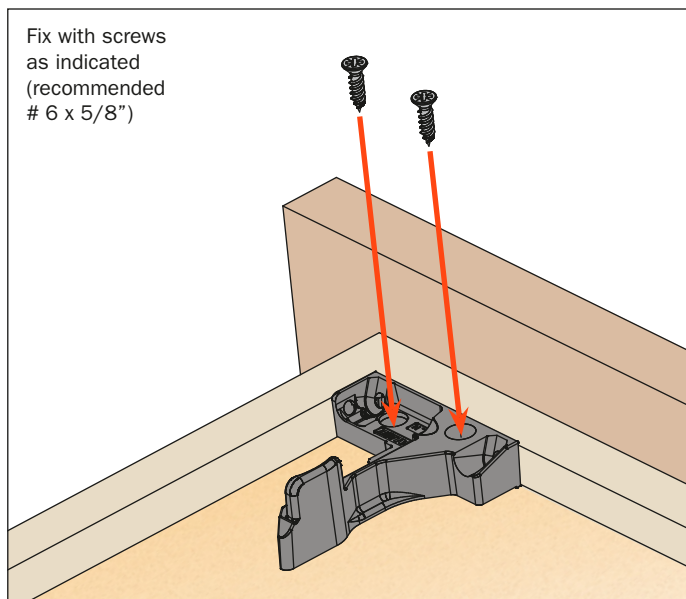

Assembly to the drawer

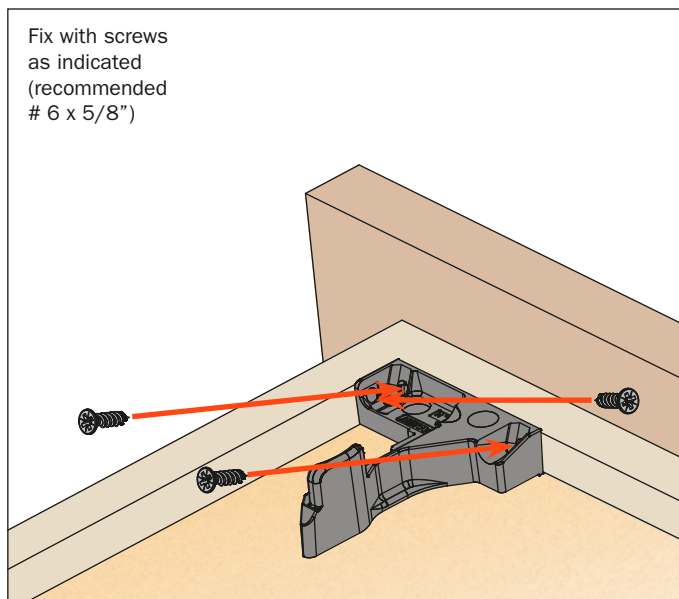

Use **drilling template** for accurate installation of the clips, see page 63.


Front locking devices - Narrow drawer clip

For all Progressa and Progressa+ slides


- Engineered thermoplastics
- For use with narrow drawers
- Compatible with all Progressa slides
- Height of the sub front must be 13 mm (1/2")

AFCEX43B

PACKAGING: 2 boxes = 100 pcs right and 100 pcs left

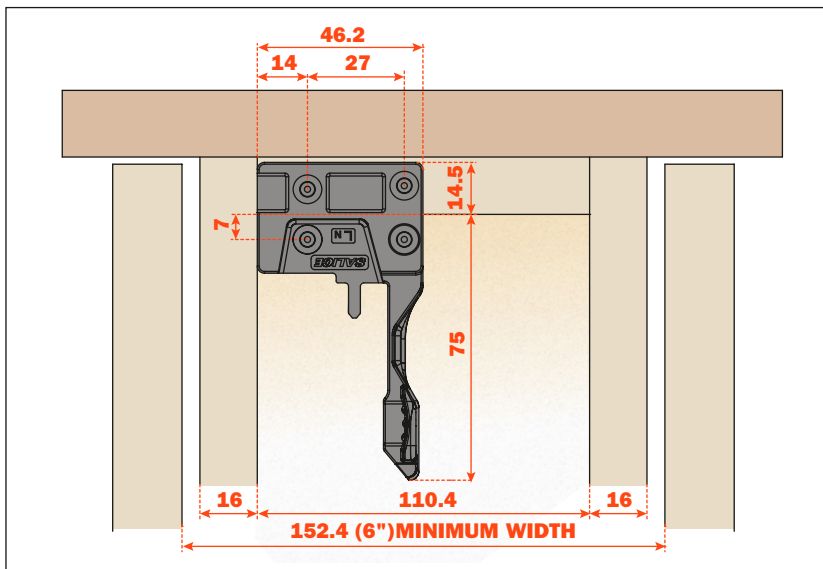


Assembly to the bottom

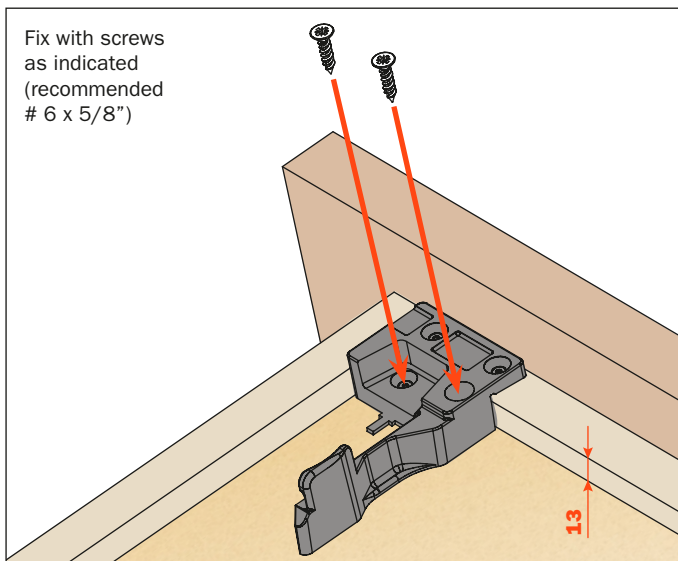


Use **drilling template** for accurate installation of the clips, see page 60.

Assembly to the drawer top side

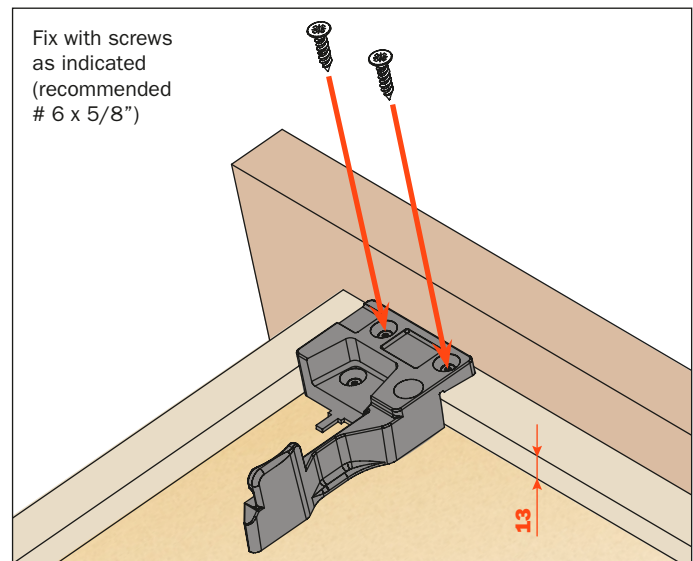

Use **drilling template** for accurate installation of the clips, see page 60.

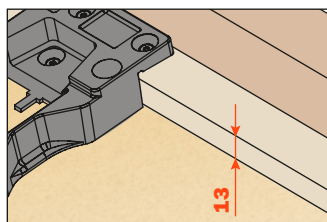


Height of the sub front must be 13 mm (1/2").

Drawer removal

Standard and vertical mount - 6-way adjustable - Side and depth adjustments

For all Progressa, Progressa+ and Progressa+ Shelf slides


Position hands under the front of the drawer and press on the orange levers, as indicated in the drawing, sliding the drawer out of the cabinet.

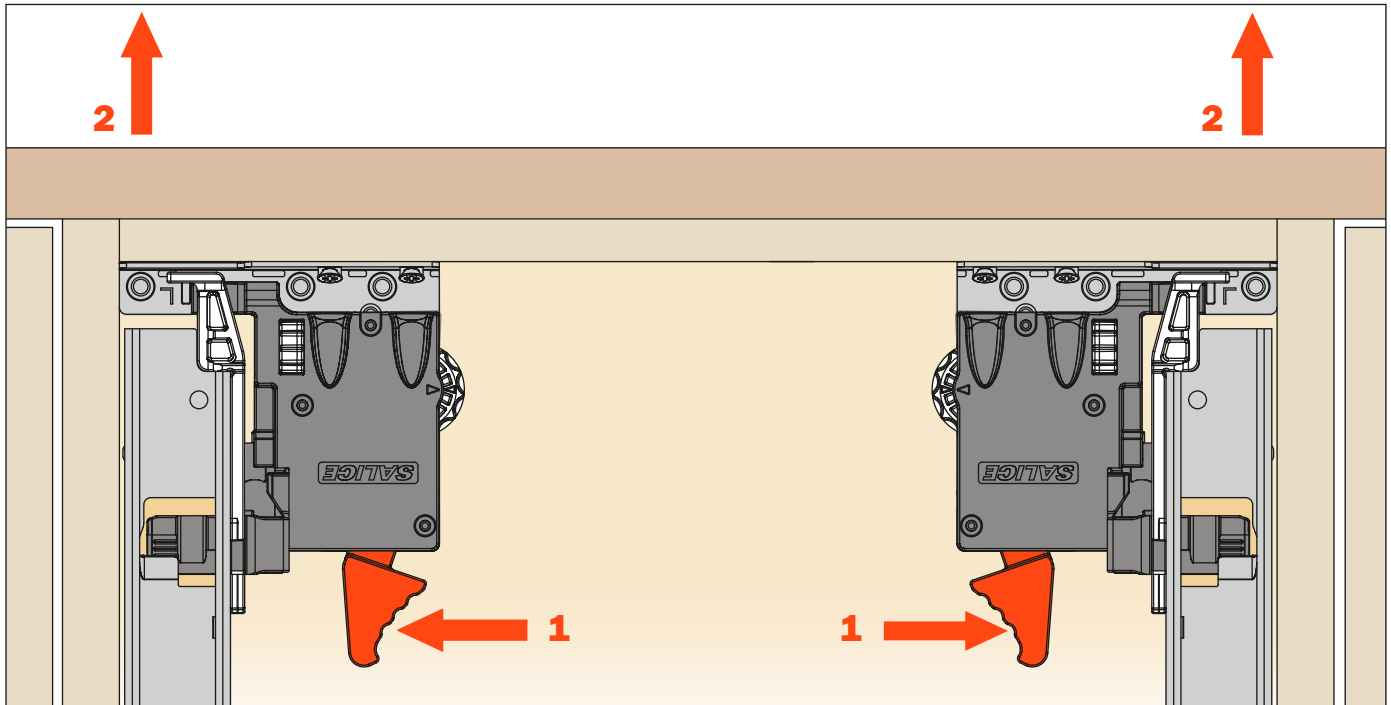

Standard mount - 2-way adjustable - Front and side fixing

For all Progressa, Progressa+ and Progressa+ Shelf slides

Position hands under the front of the drawer and press on the black levers, as indicated in the drawing, sliding the drawer out of the cabinet.

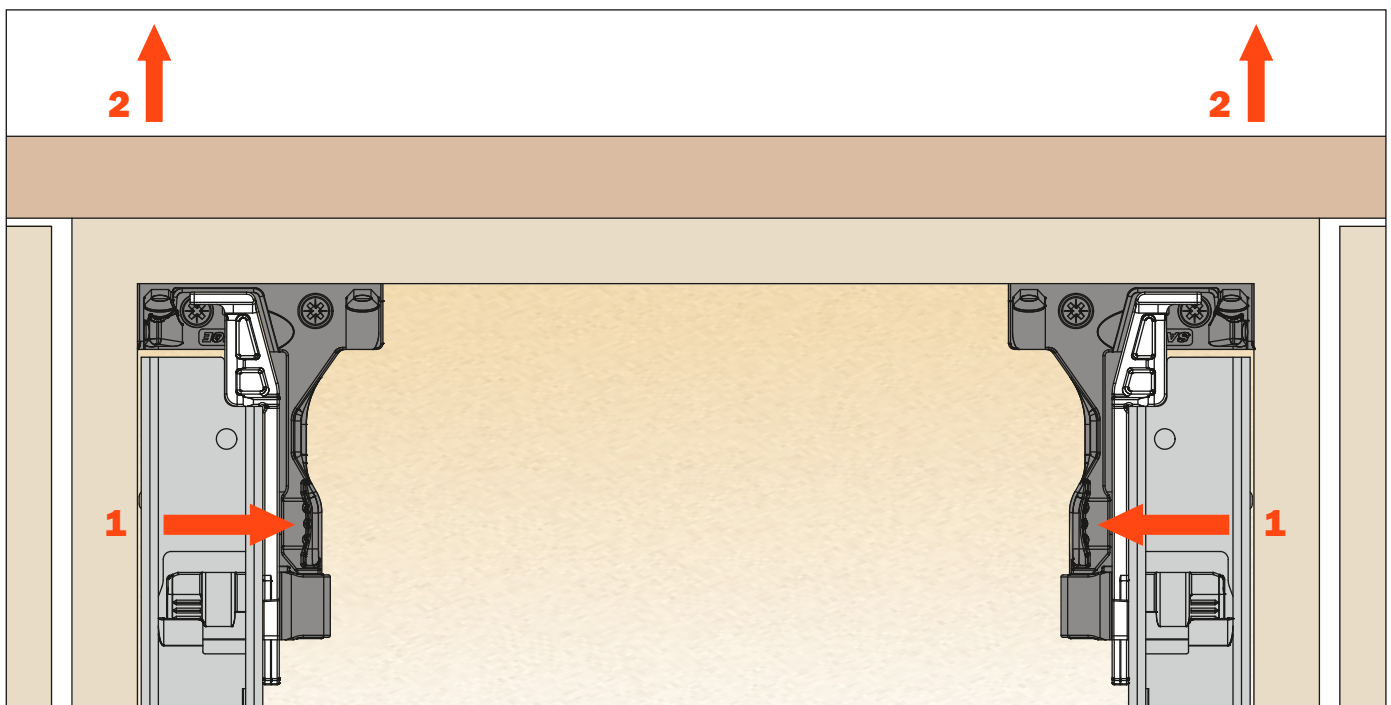

Narrow drawer clip

For all Progressa and Progressa+ slides

Position hands under the front of the drawer and press on the black levers, as indicated in the drawing, sliding the drawer out of the cabinet.

