

Accessories

Progressa Push Synchronizer bar

The synchronization system for **Progressa Push**, **Progressa+ Push** and **Progressa+ Shelf Push** runners has been developed to ensure that wider drawers can be opened with minimum effort, regardless of where pressure is applied. The system links the two runners, which then become a single element; applying pressure on any part of the drawer front (even at the extremities), is sufficient for the Push devices to release and consequently for the drawer to open.

The synchronization can be used with any drawer width; its functionality is at its best with drawers wider than 800 mm.


PRODUCT FEATURES:

- smooth and progressive running action
- runner load capacity remains unchanged
- available on **Progressa Push** runners, except for lengths 250 and 300 mm, and on any **Progressa+ Push** and **Progressa+ Shelf Push** runners length
- minimum opening (X) = 280 mm
- maximum opening (X) = 1305 mm
- bar length = 1150 cut to size



Technical information - Formula for cutting the bar to length


The assembly of the synchronizer requires a minimum 76 mm notch in the rear of the drawer

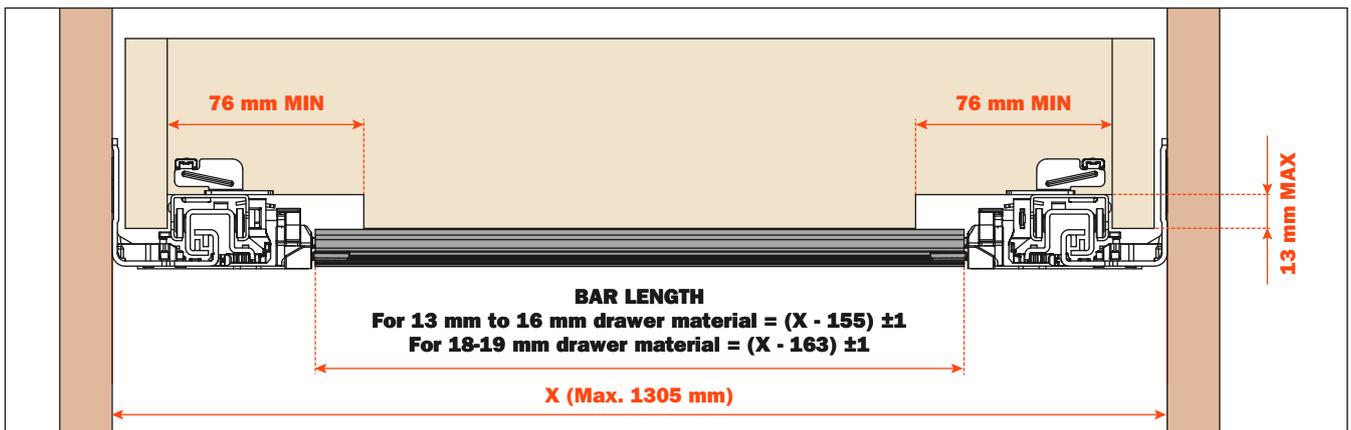


X = Internal width of the cabinet

Assembly instructions


Insert and slide the carrier plates into position on the runners in the direction indicated by the arrows

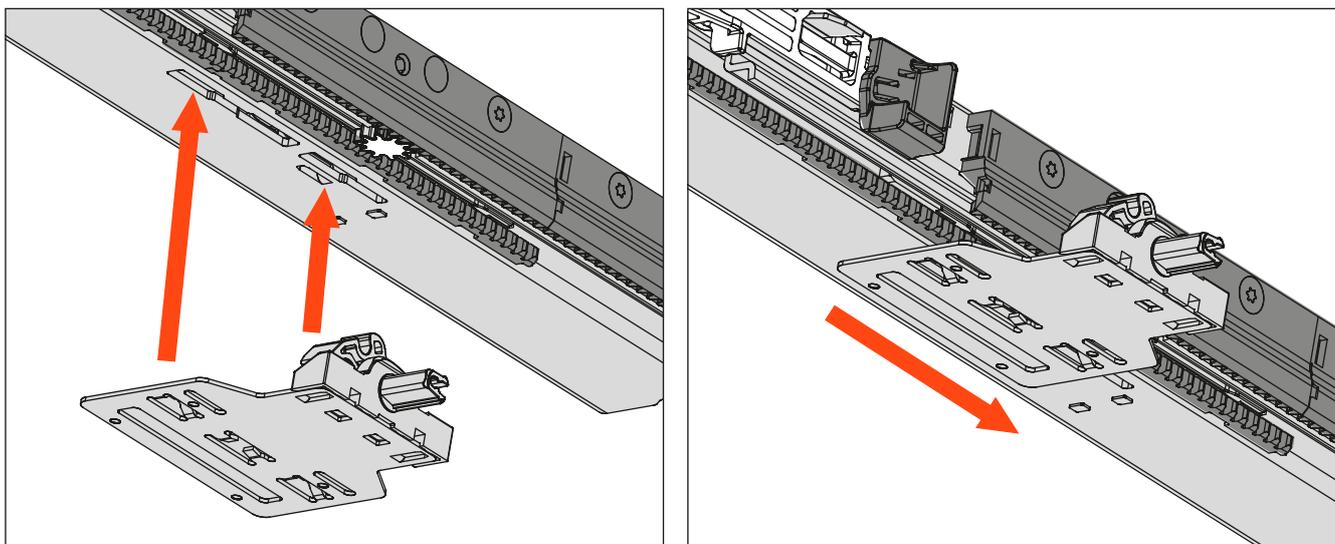

Fitting the driver pins to the runners

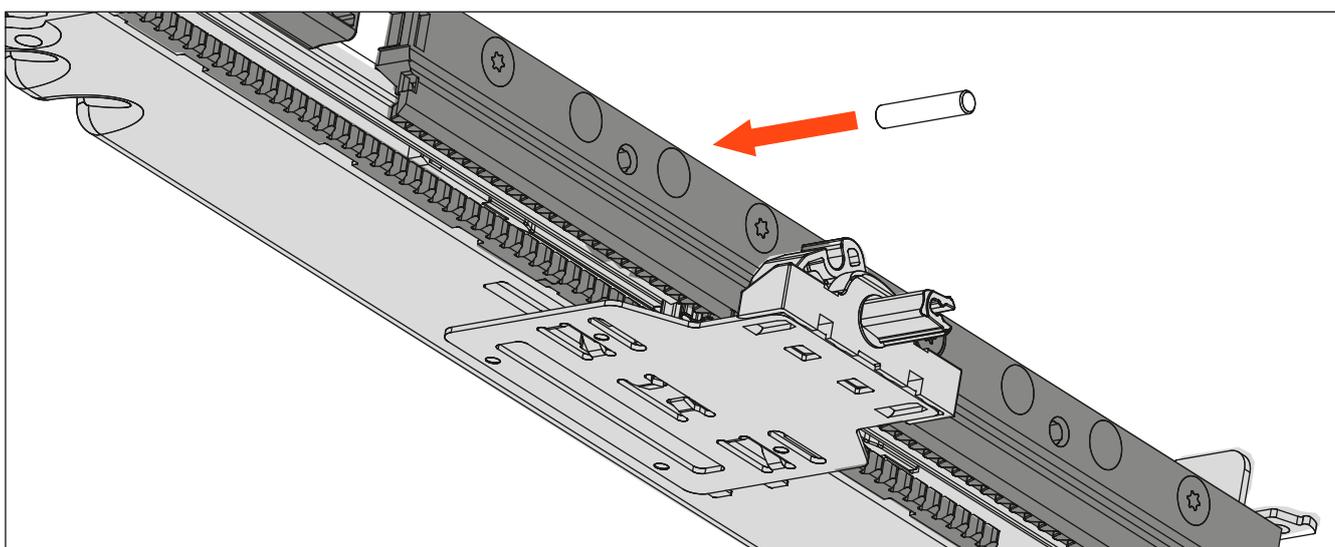


Cut the synchronizer bar to length

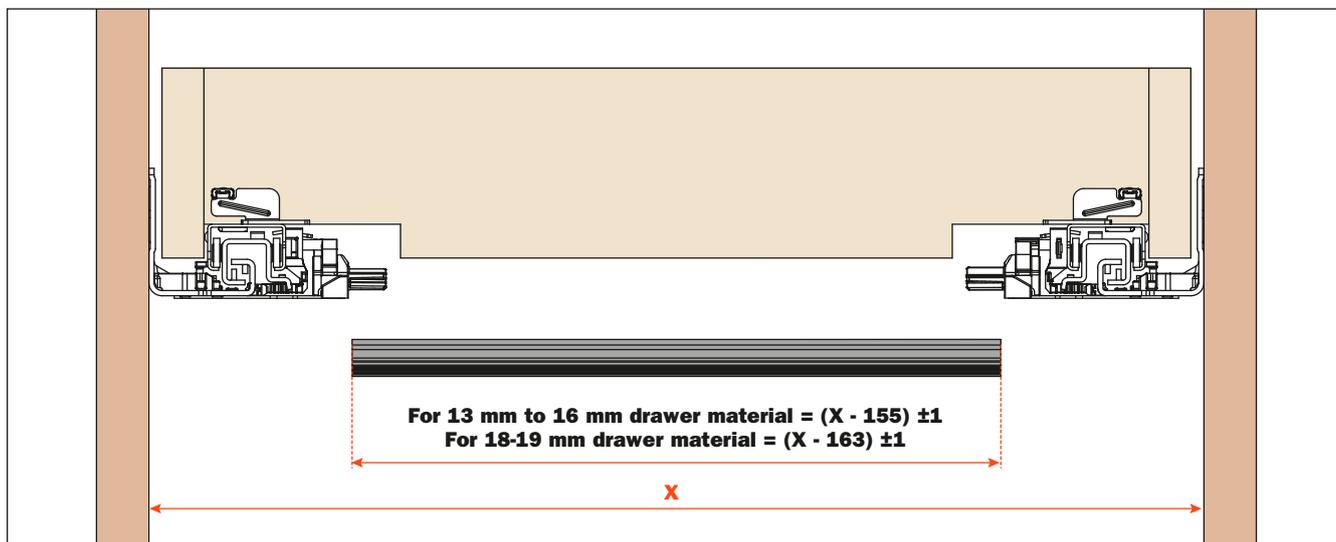


Progressa Push synchronizer bar - Assembly instructions

Fix the bar to the plates and insert the drawer

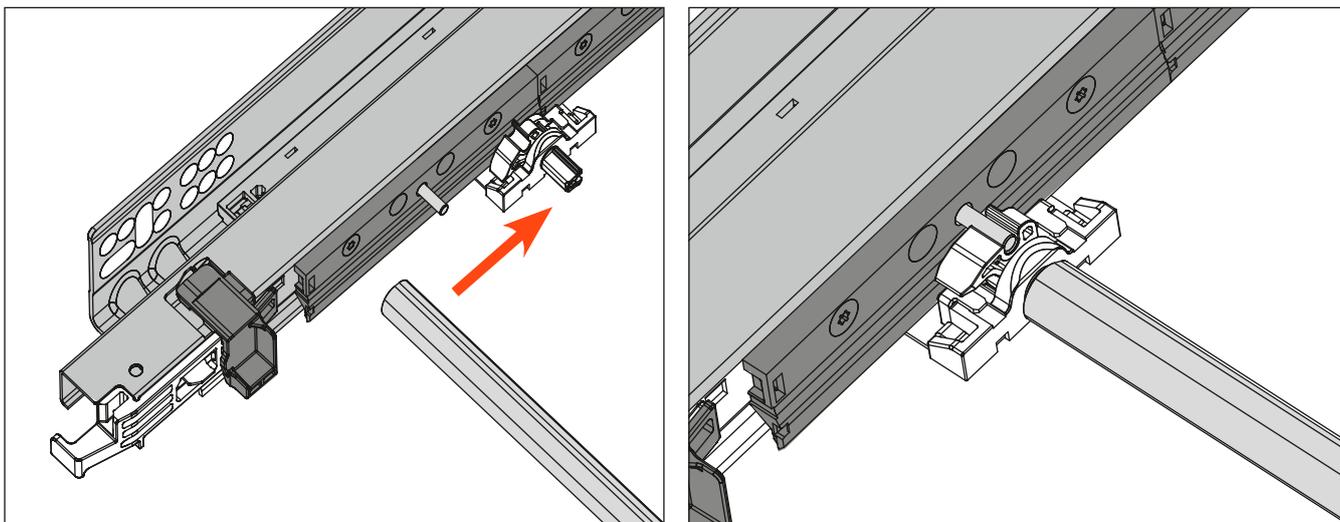

Applying pressure on any part of the drawer front is sufficient for the drawer to open

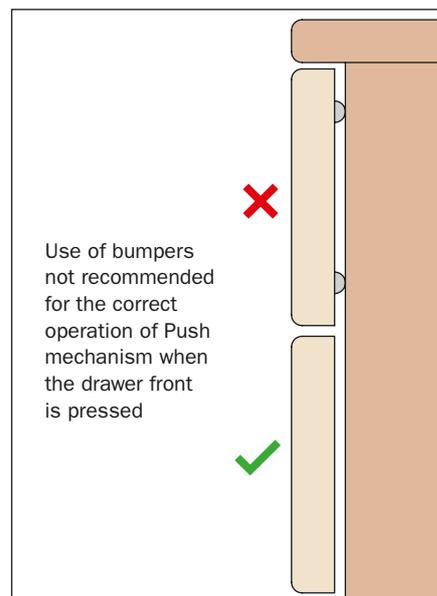

Packing

SINGLE KIT PACKING

APKF7X51150

PACKING

1 box = 20 single kits


1 KIT CONTAINS:

- 1 stabilizer bar
- 2 driver pins
- 1 right carrier plate and 1 left carrier plate




Drilling templates for drawers - For all Progressa, Progressa+ and Progressa+ Shelf runners

Pre-drilling for the clips reduces the possibility of splitting the wood, thus assuring the correct and level installation of the clips.
The correct and level mounting assures a smooth assembly and operation of the drawer runner.

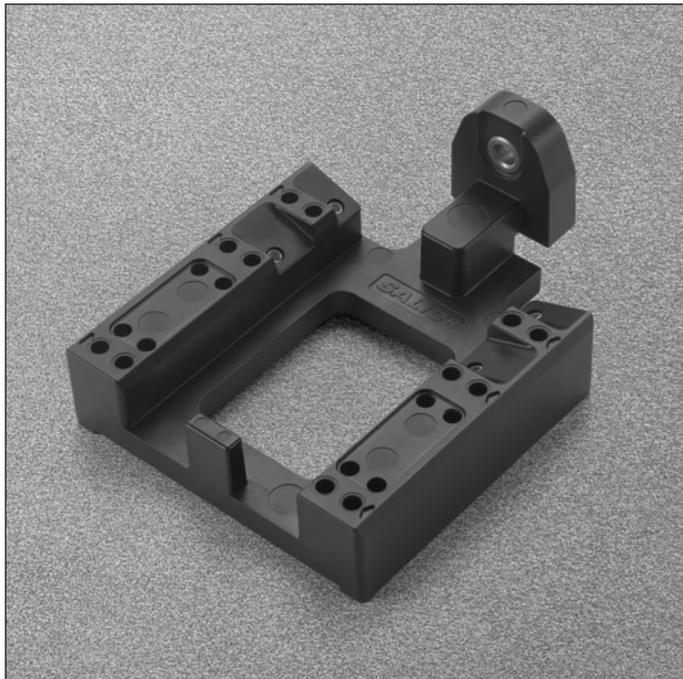

Front locking device
AFCGXX3B
Right and left


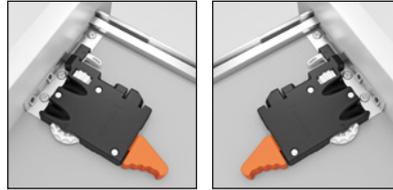


Drilling template
ASGD704U3XA

PACKING
1 box = 1 pc.

Back drilling for hook



Pre-bore for rear hook for proper alignment and depth (min. depth = 10 mm)

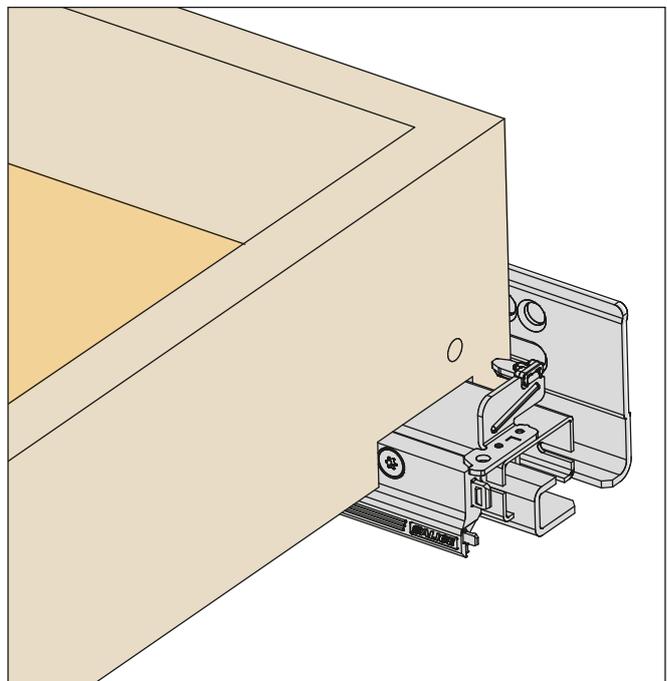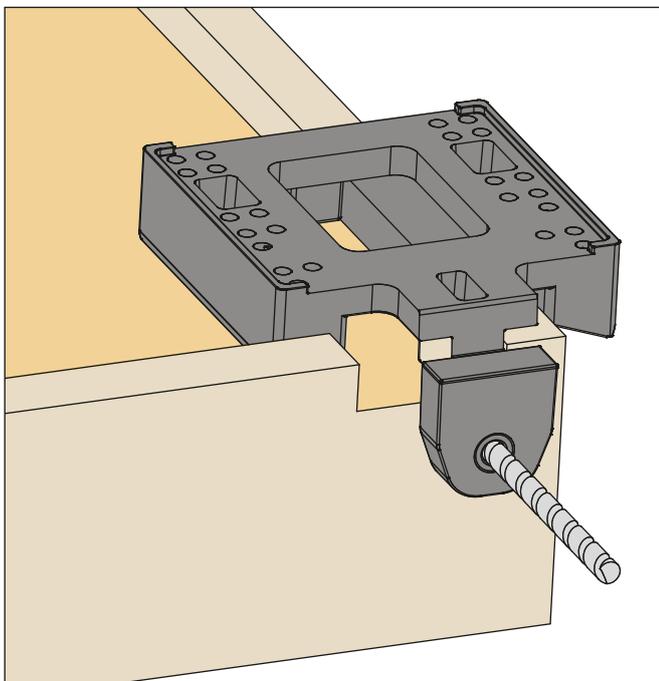

Use a \varnothing 6 mm drill bit
Technical information, see page 10.



Drilling templates for drawers

Pre-drilling \varnothing 2.5 mm, to assemble the clips to the front of the drawer

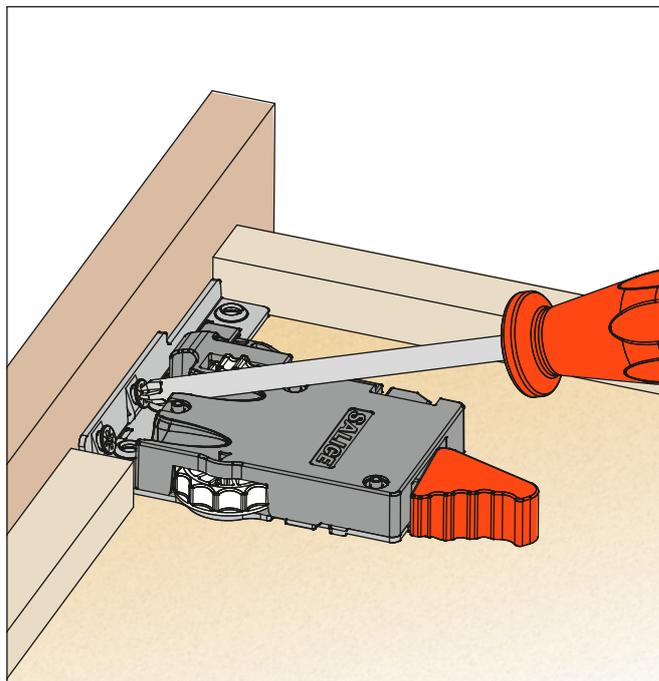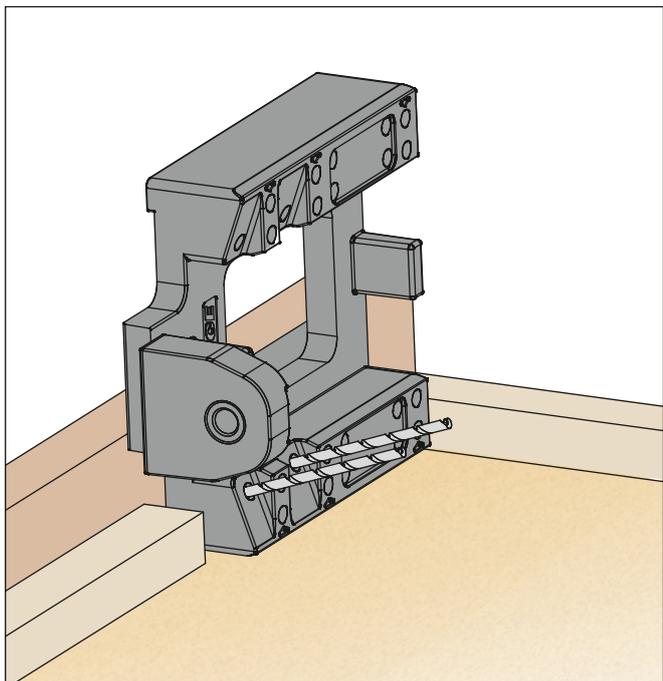


The use of \varnothing 4 x 16 mm screws is recommended for a correct operation of the clips

Pre-drilling \varnothing 2.5 mm, to assemble the clips to the drawer bottom

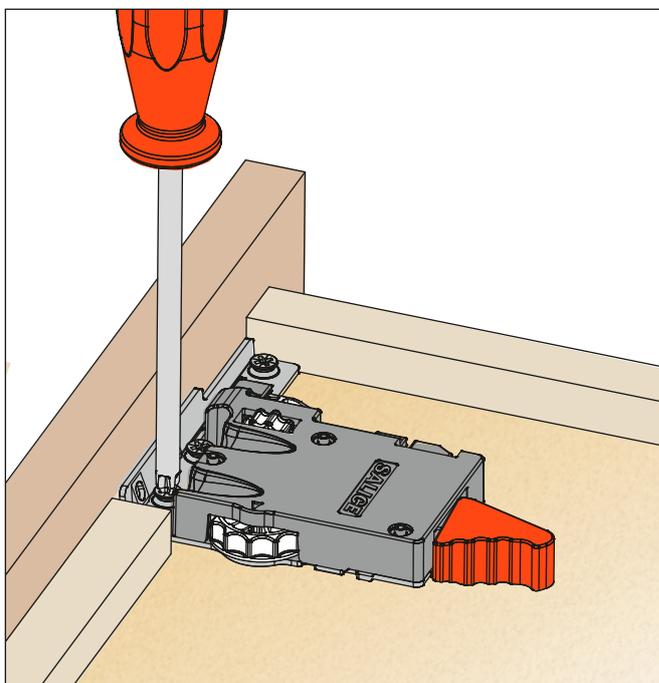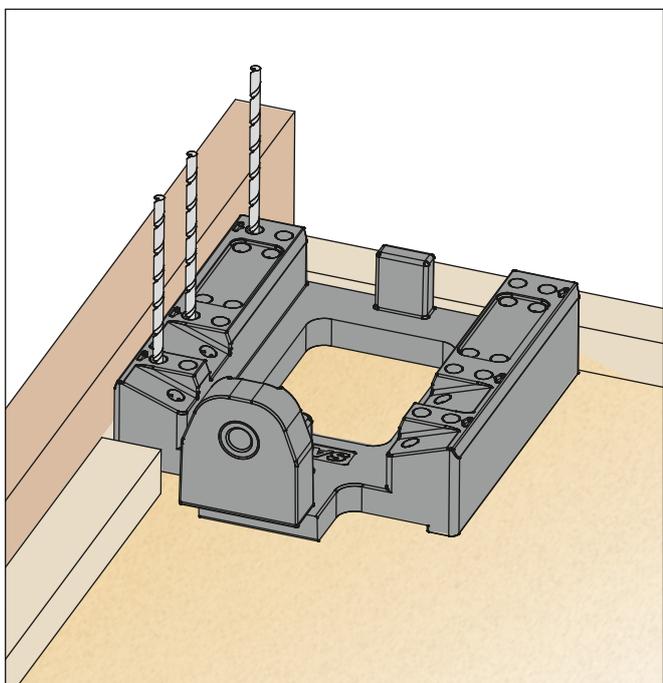


Drilling templates for drawers - For all Progressa, Progressa+ and Progressa+ Shelf runners

Pre-drilling for the clips reduces the possibility of splitting the wood, thus assuring the correct and level installation of the clips.
The correct and level mounting assures a smooth assembly and operation of the drawer runner.

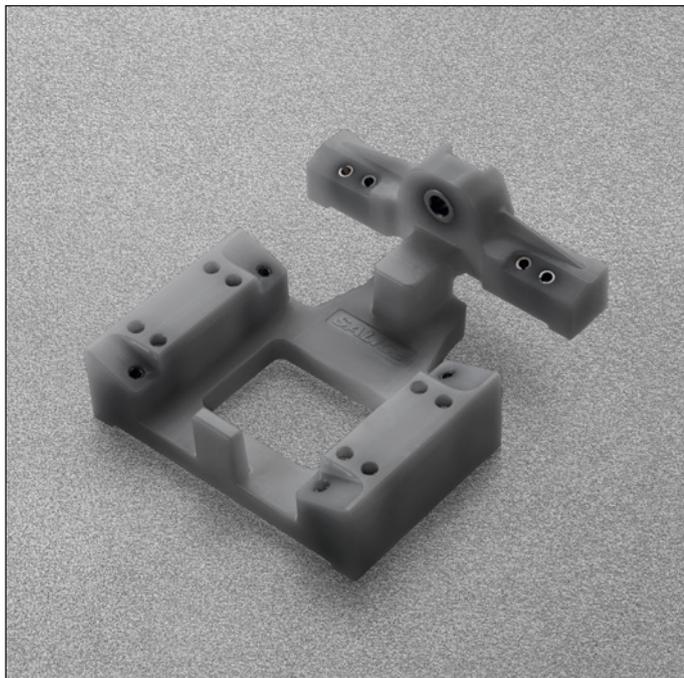

Front locking device
AFCEX56B
Right and left


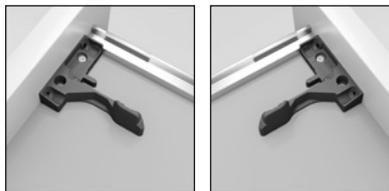


Drilling template
ASGD504U6XA

PACKING
1 box = 1 pc.

Back drilling for hook



Pre-bore for rear hook for proper alignment and depth (min. depth = 10 mm)

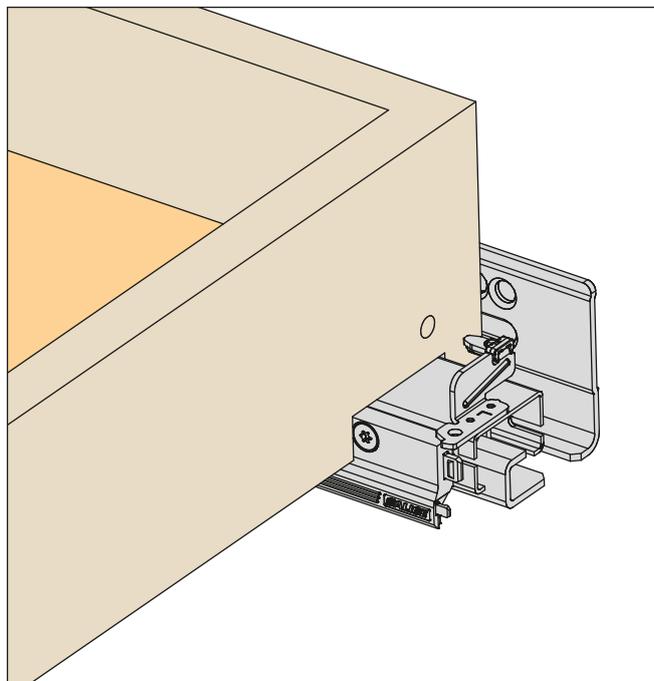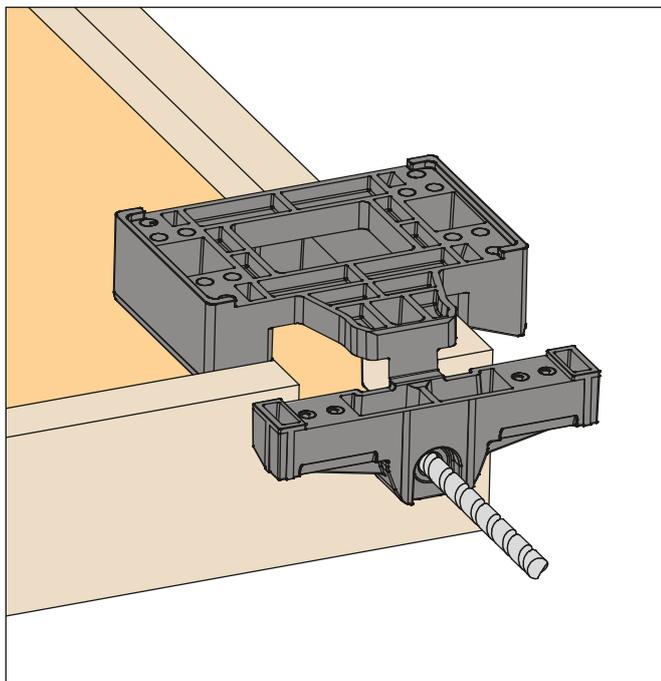

Use a \varnothing 6 mm drill bit
Technical information, see page 10.



Drilling templates for drawers

Fixing the clip on the drawer member

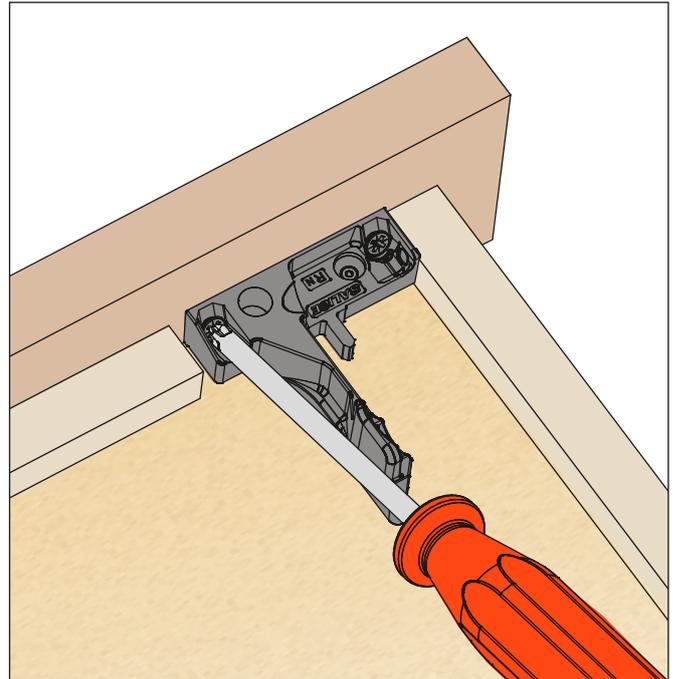
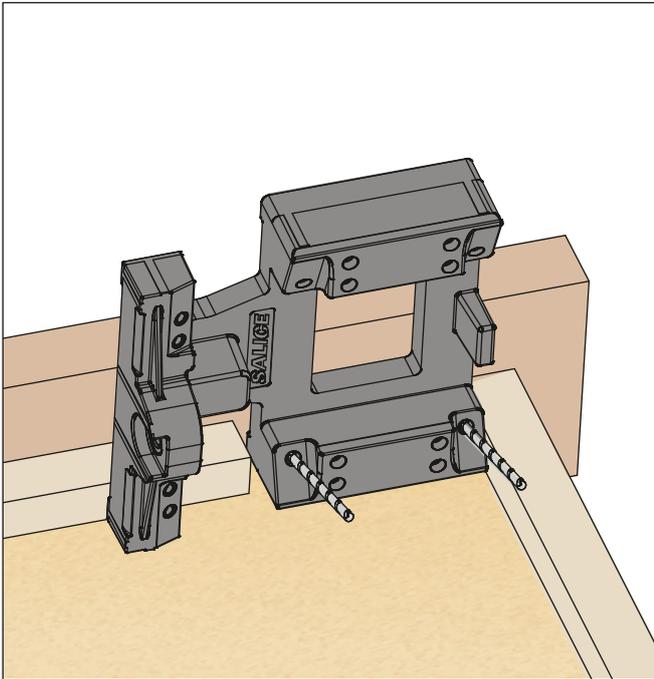


The use of $\varnothing 4 \times 16$ mm screws is recommended for a correct operation of the clips

Vertical drilling for clips, fixing on the bottom

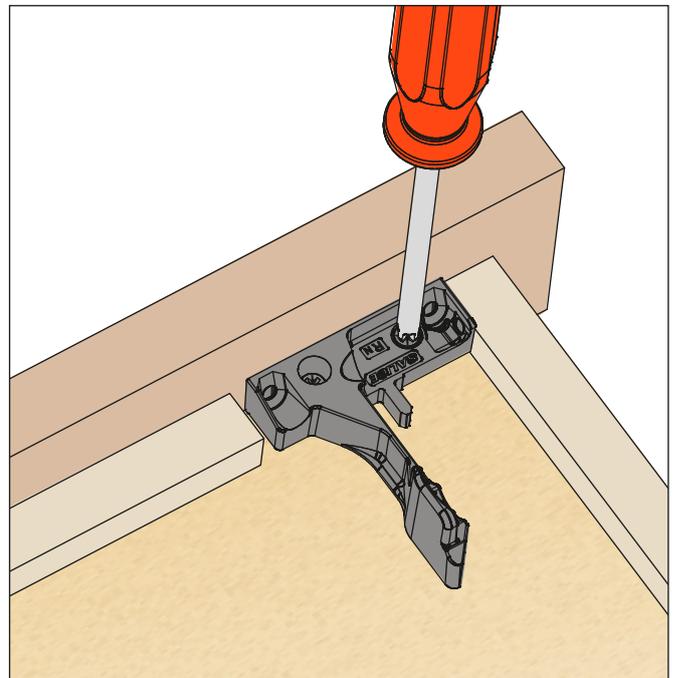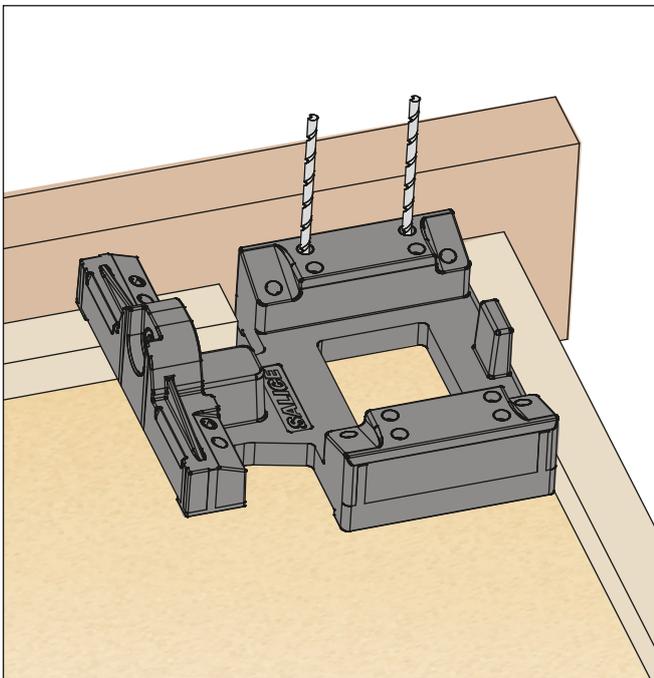

Optional lateral fixing

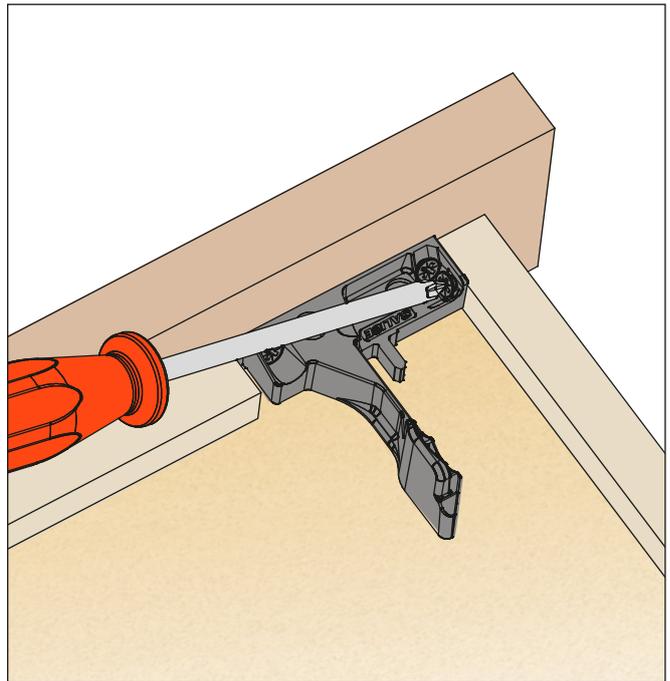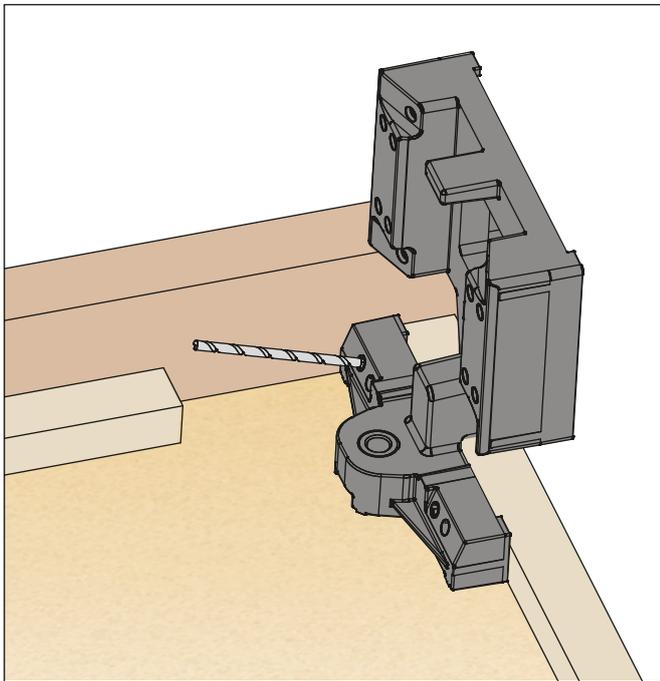

The use of $\varnothing 4 \times 16$ mm screws is recommended for a correct operation of the clips

Accessories - For Progressa+ Shelf runners

Rear-fixed bracket and magnet - Lock-open function for runners and drawers



AROSXXY


The shelf is held at the maximum opening position by means of a rear-fixed bracket and a magnet.

PACKING


1 box = 20 magnets, 20 brackets.
Screws included.

Assembly instructions


1 A) Fix the bracket, aligned with the back of the shelf.

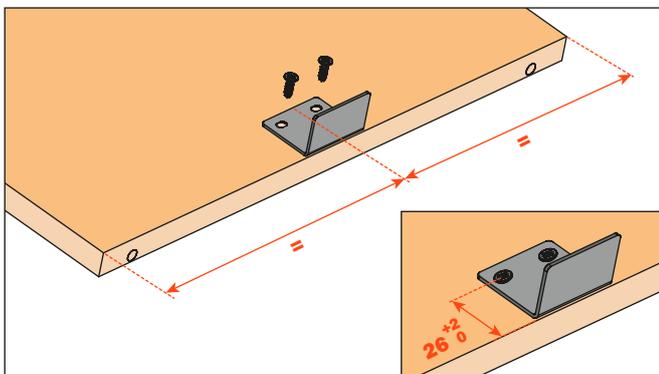


1 B) Fix the bracket to the shelf with the rear hook support. The bracket needs to be aligned to the rear hook support.

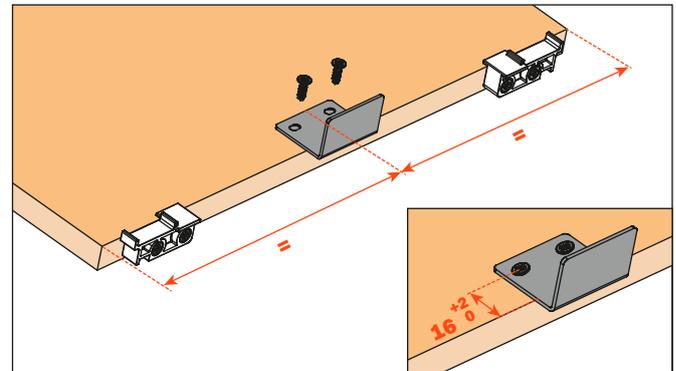


2) Fix the magnet to the bottom.

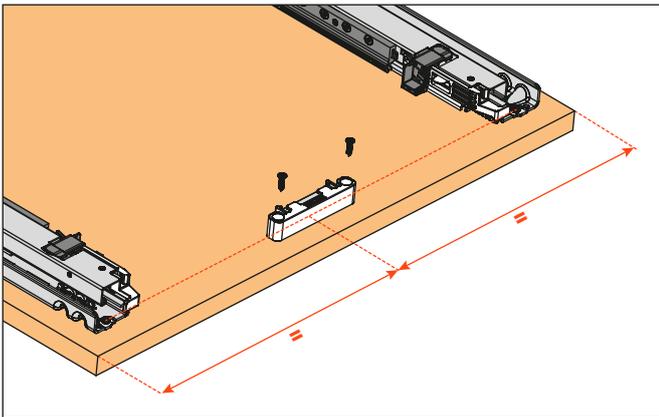

3) The shelf is held at the maximum opening position.

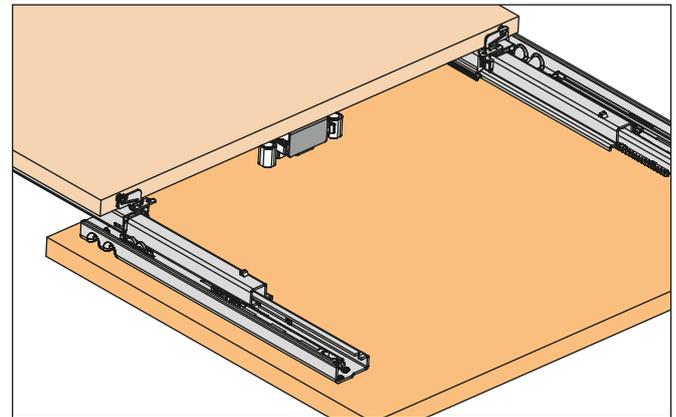

Rear hook bracket

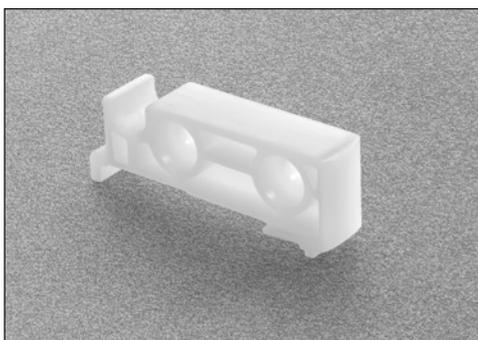


AGAPXXYI

For shelves that are less than 12 mm thick, the runner can be used together with the rear hook bracket, thus eliminating the need for the rear hole in the shelf.

PACKING:

1 box = 100 pcs.

Accessories - For all Progressa, Progressa+ and Progressa+ Shelf runners**Wood screw****V234X164I**Wood screw \varnothing 4 x 16 mm


PACKING

1 box = 20000 pcs

Euro screw**V136X114I**Euro screw \varnothing 6 x 11 mm

PACKING

1 box = 10000 pcs

**V136X154I**Euro screw \varnothing 6 x 14.5 mm

PACKING

1 box = 5000 pcs