
Wind

Carrier for wooden doors only

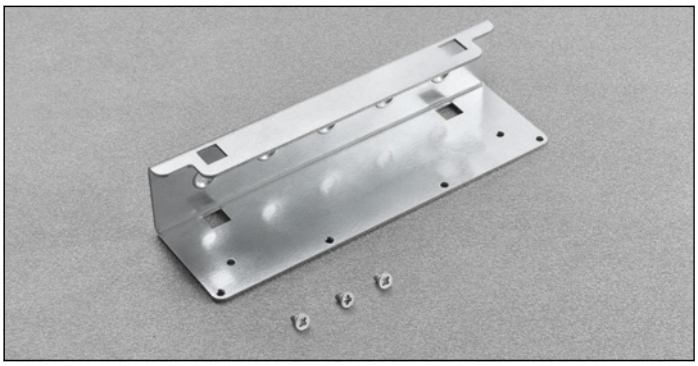


Technical information

Carrier to be screw-fixed to the top of the cabinet for use with:


- corner cabinets
- doors of large weight and dimensionswooden doors of large weight and dimensions

We suggest to fix the carrier with wood screws 4x18.

Drilling patterns.

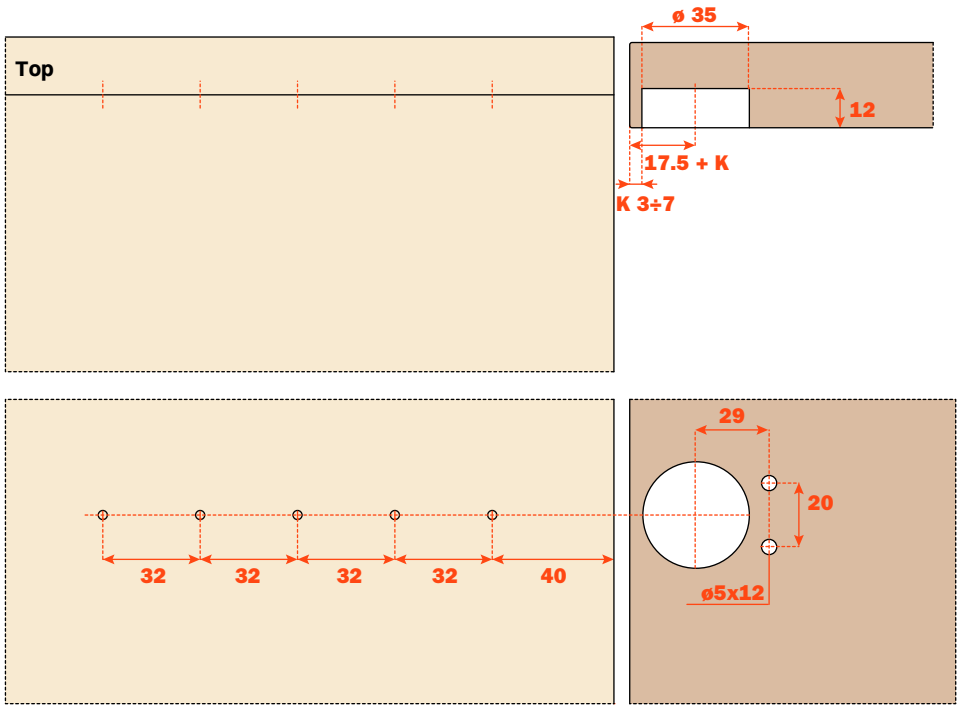

Space needed to open the door.

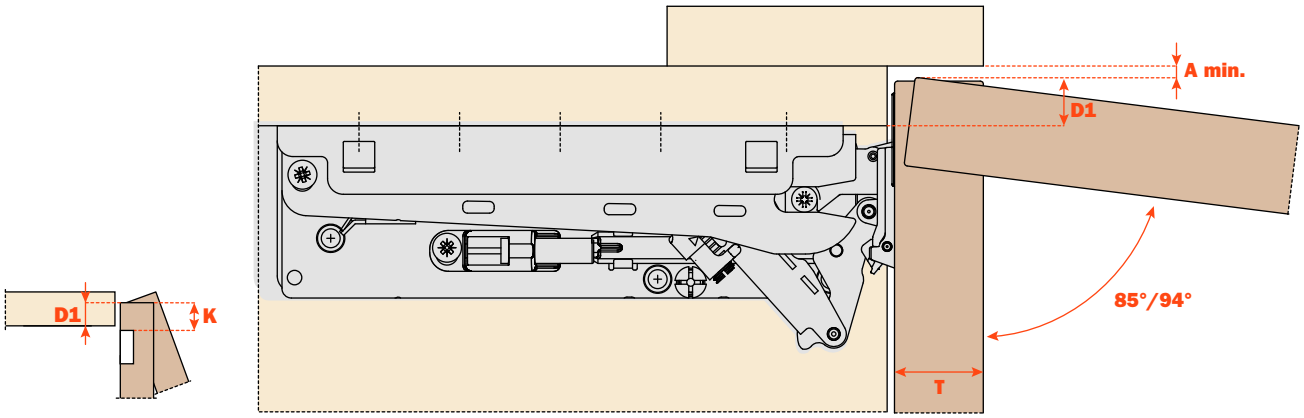


K		D1
3	=	13
4	=	14
5	=	15
6	=	16
7	=	17


	T=	16	17	18	19	20	21	22	23	24	25	26	27	28
K=3	A = min	0	0.1	0.1	0.2	0.2	0.3	0.5	0.6	0.7	0.9	1.1	1.8	2.7
K=4	A = min	0	0.1	0.1	0.2	0.2	0.3	0.4	0.6	0.7	0.9	1.1	1.3	2.1
K=5	A = min	0	0.1	0.1	0.2	0.2	0.3	0.4	0.6	0.7	0.9	1.1	1.3	1.5
K=6	A = min	0	0.1	0.1	0.2	0.2	0.3	0.4	0.6	0.7	0.9	1.0	1.2	1.5
K=7	A = min	0	0.1	0.1	0.2	0.2	0.3	0.4	0.6	0.7	0.8	1.0	1.2	1.4

Assembly instructions for the carriers

Fixing the carriers to the top of the cabinet.

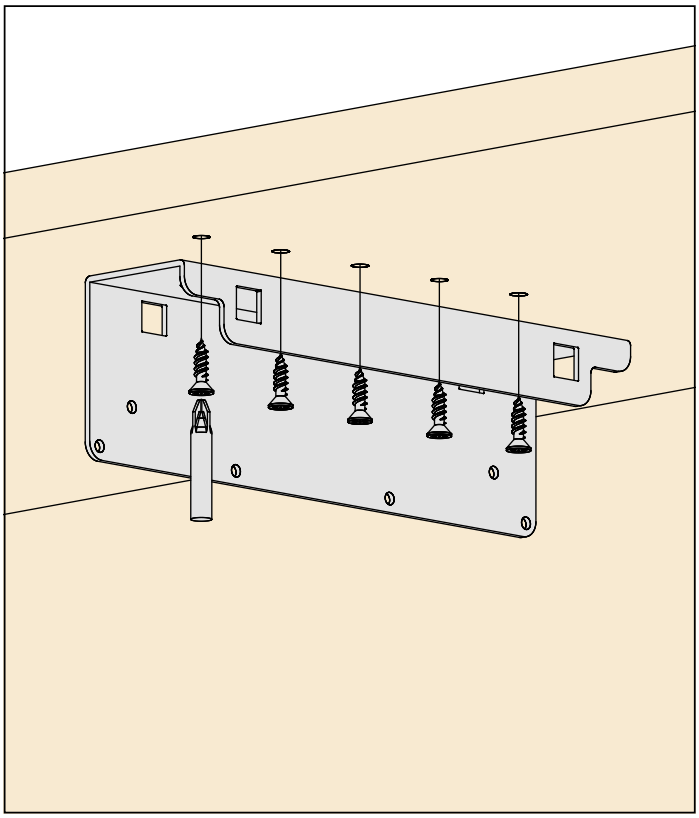


Fixing the plates to the carriers.

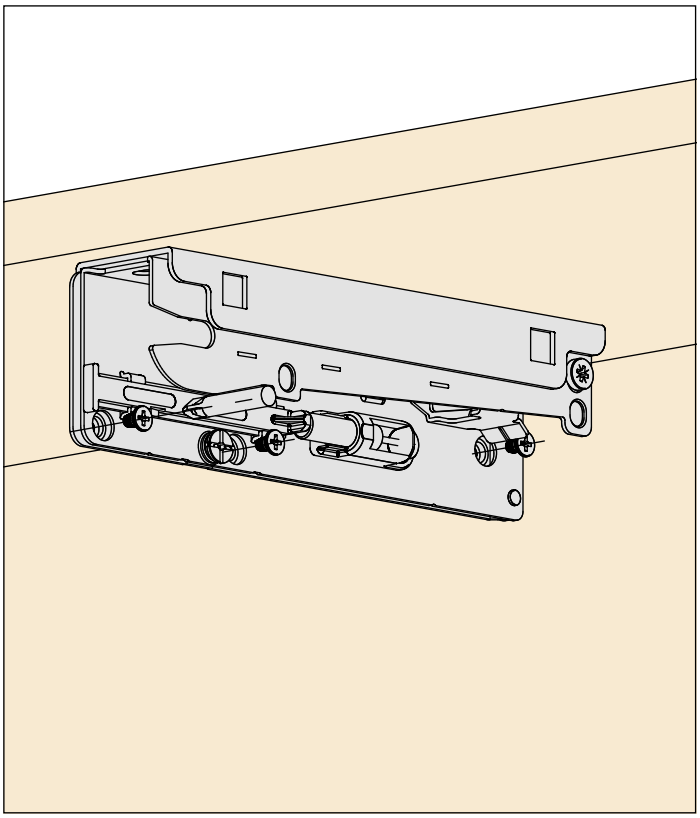


Inserting the hinge into the plates.


Insert the hinge until the back fixing is engaged.
This operation is tool free.

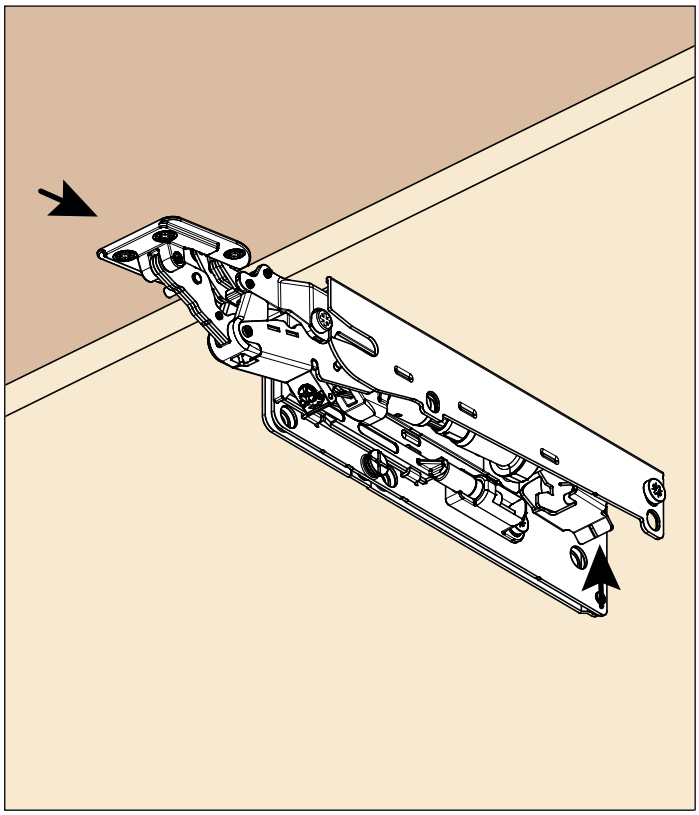

Installing the covers.

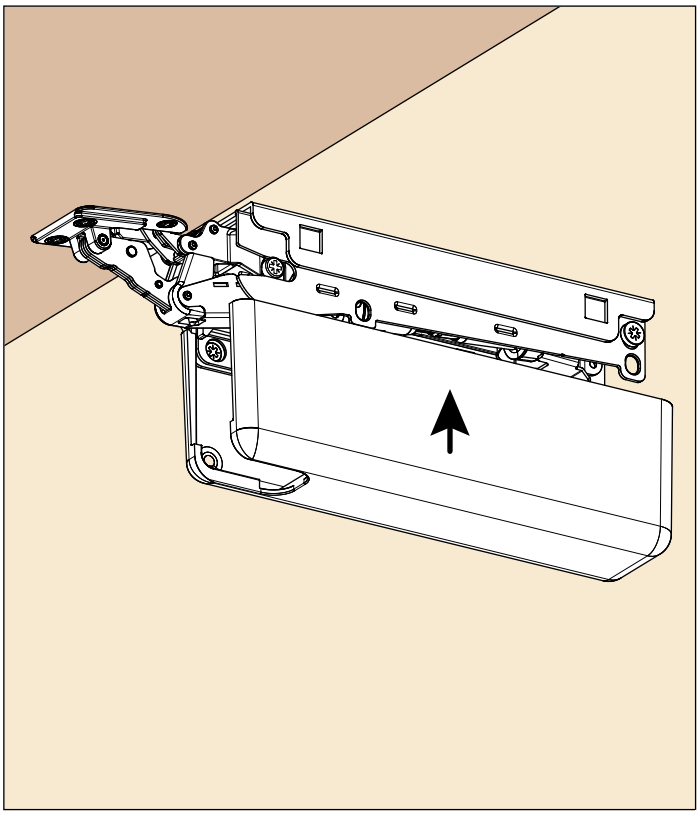


Removal of the covers.

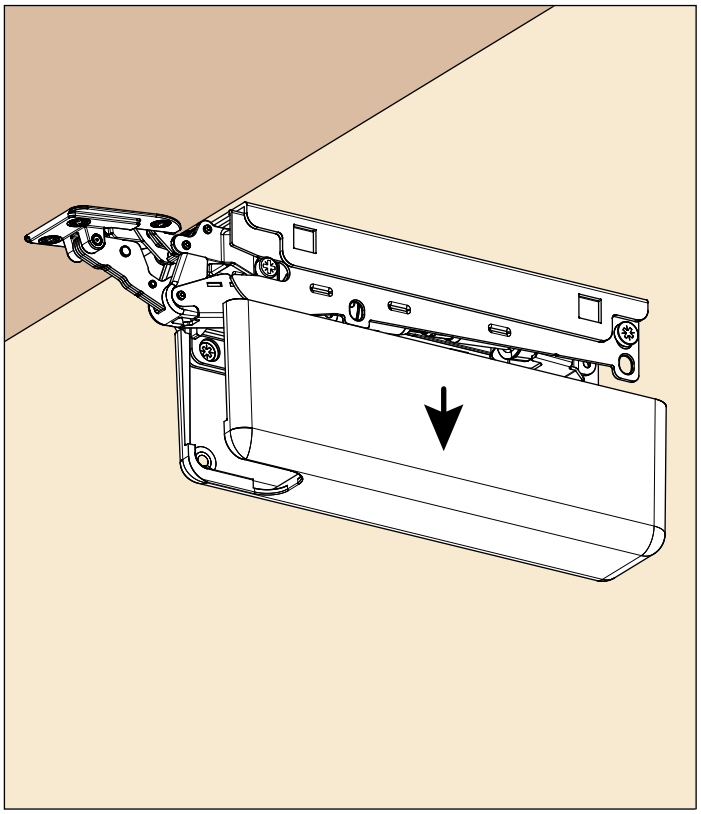


Disassembly of the hinge.


Press the back lever and pull out the hinge.
This operation is tool free.

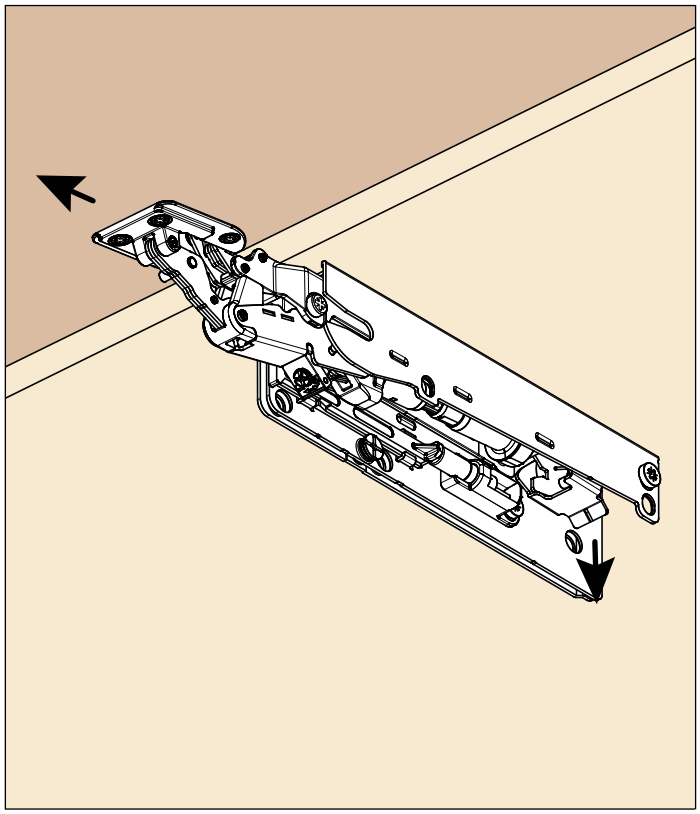

Unfasten the plates from the carriers.

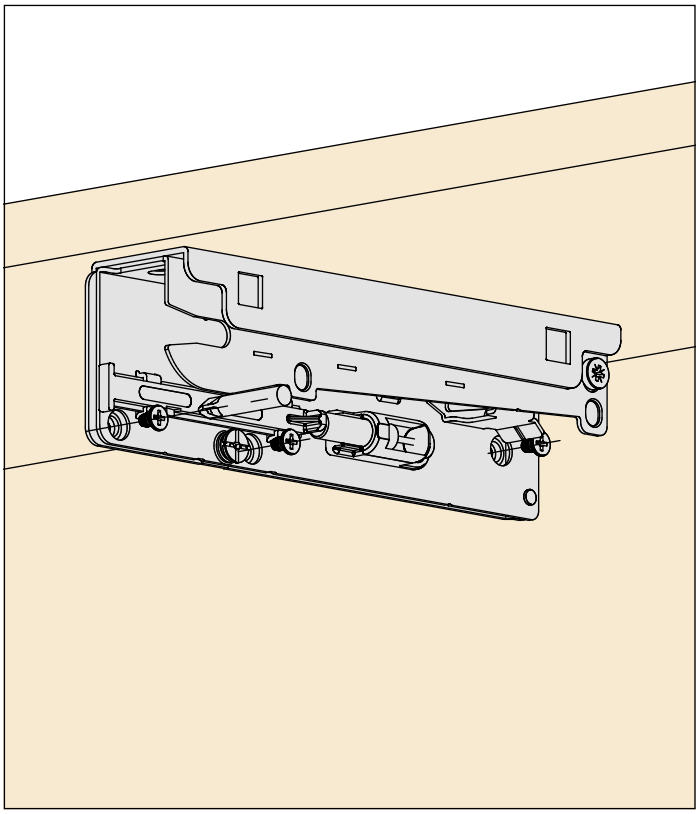



Unfasten the carriers.

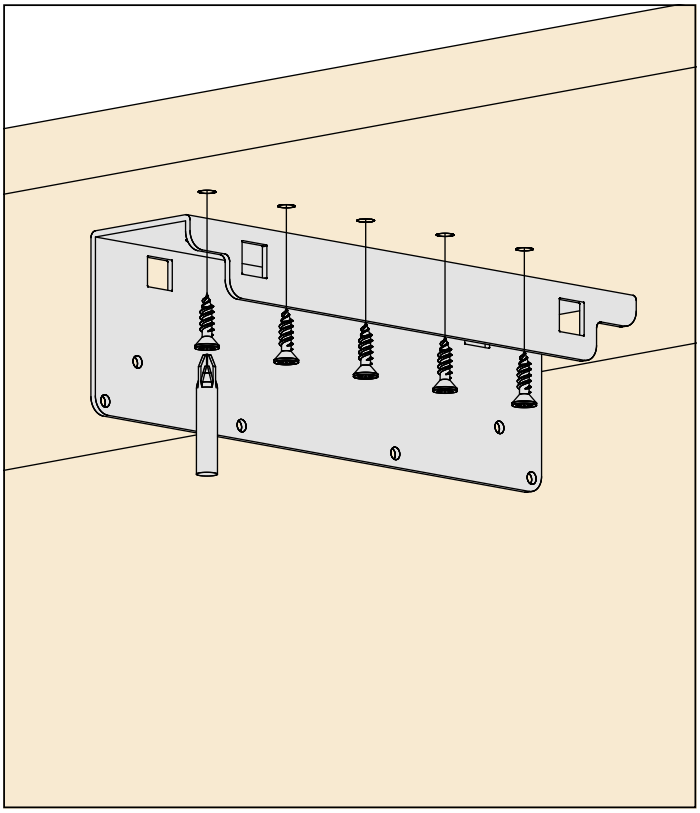

Applications of the carrier for wooden doors only


For cabinets that require a third hinge.

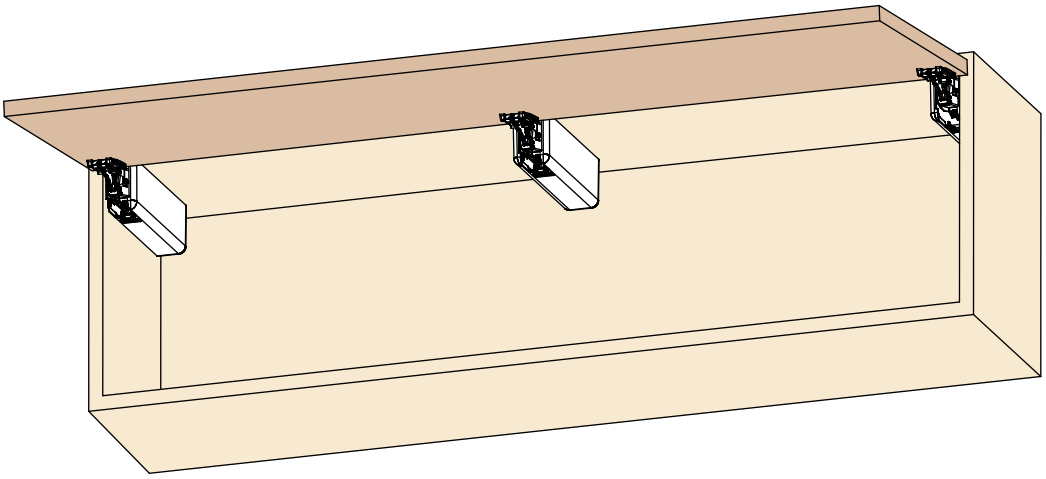


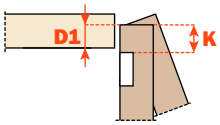


The carrier has a thickness of 3 mm.
The cabinet side drillings must be lowered accordingly.


K		D1
3	=	13
4	=	14
5	=	15
6	=	16
7	=	17

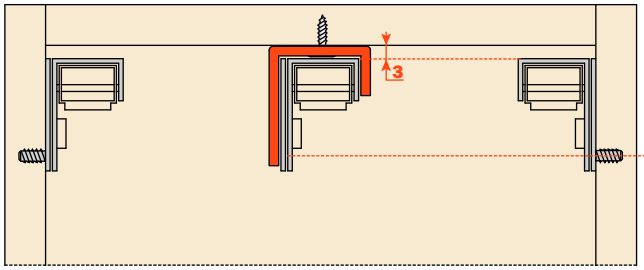

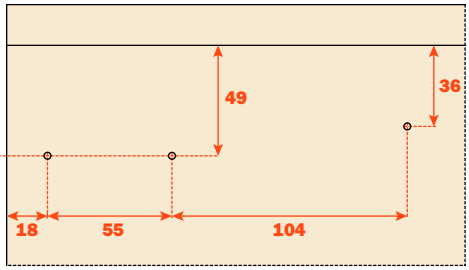

For corner cabinets.

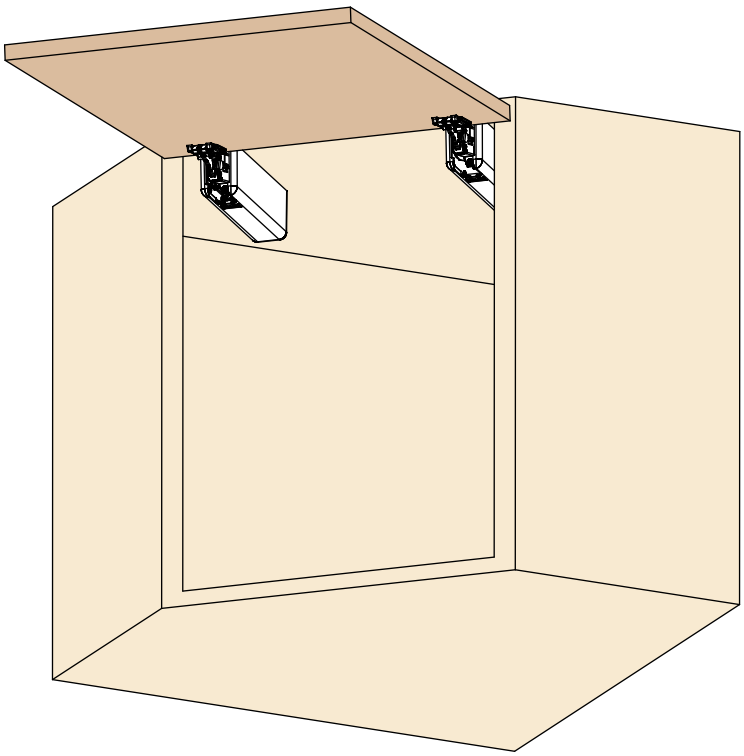

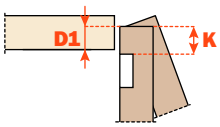

K		D1
3	=	13
4	=	14
5	=	15
6	=	16
7	=	17