



Pacta
Assembly instructions


Attaching the mounting plate to the cabinet

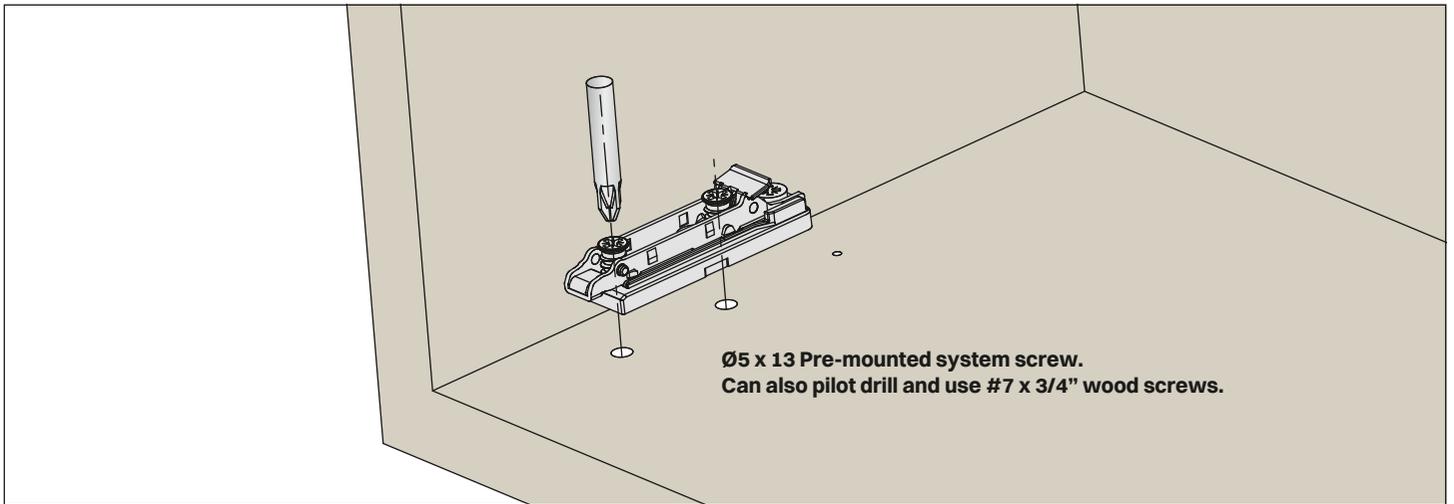


Attaching the hinge to the door

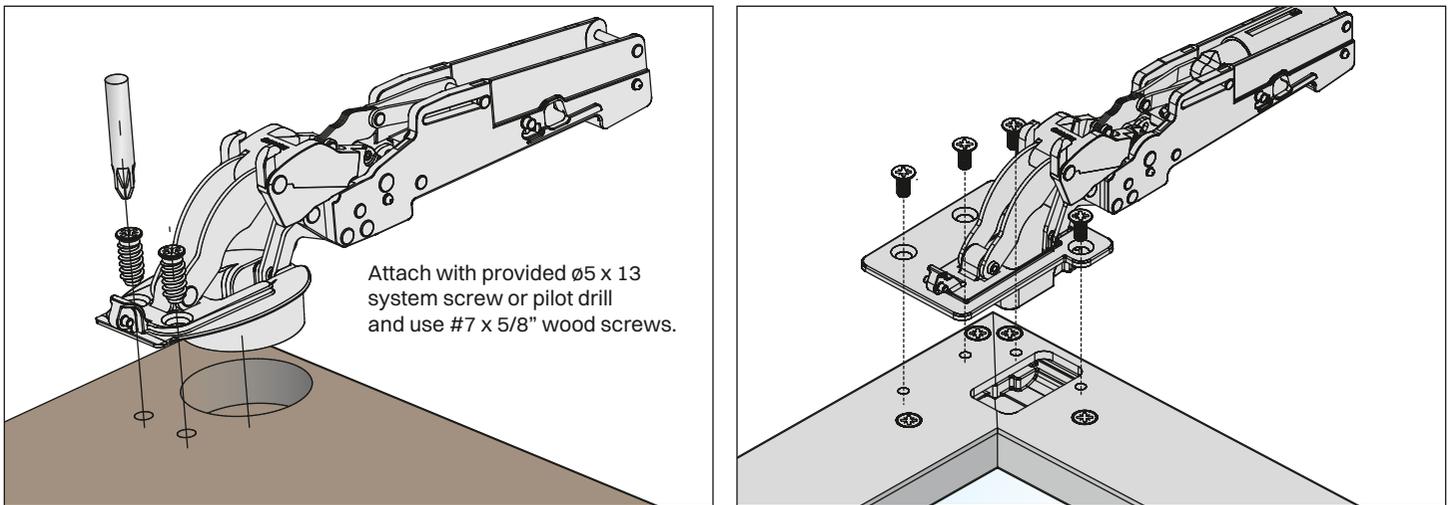


Attaching the door to the cabinet
Snap the hinge arm onto the mounting plates. This operation is tool free.

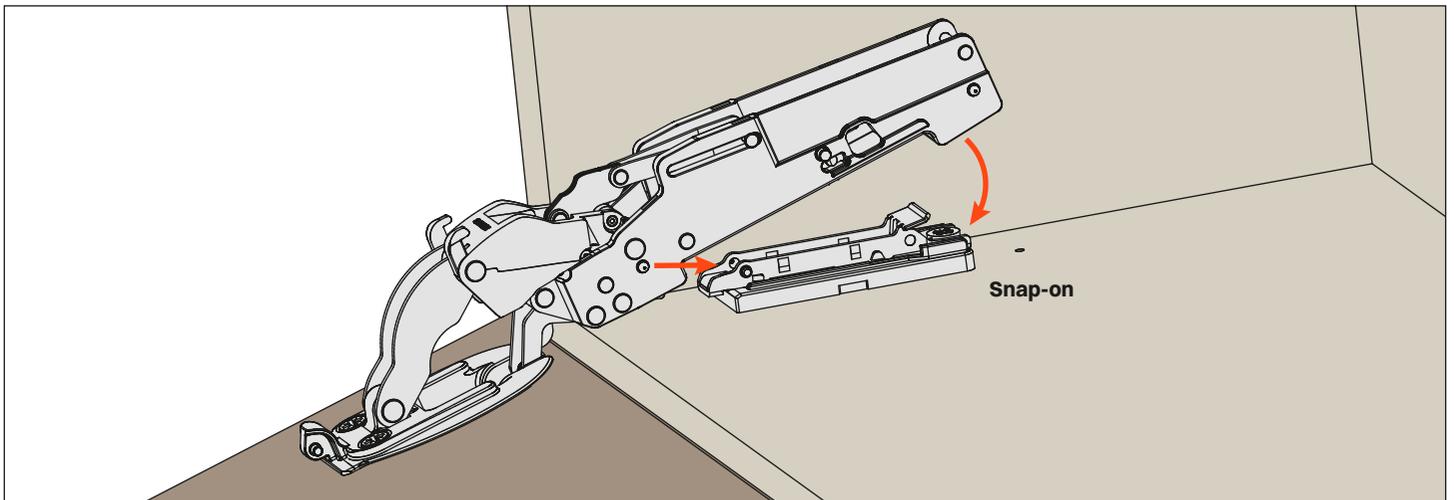

Adjustments

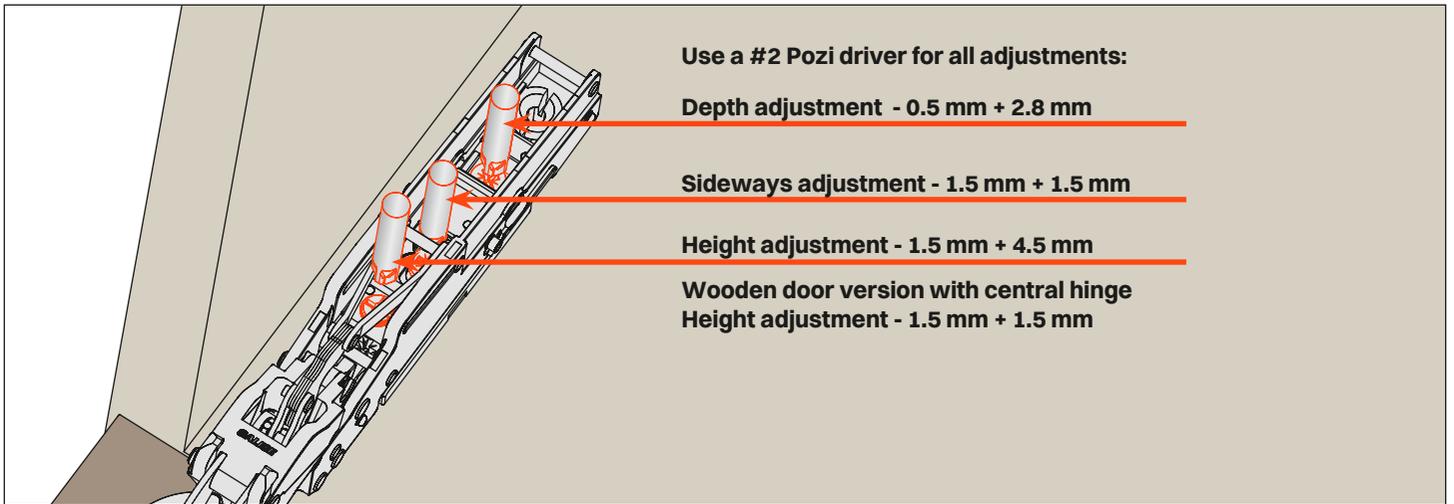


Attach the security wood screw

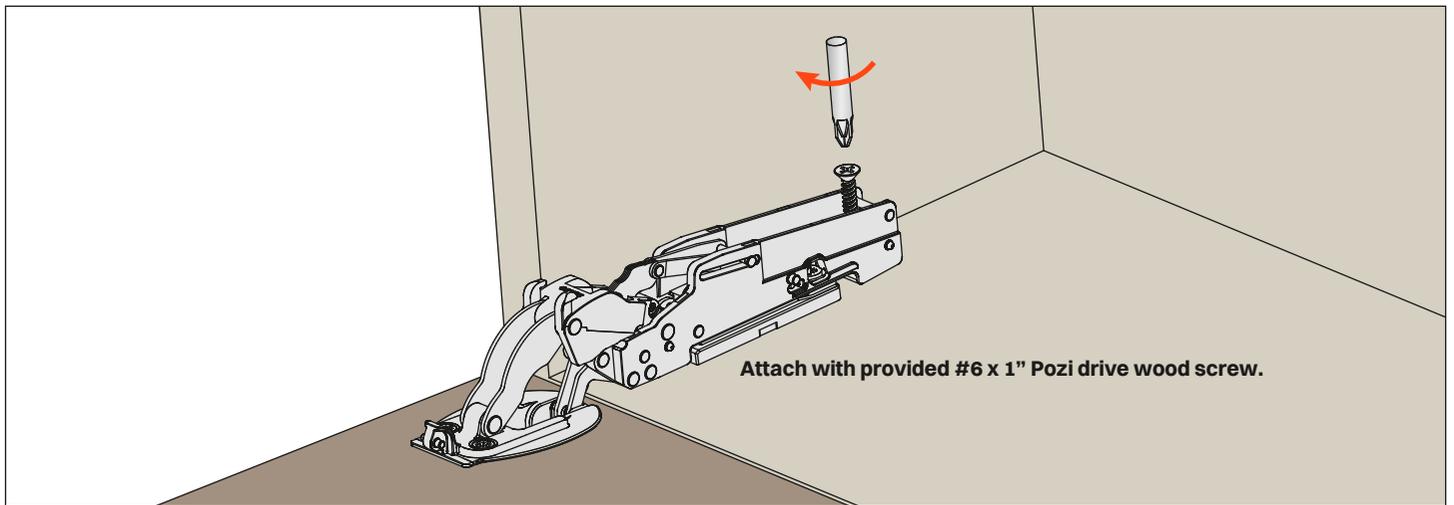


Installing the Smove

Snap the narrow end of the Smove into position. This operation is tool-free.

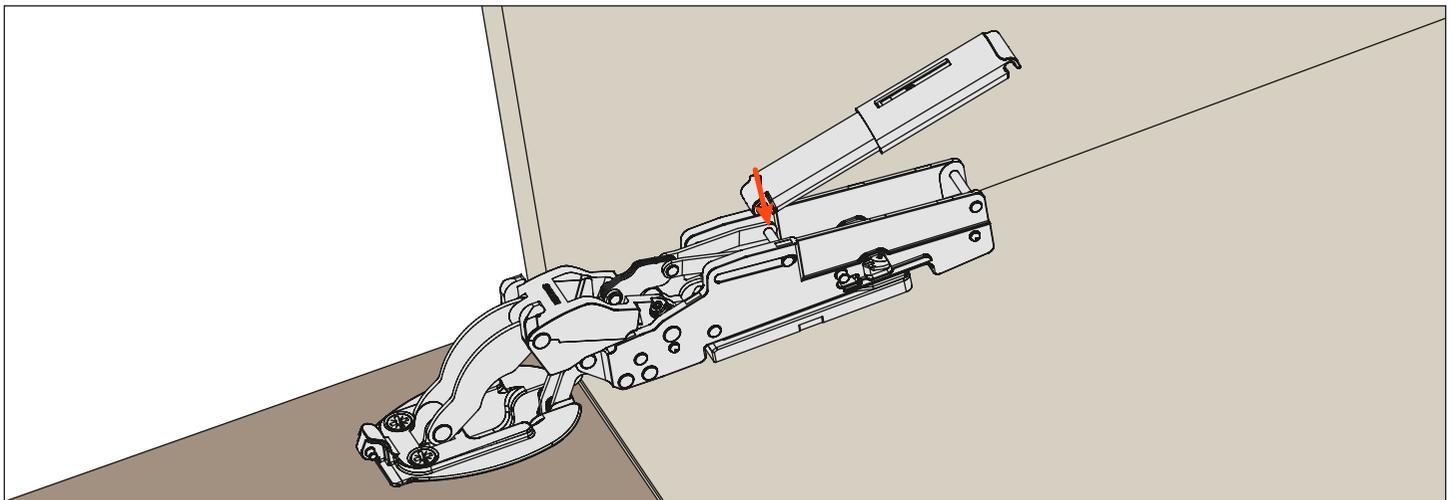



Pacta
 Assembly instructions

Lift the flap slightly and clip the other end of the Smove into position. This operation is tool free.


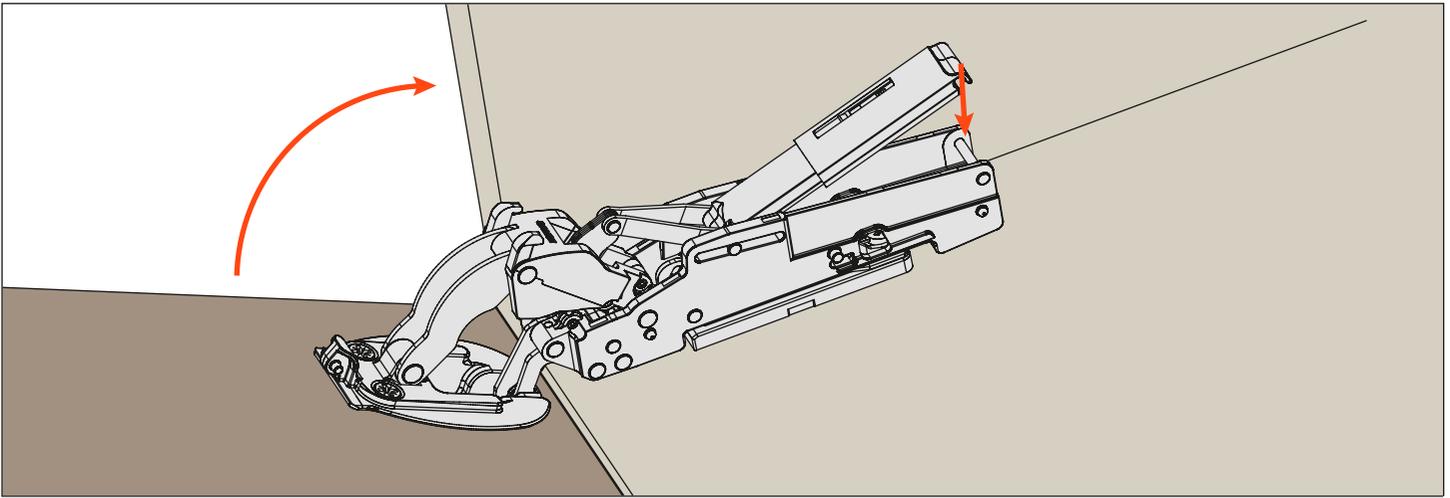


Installing the cover

Firstly install the cover on the hinge arm and then to the cup.

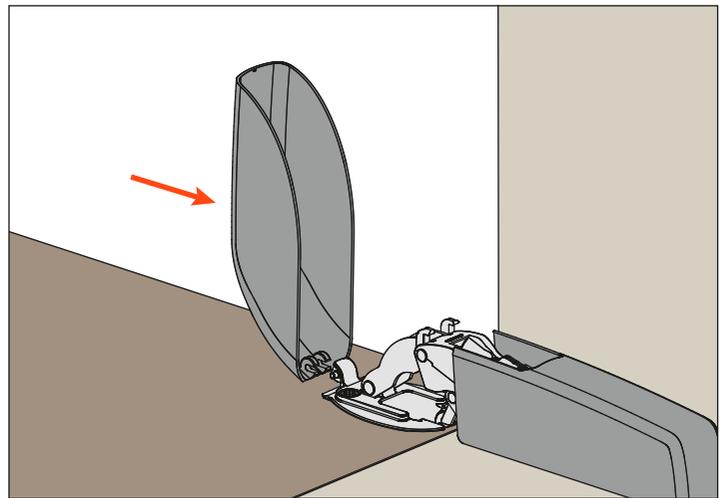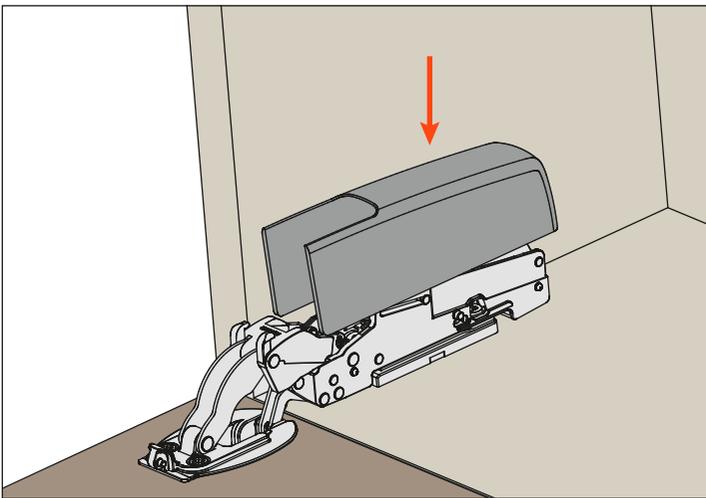

Dimensions

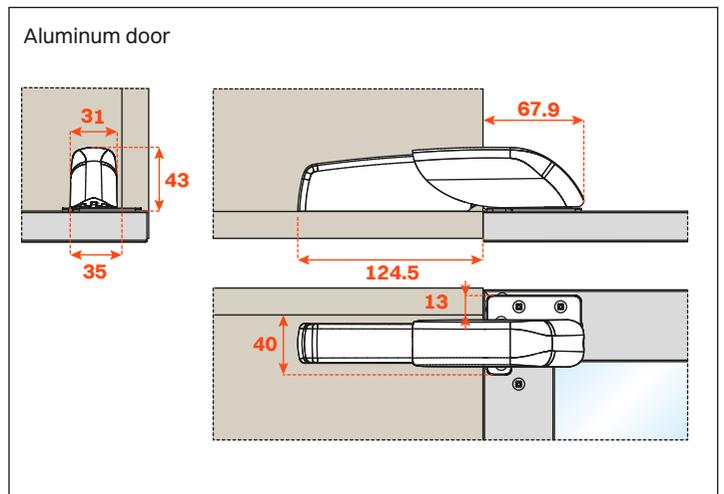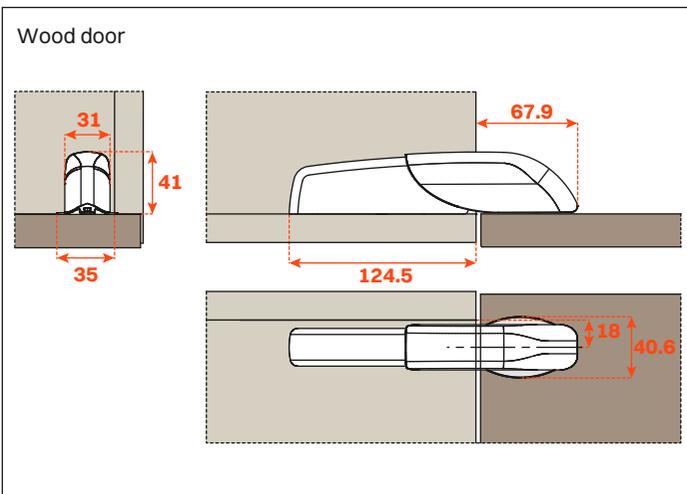


Assembly instructions for the center hinge

Installation of the center hinge.



Recommended to install a hinge for cabinets 30"/762 mm or wider.

Install the cover cap onto the hinge according to the drawing (step 1) and then screw the hinge to the cabinet (step 2).

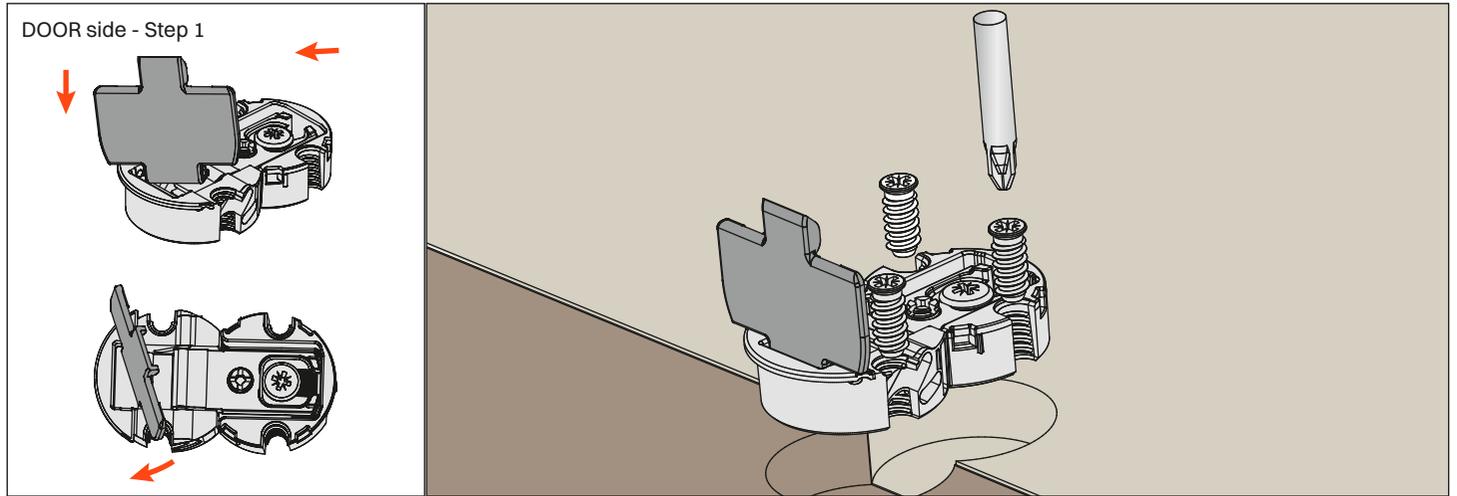


After attaching the hinge, make any adjustments required.
Use a #2 Pozzi driver for all adjustments.

Install the cover cap onto the hinge on the cabinet side.

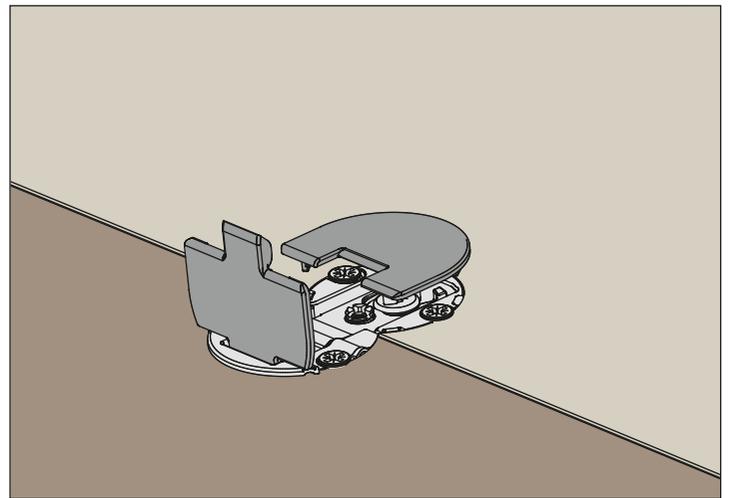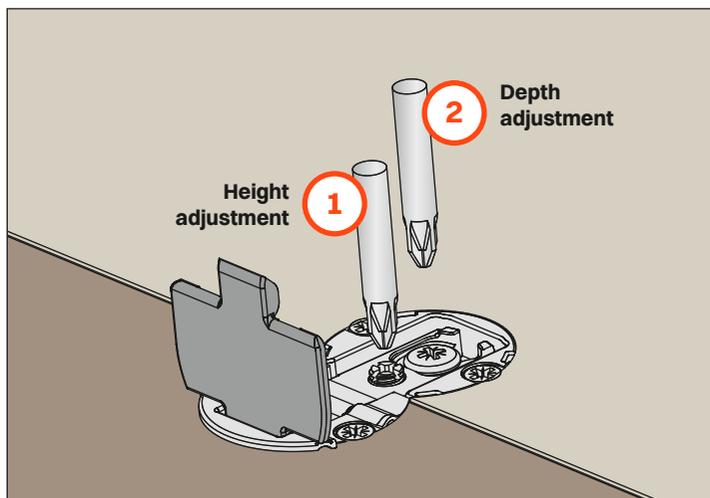

Overall view of the mounted system.

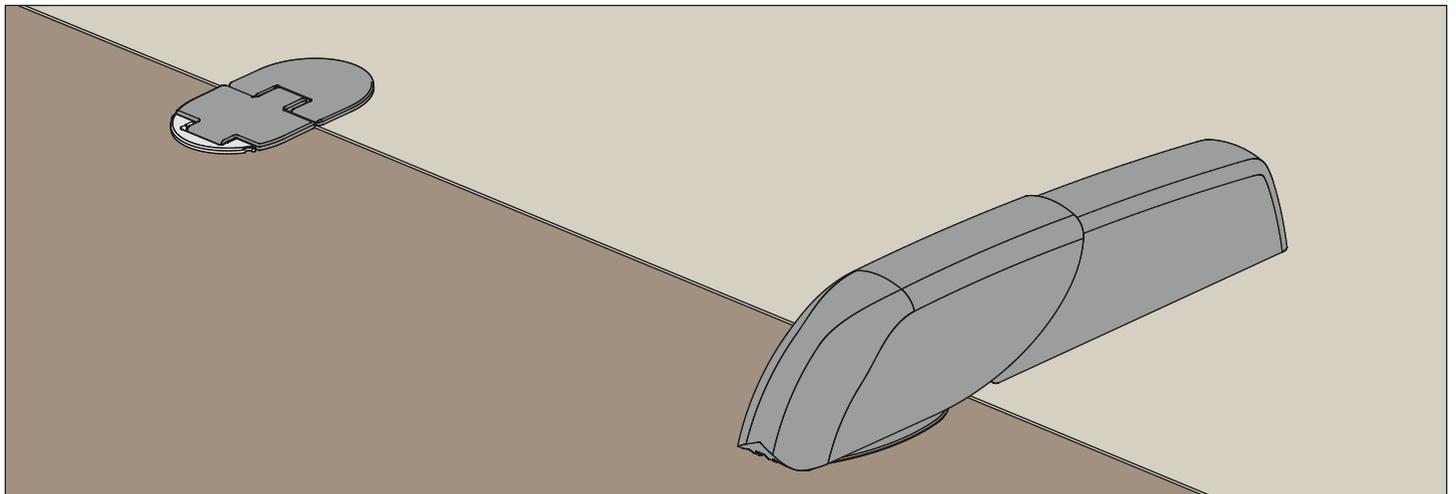


Pacta

Disassembly instructions


Removal of the cover

First remove the cover from the hinge cup (step 1), then the cover from the arm (step 2).

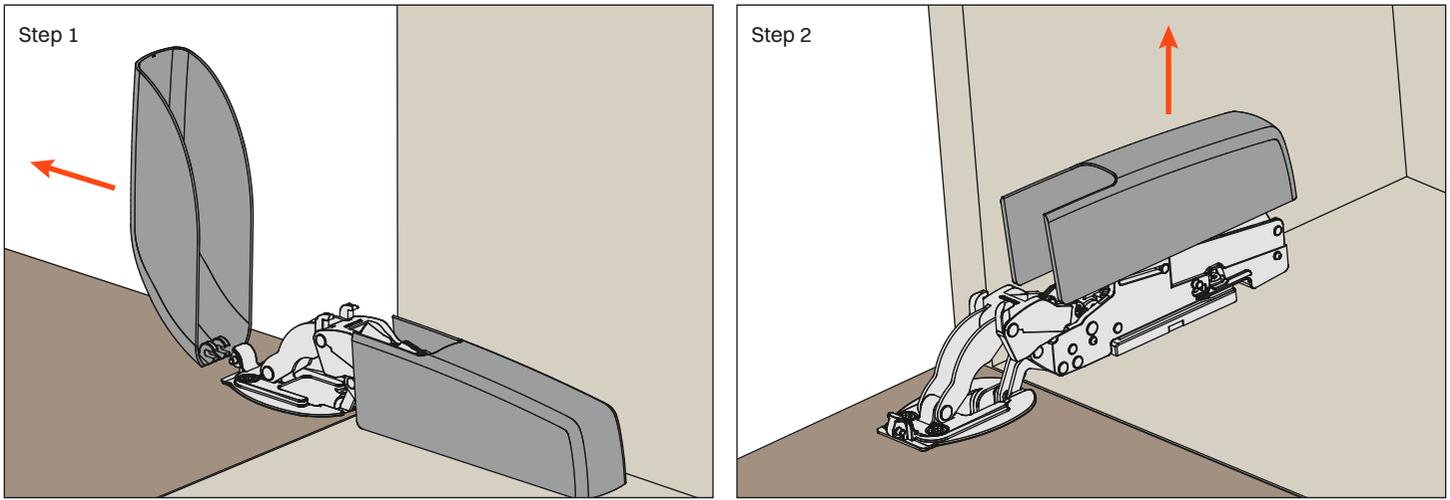


Removing the Smove from the hinge arm


Lift the door slightly and un-snap the back of the Smove using a screwdriver.

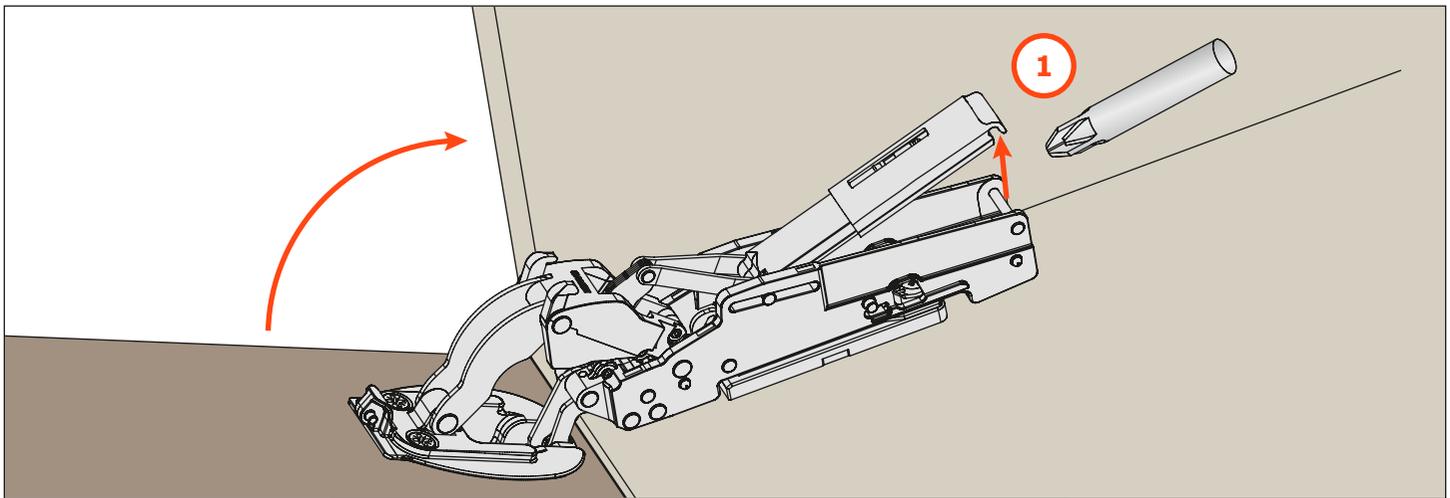

Un-snap the other end of the Smove.

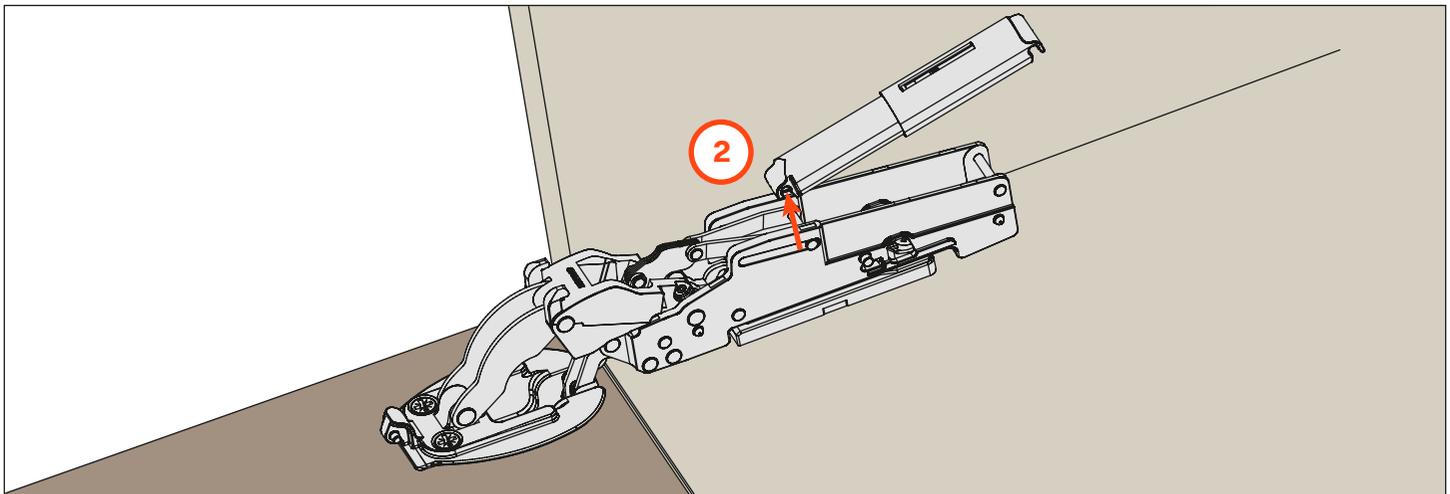

Remove the security screw

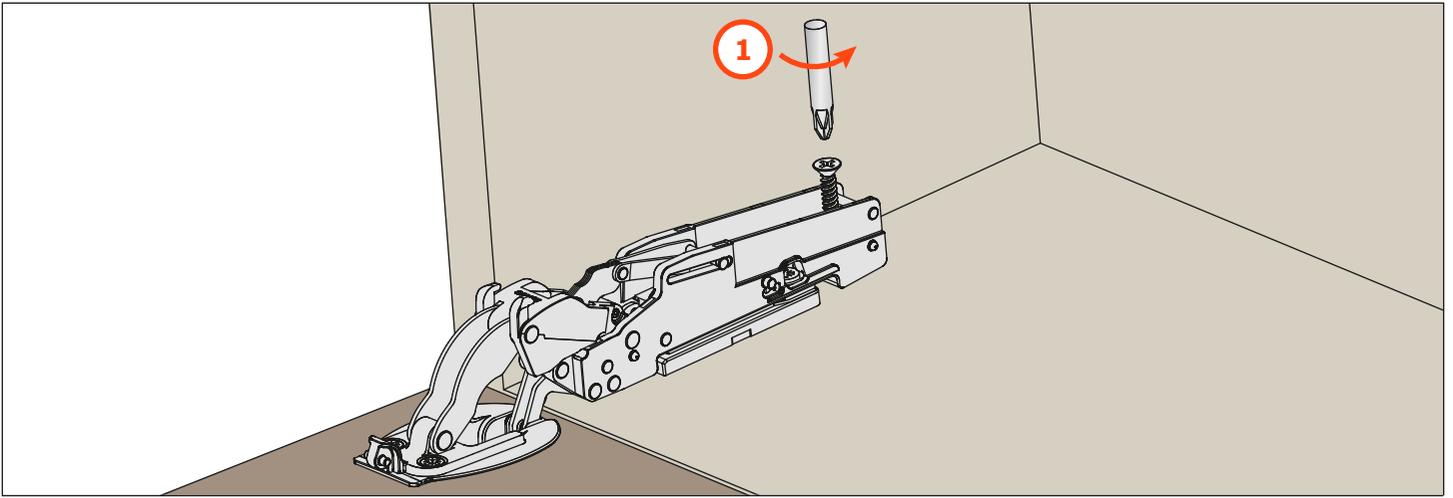

Un-snap the hinge from the mounting plate with a screwdriver

