


Excessories



Pull-out - technical information

4-SIDED drawer

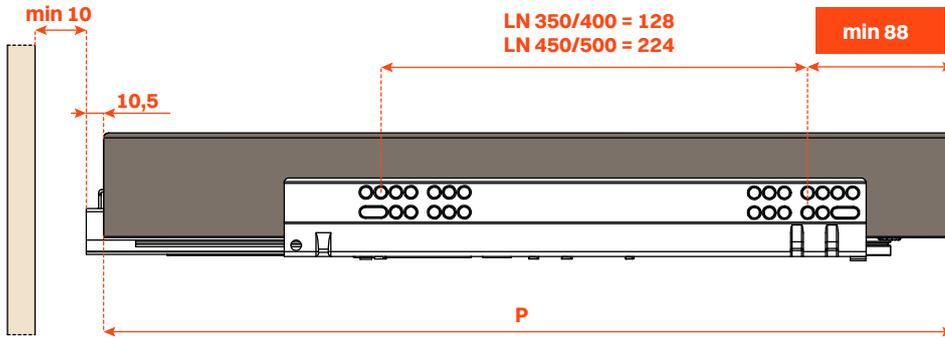



3-SIDED drawer

For wooden frontal, 12 mm thick

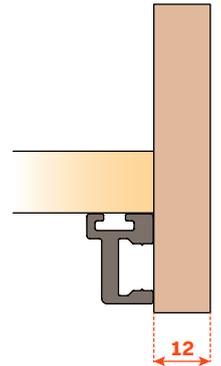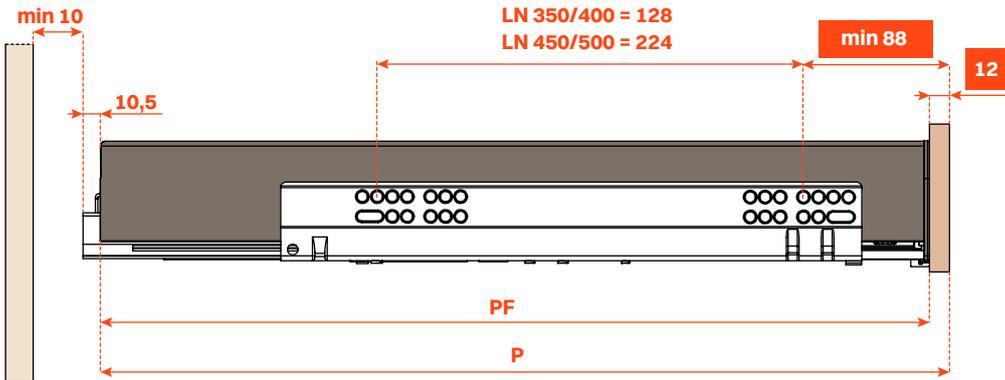


3-SIDED drawer

For glass frontal, 6 mm thick + profile, 6 mm thick

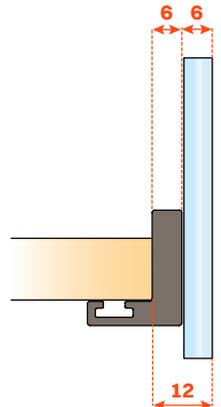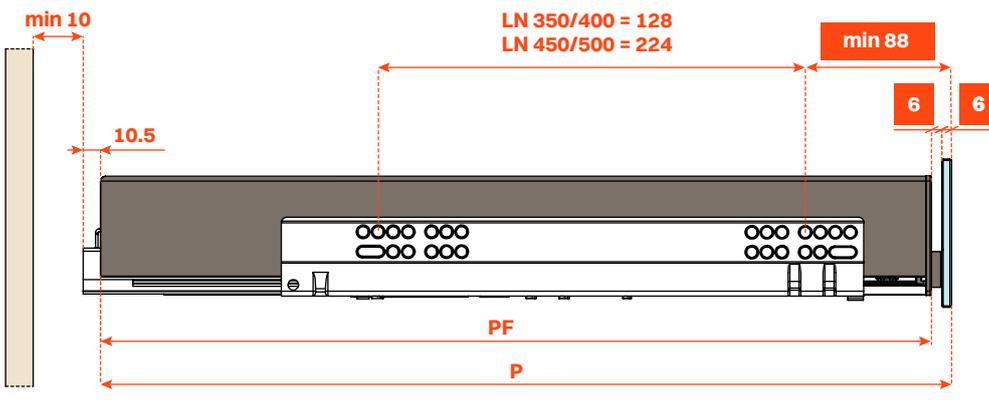


3-SIDED drawer

For wooden frontal, 19 mm thick

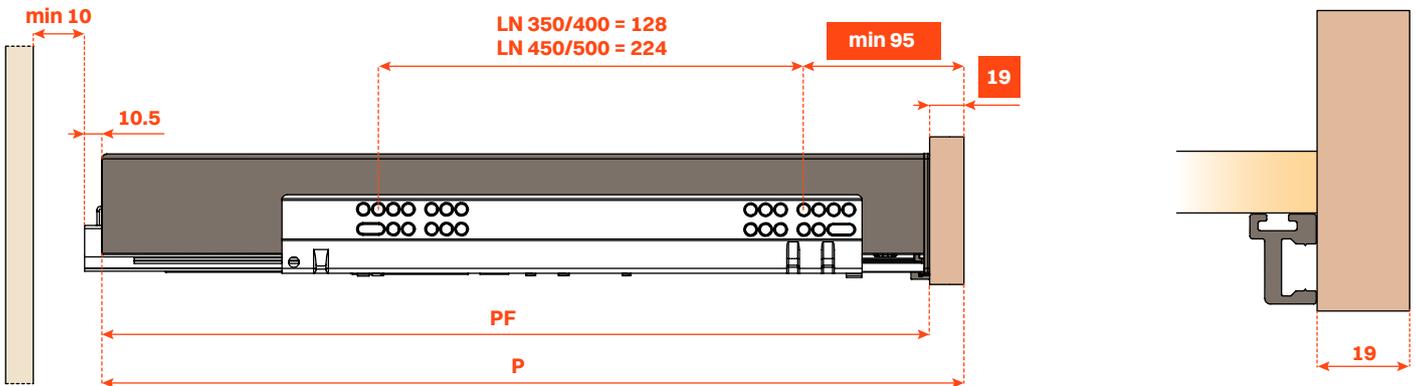

3-SIDED drawer

For glass frontal, 6 mm thick + profile, 13 mm thick

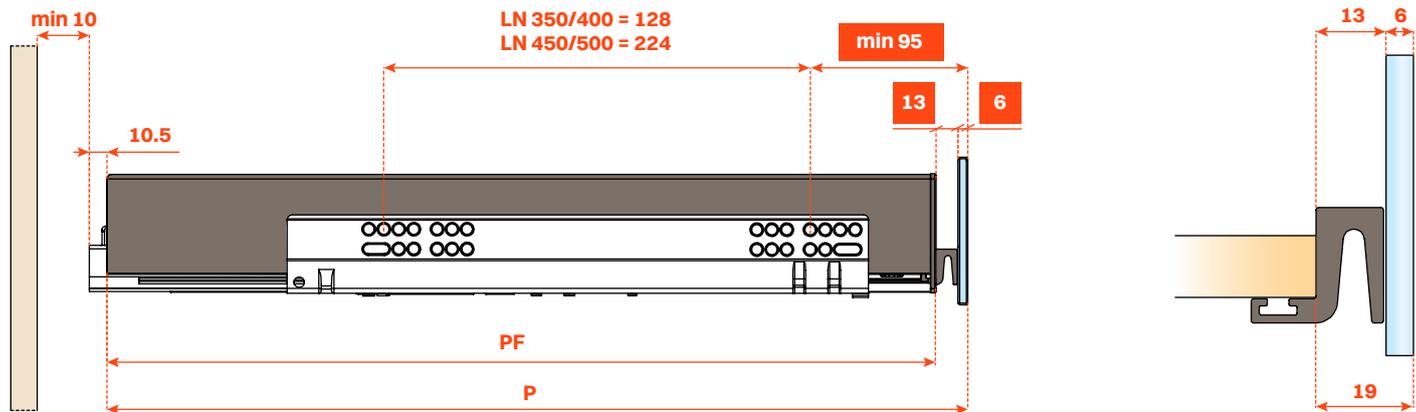


Runner length (LN) mm	Drawer depth (PF) mm	4-SIDED Drawer depth (P) mm	3-SIDED Drawer depth (P) mm + wooden frontal, 12 mm thick or glass frontal, 6+6 mm thick	3-SIDED Drawer depth (P) mm + wooden frontal, 19 mm thick or glass frontal, 6+13 mm thick
350	378	390	390	397
400	428	440	440	447
450	478	490	490	497
470	498	510	510	517
500	528	540	540	547

Excessories


Pull-out - assembly instructions

WOODEN FRONTAL


1. Screw the first cap to the frontal

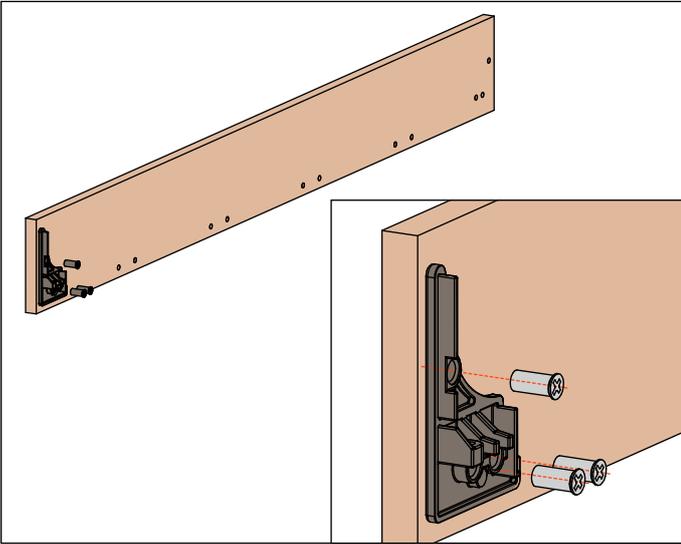


2. Screw the connecting elements to the frontal

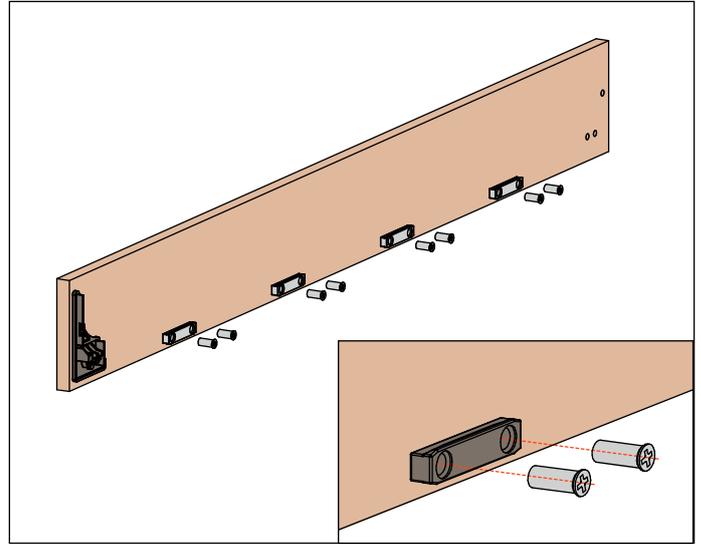


3. Insert and slide the front profile on the connecting elements

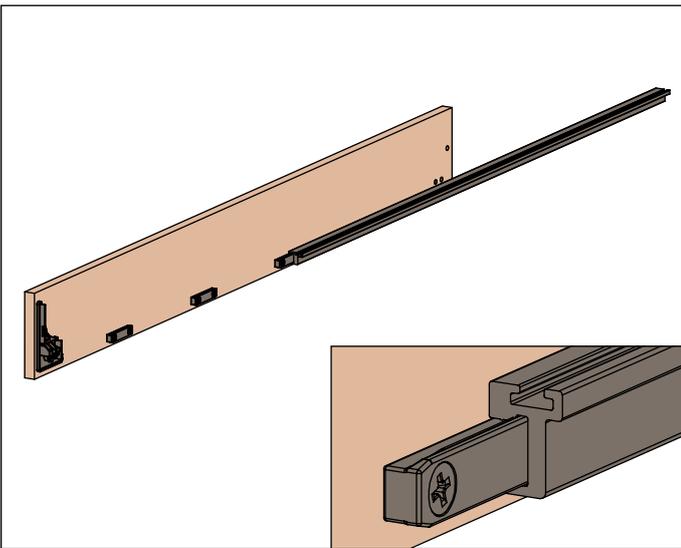


4. Screw the second cap to the frontal

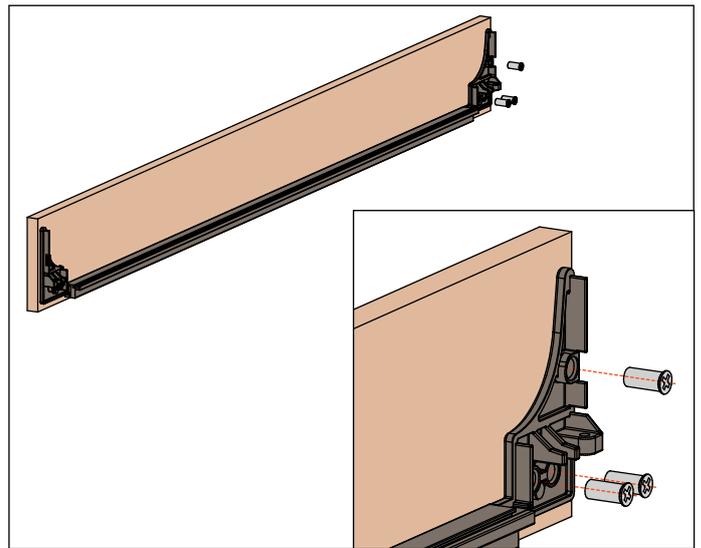

5. Insert the caps in both sides

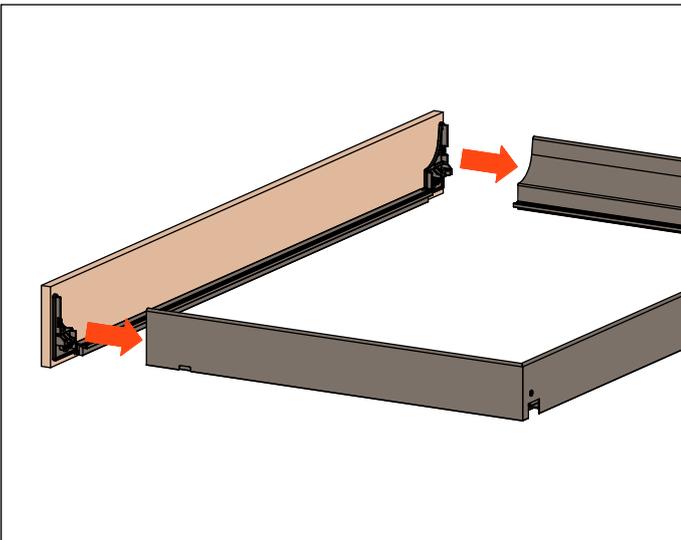


6. Fix the frontal to the drawer

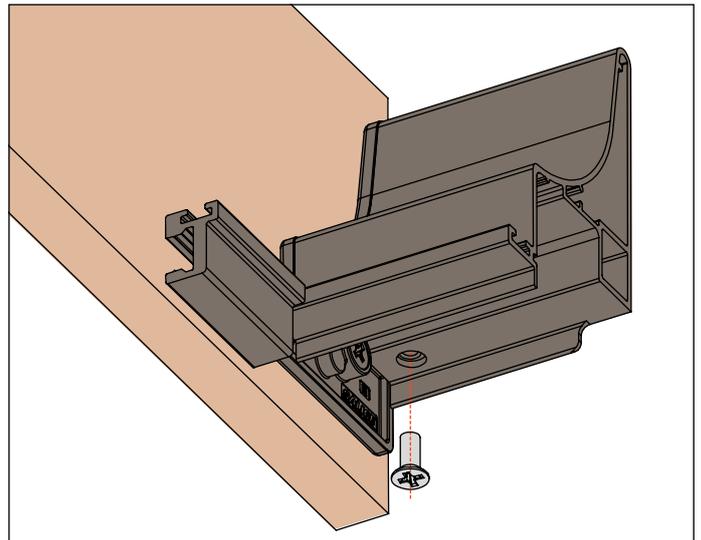


GLASS FRONTAL


1. Screw the caps to the front profile

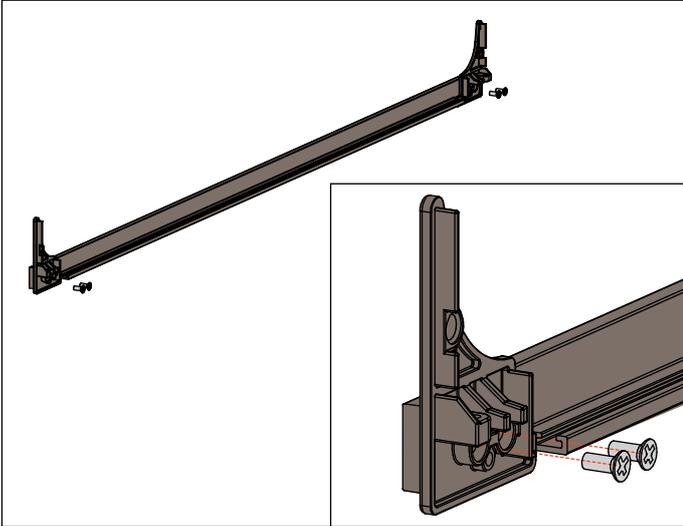


2. Remove the protective film from the adhesive tape that is pre-glued to the profile

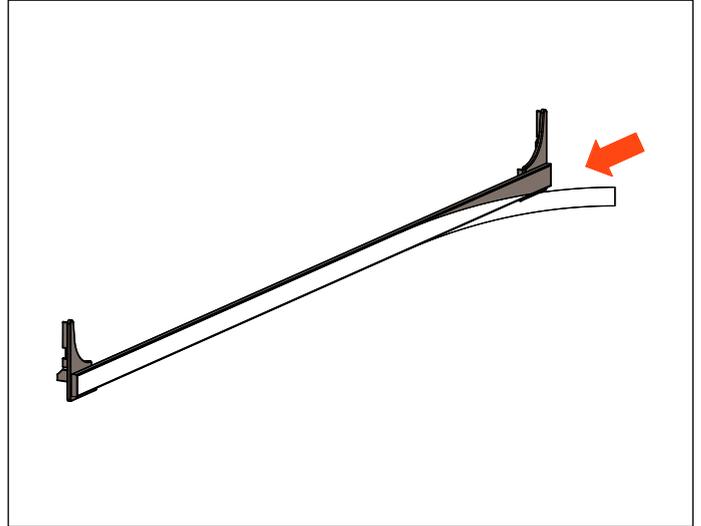


3. Press the profile firmly onto the glass

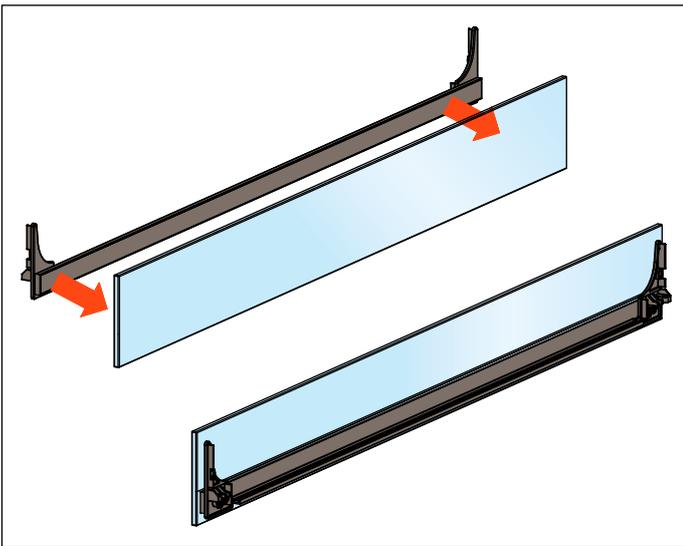


4. Insert the caps in both sides

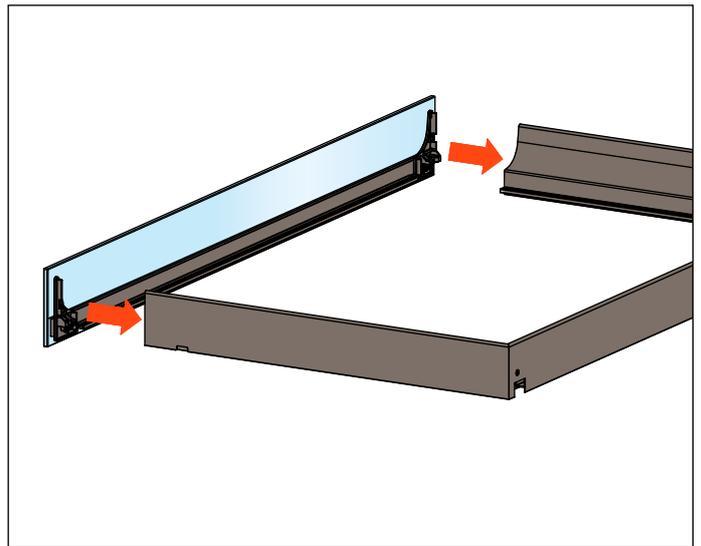

5. Fix the frontal to the drawer

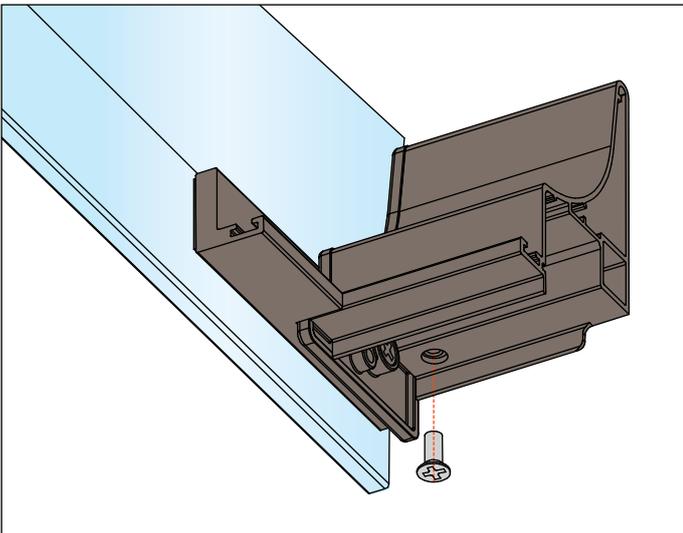

6. Insert the grub screw and rotate it to adjust the frontal

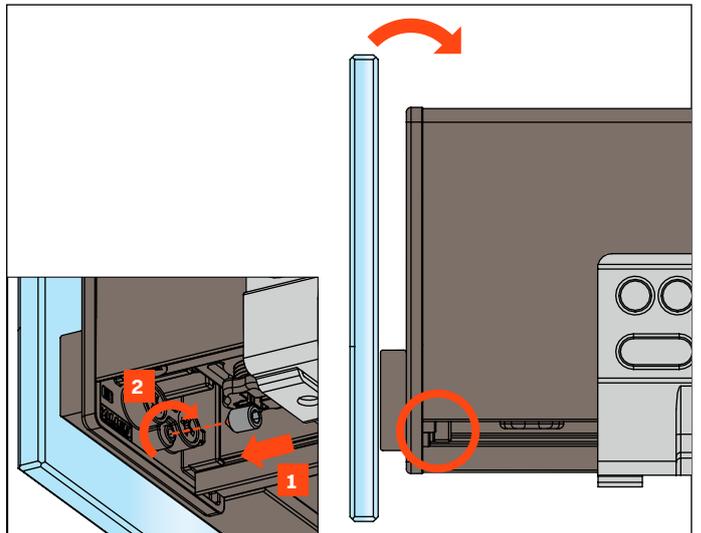


Excessories

Pull-out - technical information



Mounting the drawer onto the runners

1. Place the drawer on the runners and close it
2. The flexibility of the fixing system enables the clips to engage
3. Engage the locking pin to prevent the overturning of the drawer
4. Locate the rear hooks

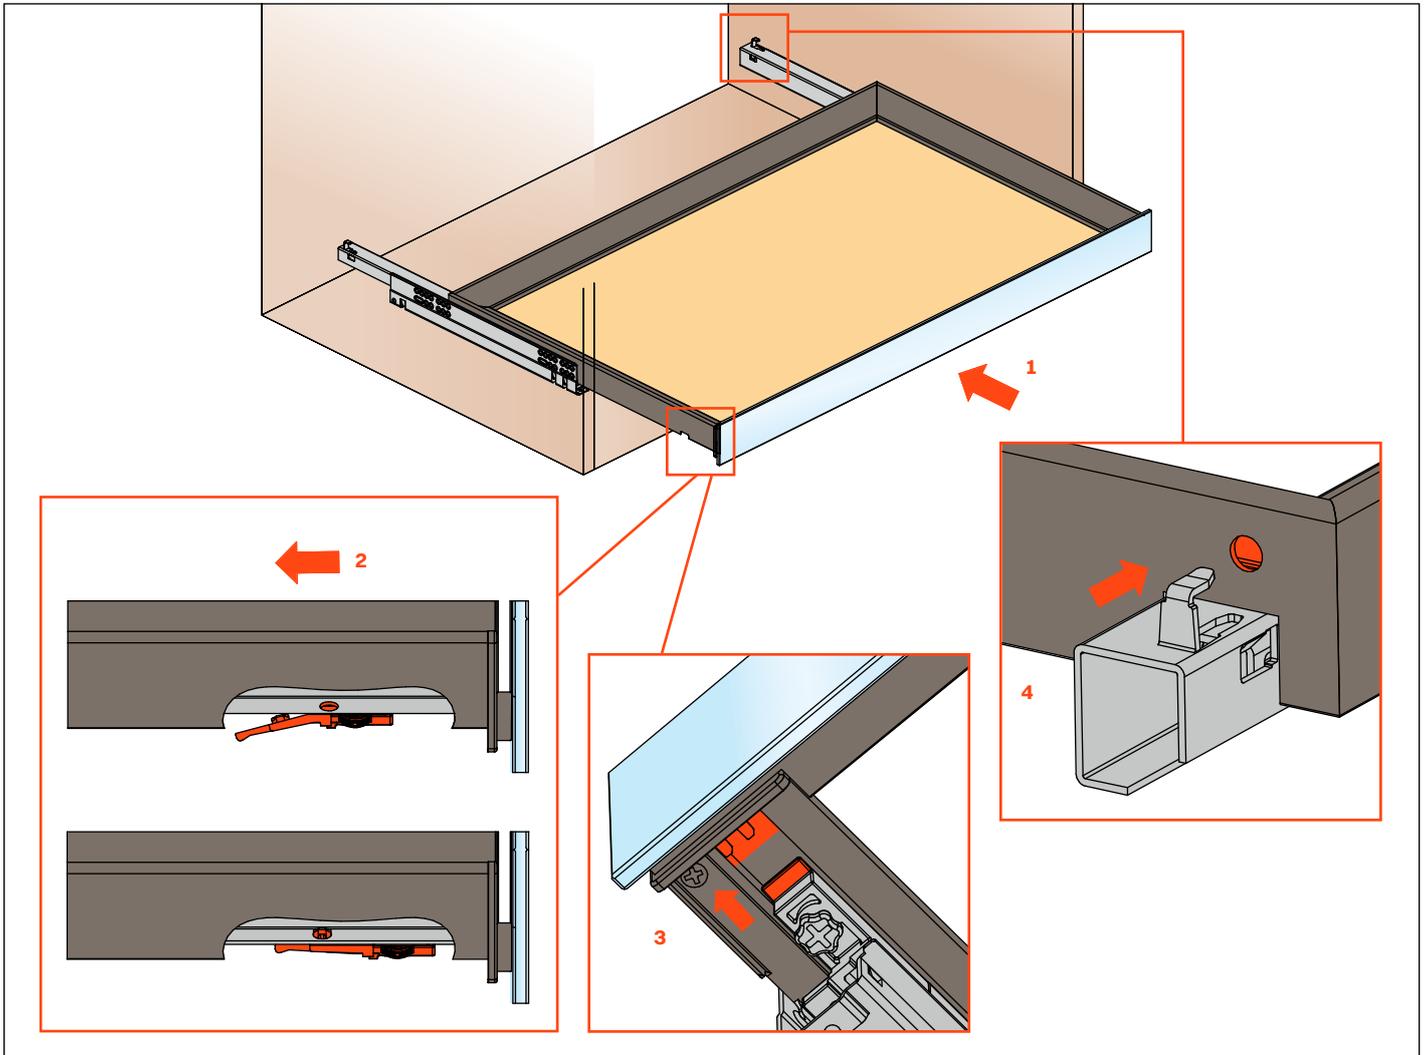

Disassembly of the drawer


1. Open the drawer
2. Press down the lever indicated here below and pull out the drawer

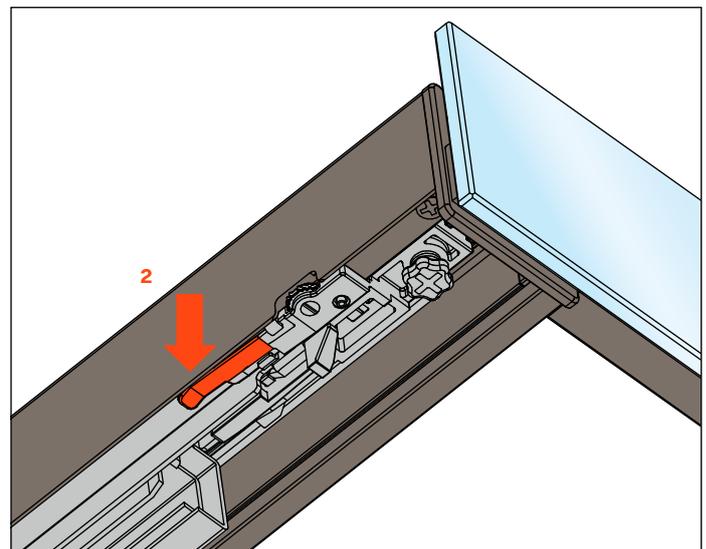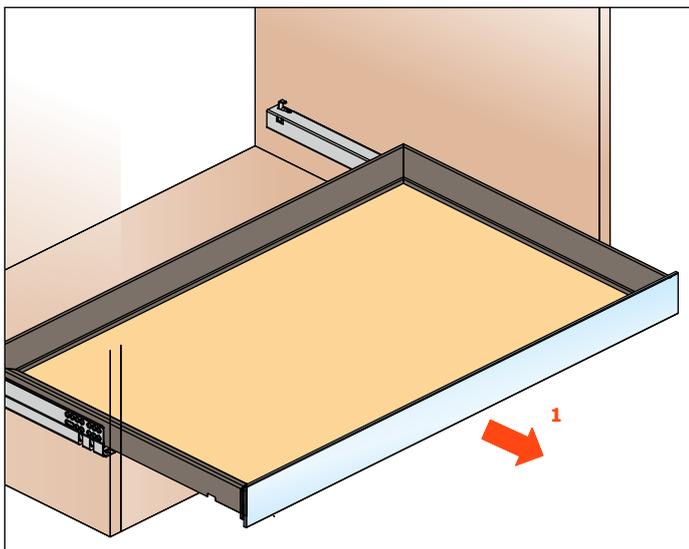

Adjustments


Depth adjustment +2 -2 mm

Rotate the wheel towards the front of the drawer to move the drawer forward.
Rotate the wheel towards the back of the drawer to move the drawer backward.
This operation is tool free.

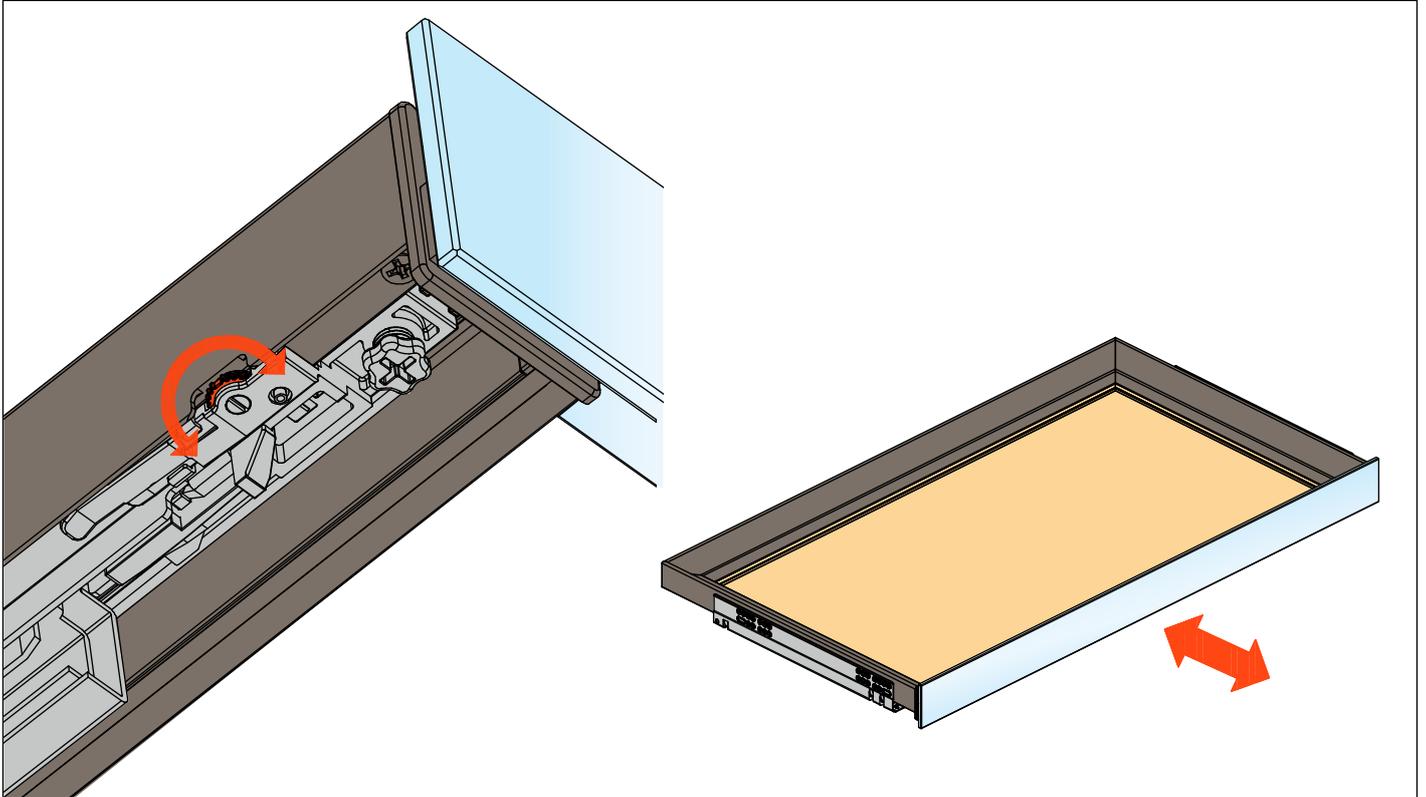

Height adjustment + 5 mm

Rotate the lever towards the front of the drawer for the height adjustment.
This operation is tool free.

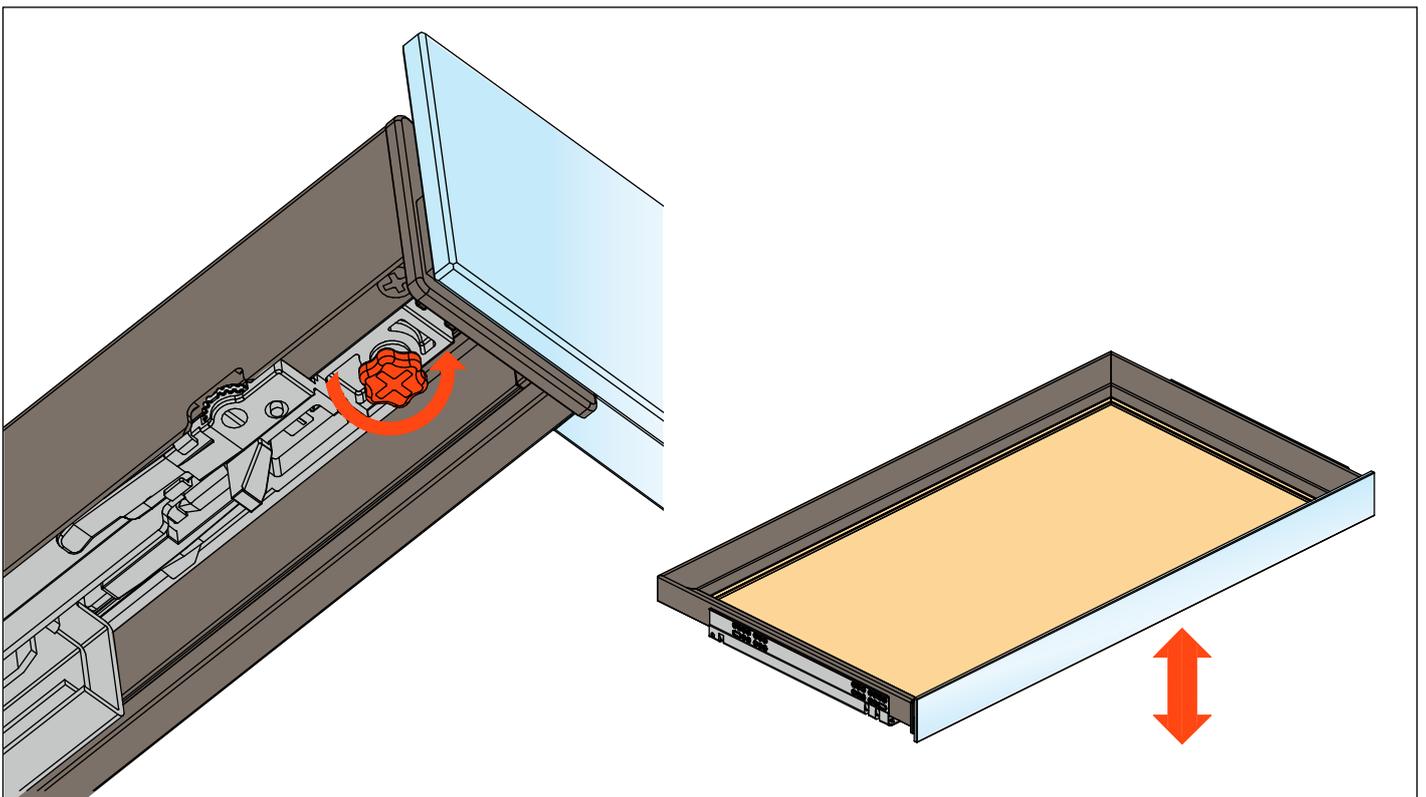


Excessories

Pull-out - drawers alignment


With the same side drilling, 4-sided drawers are **frontally aligned** with 3-sided drawers with wooden frontal (12 mm thickness) and with 3-sided drawers with glass frontal (6 mm thickness + 6 mm profile thickness), as illustrated below.

With the same side drilling, 4-sided drawers are **not frontally aligned** with 3-sided drawers with wooden frontal (19 mm thickness) and with 3-sided drawers with glass frontal (6 mm thickness + 13 mm profile thickness), as illustrated below.

4-SIDED drawer

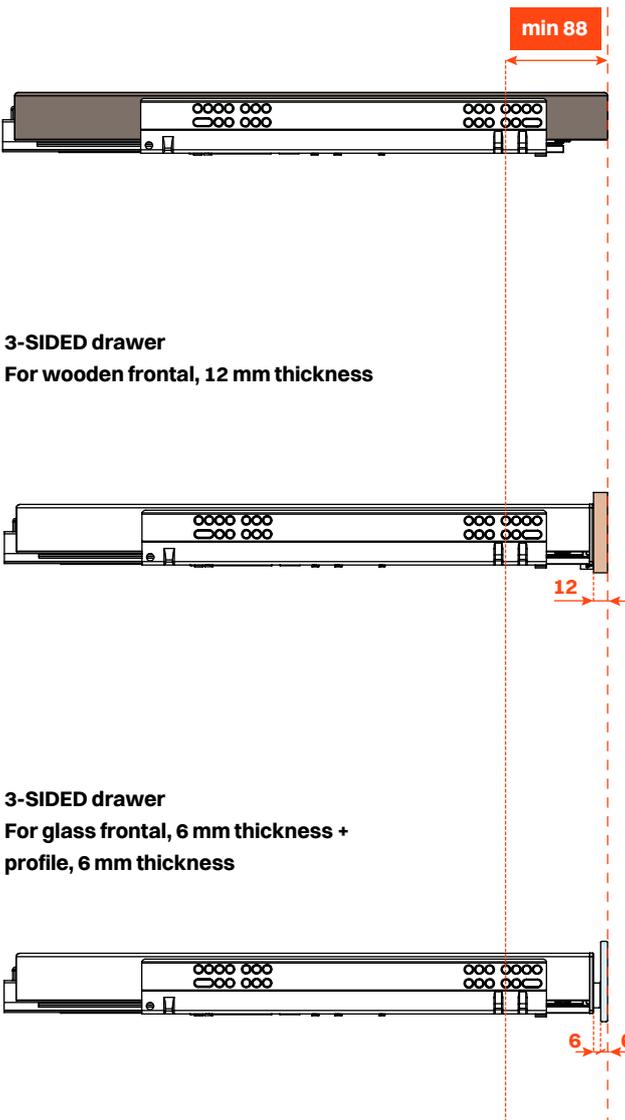

4-SIDED drawer

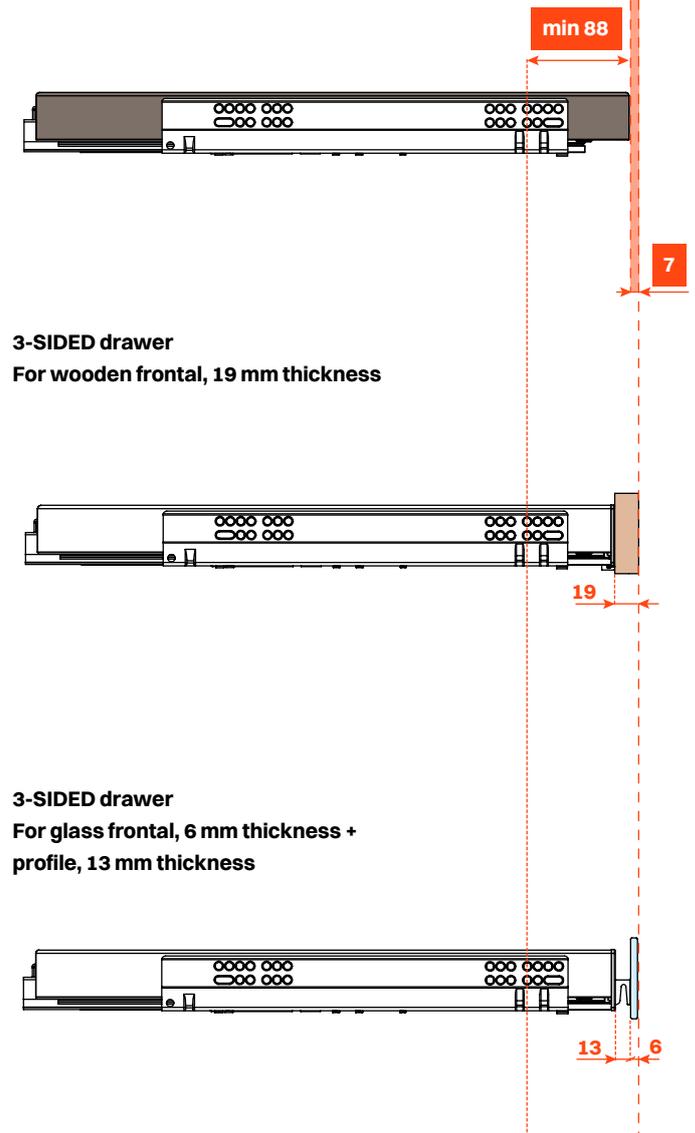

3-SIDED drawer

For wooden frontal, 12 mm thickness

3-SIDED drawer

For wooden frontal, 19 mm thickness

3-SIDED drawer

For glass frontal, 6 mm thickness +
profile, 6 mm thickness

3-SIDED drawer

For glass frontal, 6 mm thickness +
profile, 13 mm thickness