
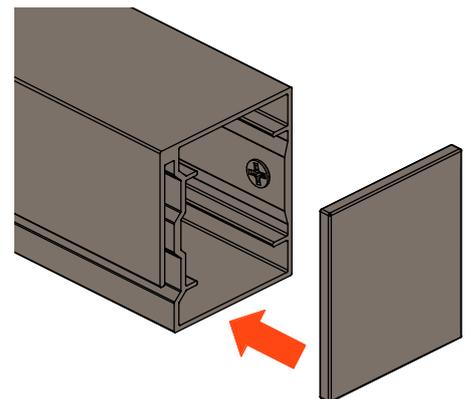
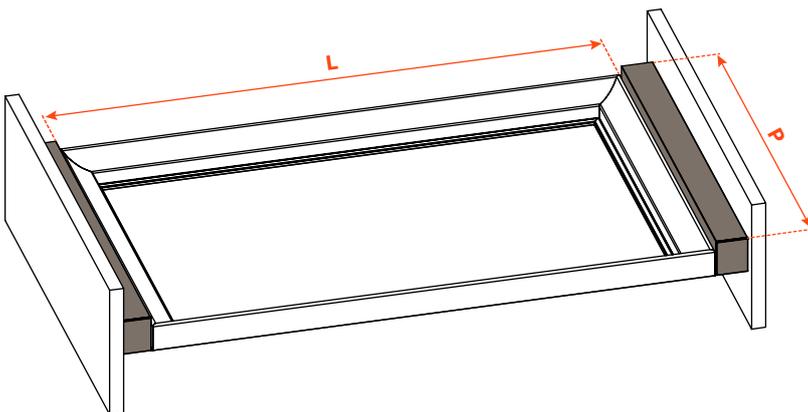
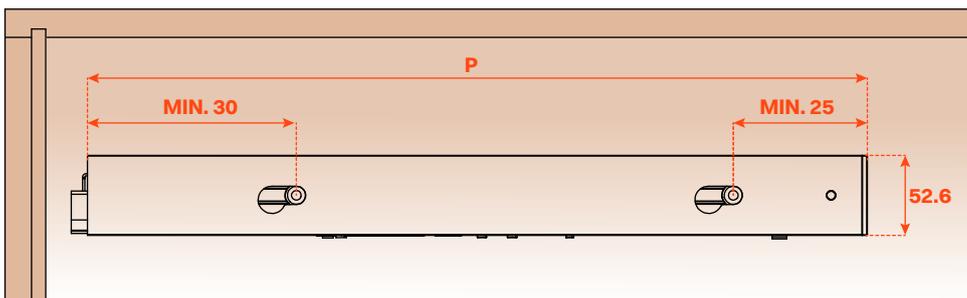


# Spacers

## Spacers

- Material: epoxy-coated aluminium
- Finish:
  - metal grey brown
  - desert taupe
- Packaged with the drawer

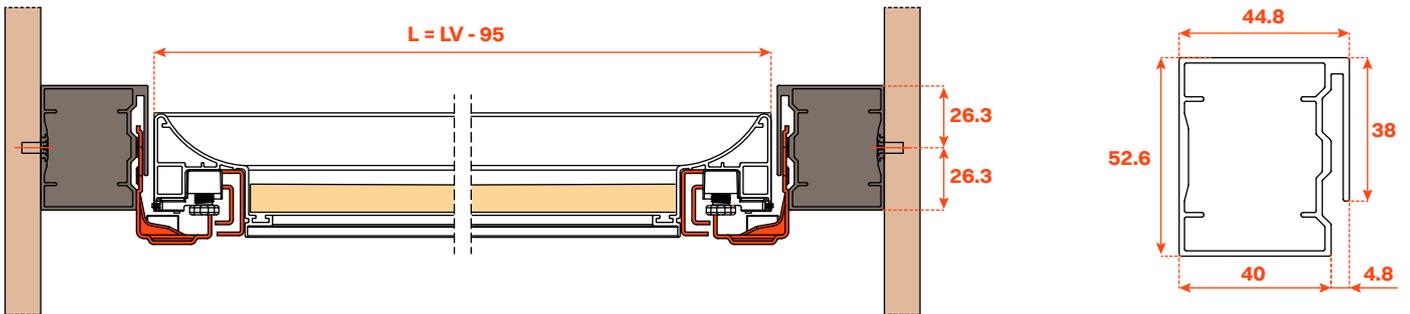

Runner length (LN) mm	4-SIDED Drawer/spacer depth (P) mm	3-SIDED Drawer/spacer depth (P) mm + wooden frontal 12 mm or glass frontal 6+6 mm	3-SIDED Drawer/spacer depth (P) mm + wooden frontal 19 mm or glass frontal 6+13 mm
350	390	390	397
400	440	440	447
450	490	490	497
470	510	510	517
500	540	540	547




# Excessories

Pull-out - spacers

Spacers with 3-SIDED drawer  
for WOODEN FRONTAL





## Frontal drillings

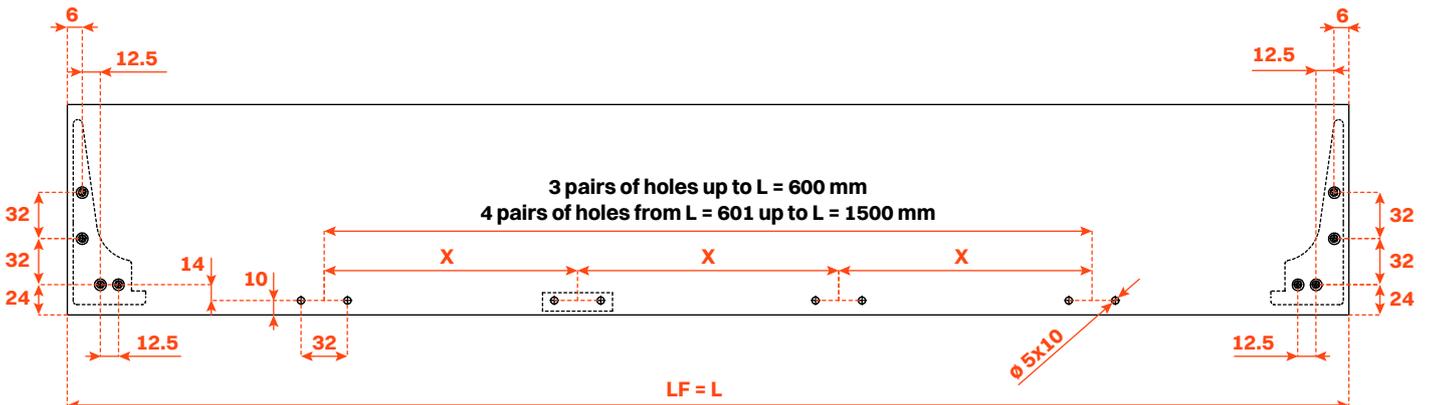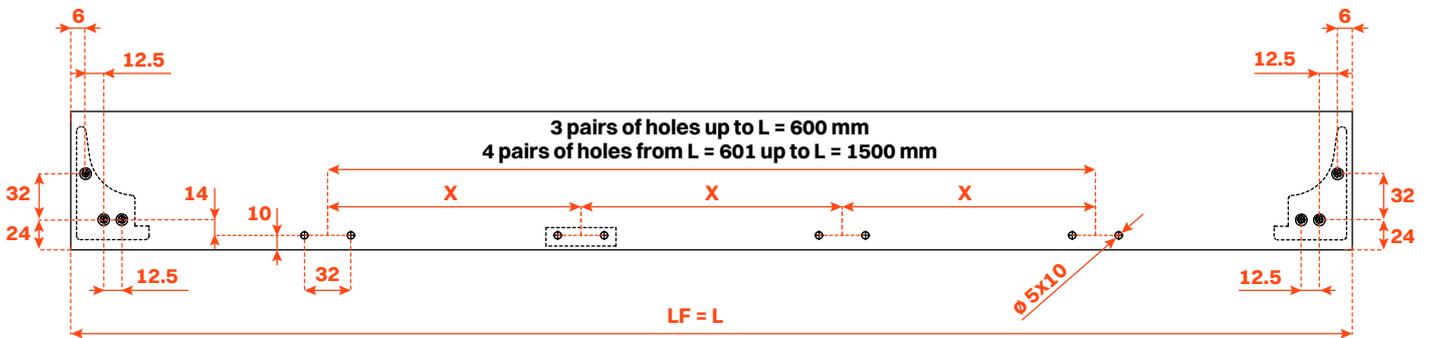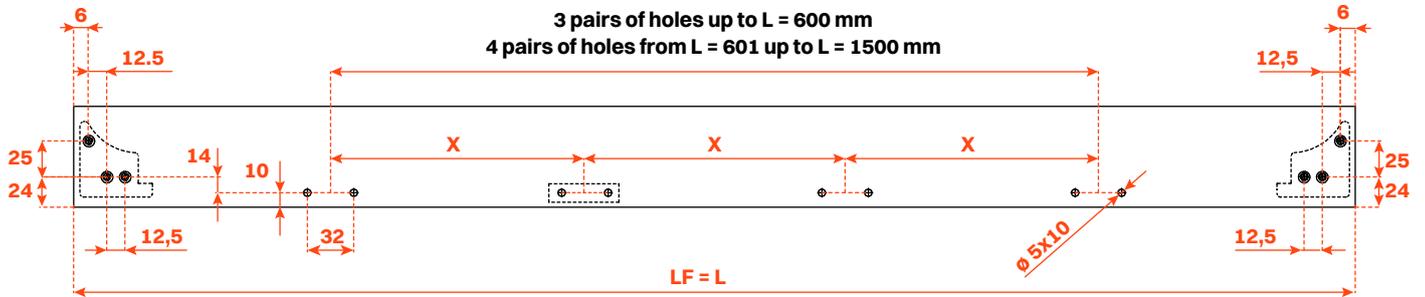

Spacers with 3-SIDED drawer  
for GLASS FRONTAL



Fixing the profile to the frontal

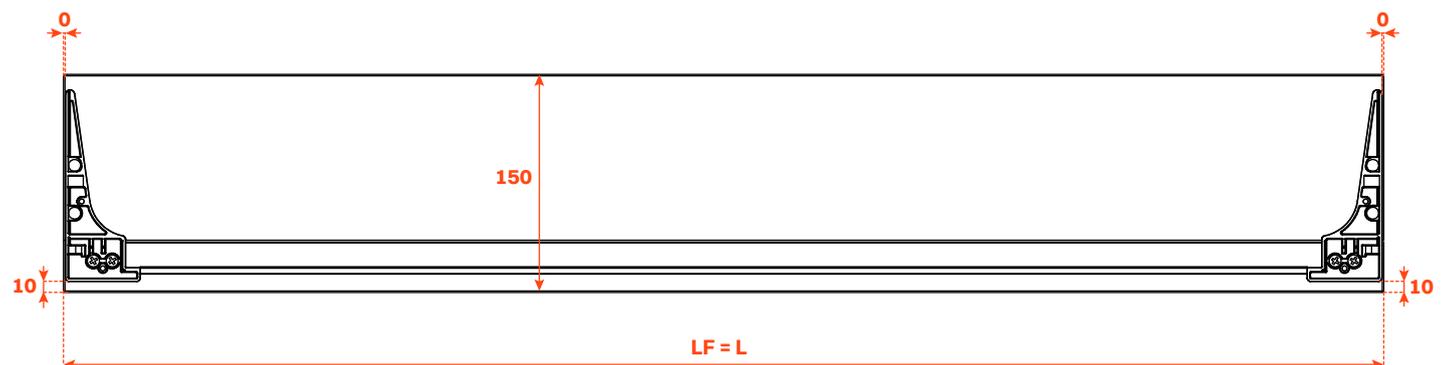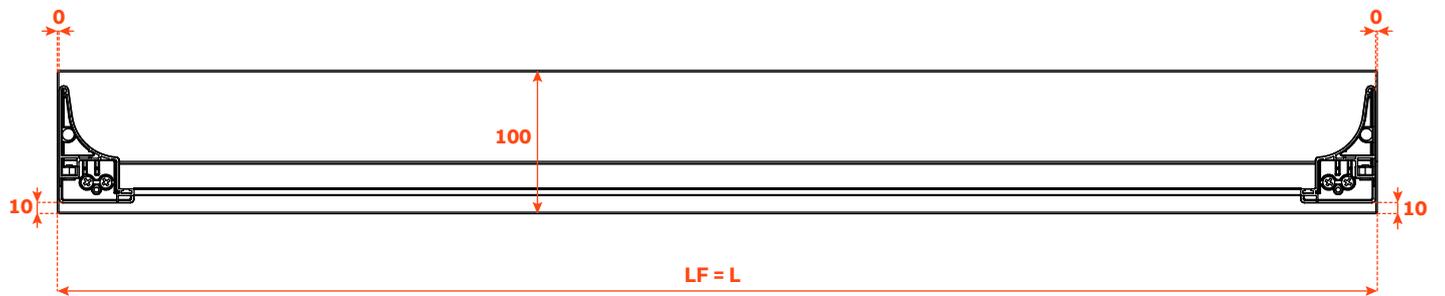

# Excessories

## Pull-out - spacers


### Guidelines to fix spacers

4-SIDED DRAWER

4-SIDED DRAWER

4-SIDED DRAWER

3-SIDED DRAWER  
FOR WOODEN FRONTAL

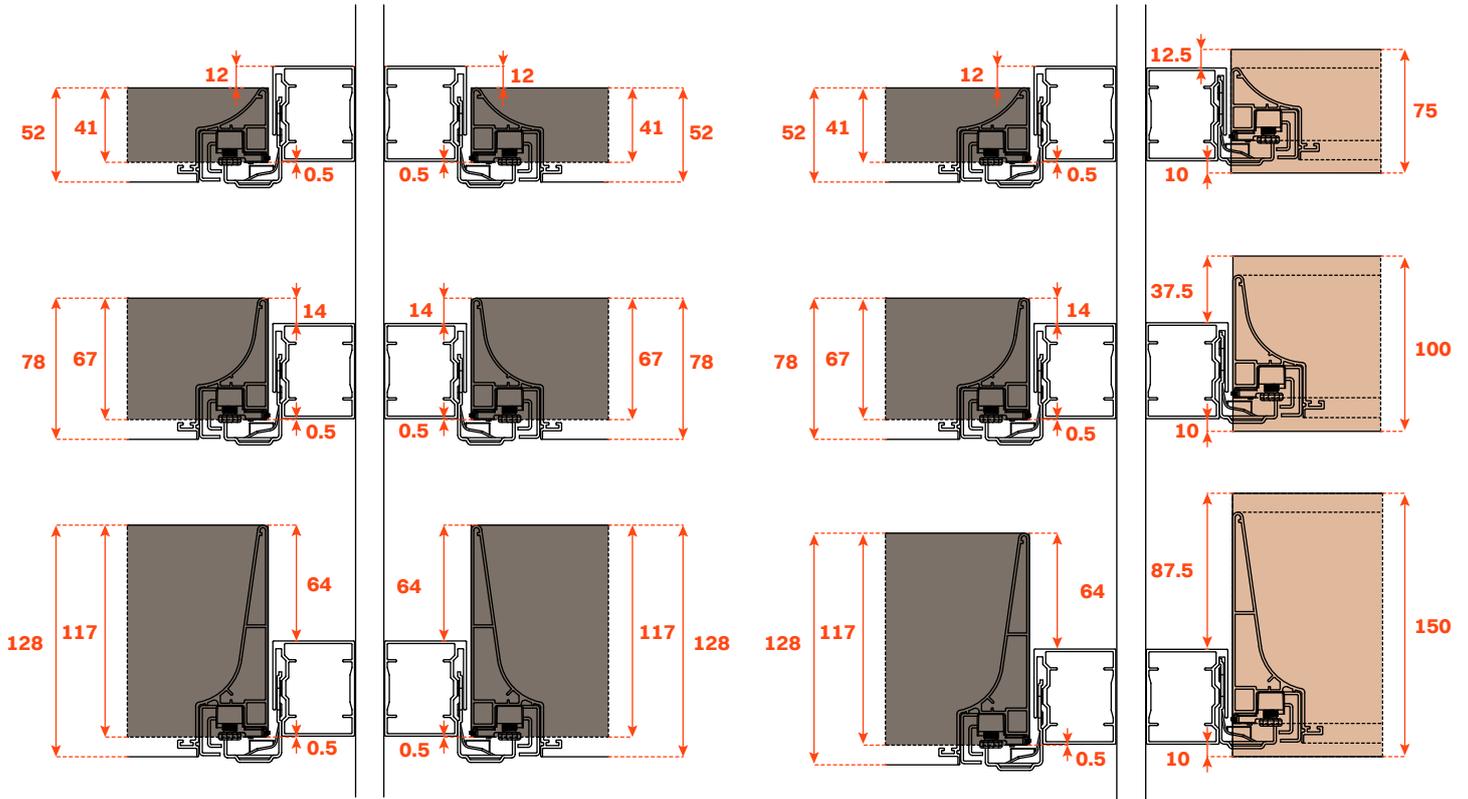


**4-SIDED DRAWER**

**3-SIDED DRAWER  
FOR GLASS FRONTAL**



**3-SIDED DRAWER  
FOR WOODEN FRONTAL**

**3-SIDED DRAWER  
FOR GLASS FRONTAL**

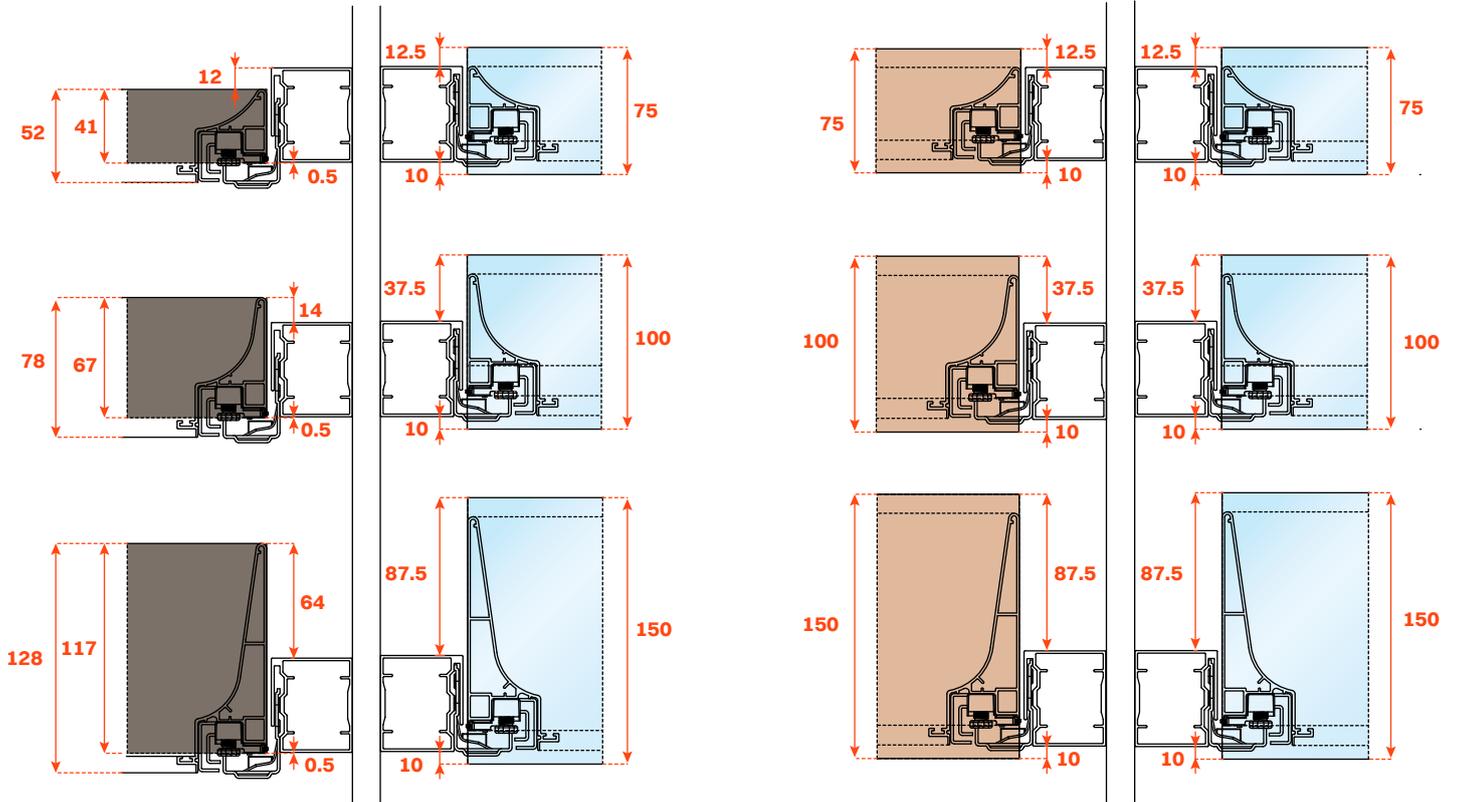



**FIXING 4-SIDED DRAWERS**

It is recommended that the runners are fixed to the cabinet using the upper holes

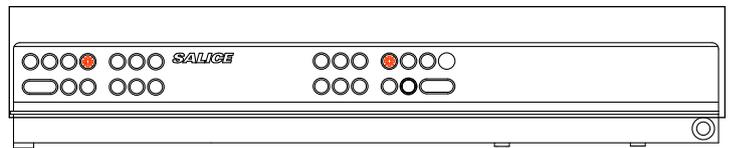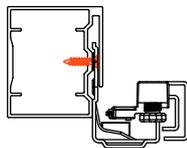

**FIXING 3-SIDED DRAWERS**

It is recommended that the runners are fixed to the cabinet using the lower holes

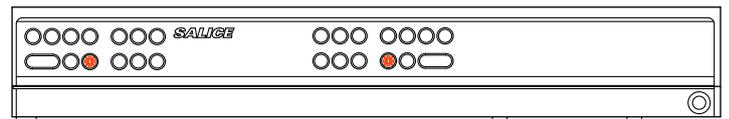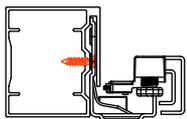


# Excessories


## Pull-out - spacers - assembly instructions

The spacers enable the drawer to be fully opened without impedance from hinged or sliding doors. They feature an innovative quick-fixing device which ensures that the runners are correctly and accurately installed.


1. Insert the runner into the spacer

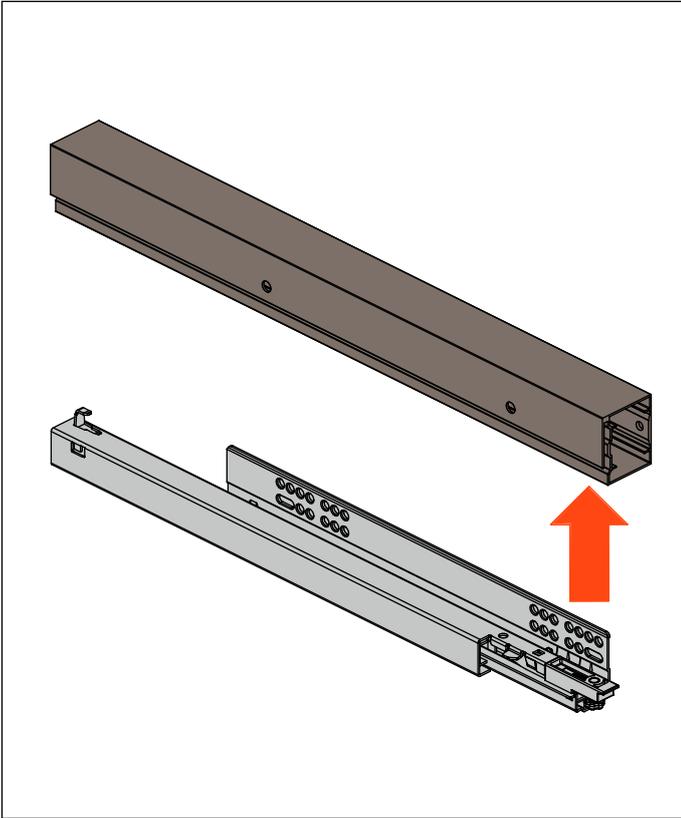


2. Fix the runner to the spacer

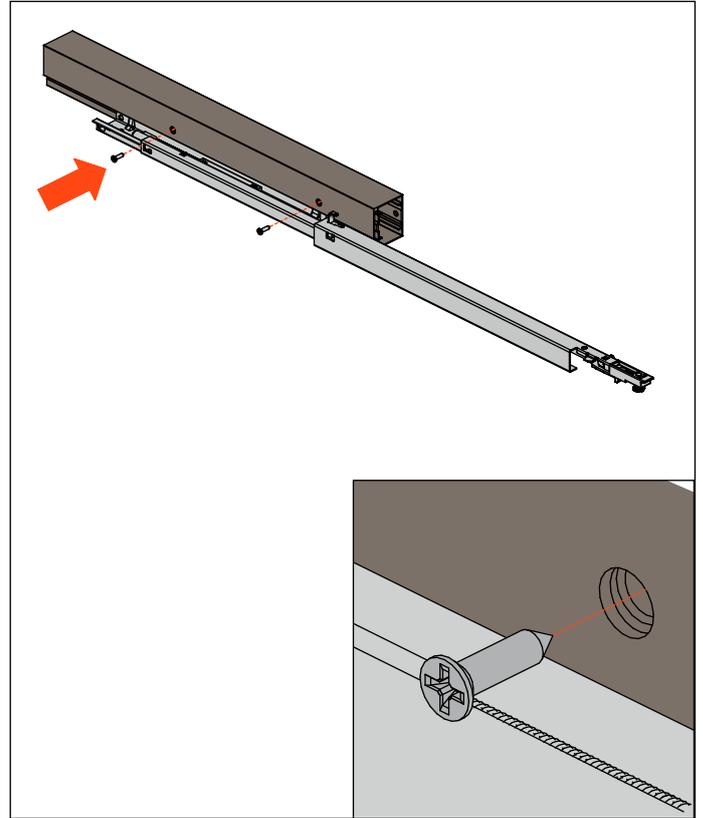


3. Screw-fix the spacer supports to the cabinet side

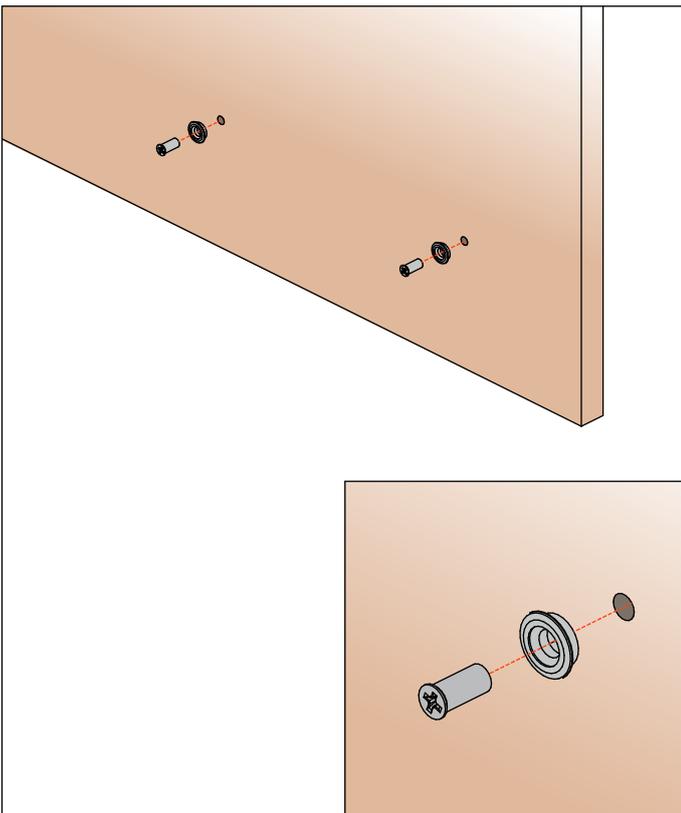


4. Position the spacer onto the supports

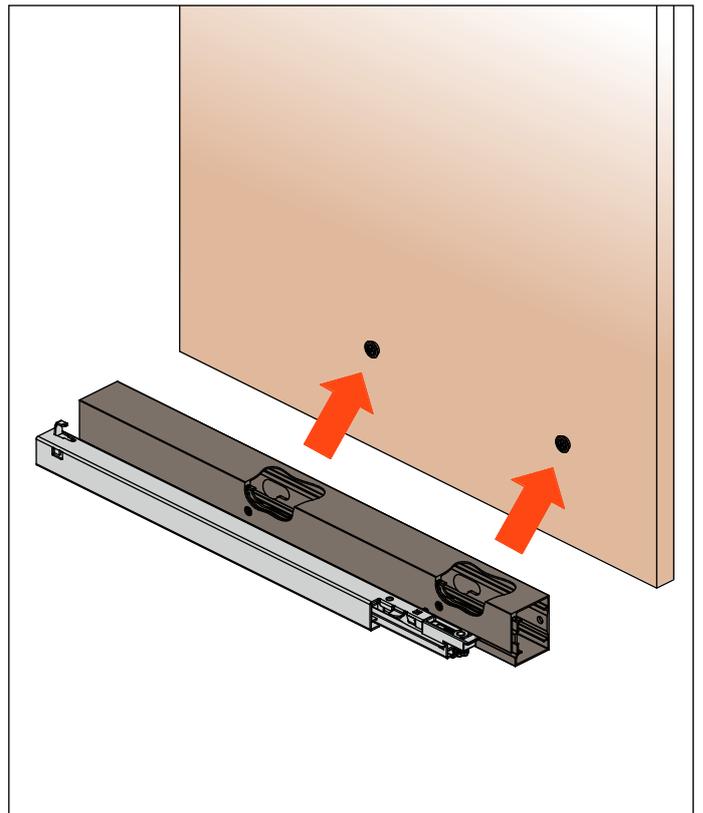


5. Slide the runner to locate it to the support

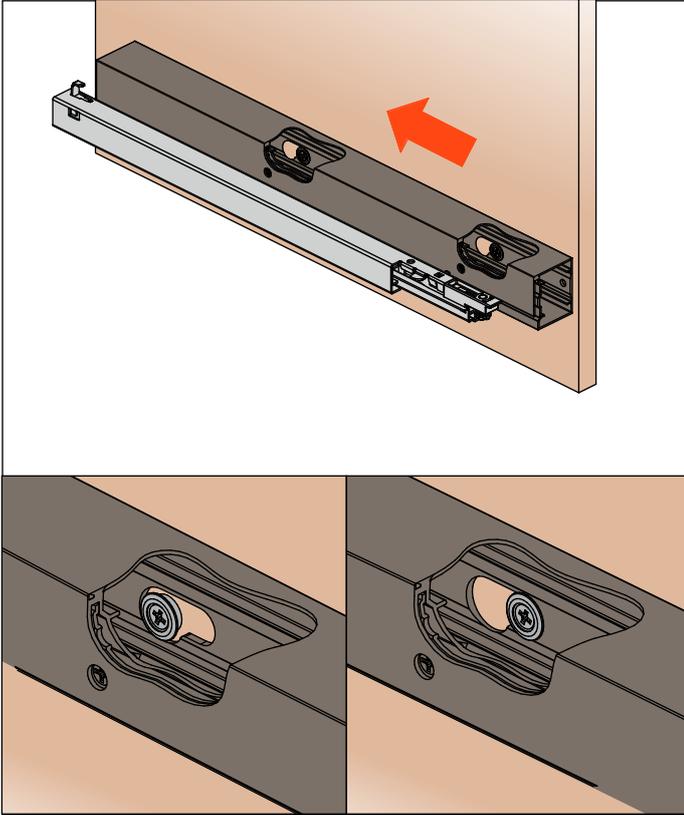

6. Secure the spacer in position using the front fixing screw

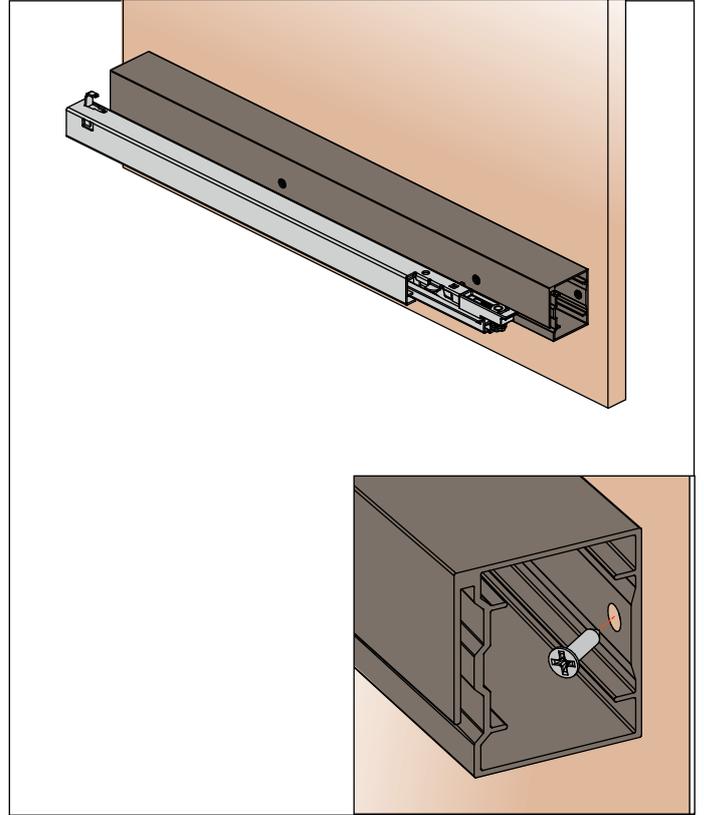

7. Insert the end caps

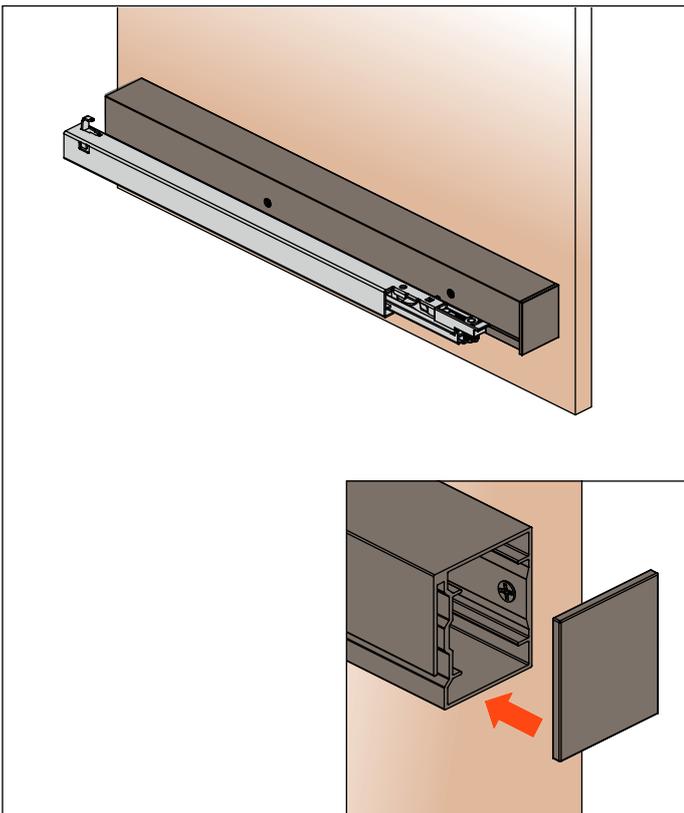

8. Install the drawer onto the runners

