

Smove

SALICE

Catalogue index



DOS_SNG page 4



DOL_SNG page 9



DB01SN_ page 11



D005SN page 12



D006SN page 13



D008SN page 14



D009SN page 15

 D010SN page 16



Adapters to be screw fixed to the cabinet

page 19



Adapters with double sided adhesive system

page 22

Smove - DOS_SNG



DOS_SNG - Smoveholder



We suggest that one Smoveholder only is used for each door, by selecting one of the three available models:



DOS7SNG

to be used with doors made with particularly light materials.



DOS8SNG

to be used with doors with two hinges.



D0S9SNG

to be used with doors with more than two hinges.

Packing Boxes 300 pcs

Pallets 7.200 pcs

Adapter for hinges with arm 0



Adapter to be used ONLY with cruciform mounting plates 37x 32 mm.

For use with mounting plates to be fixed with wood screw, please use a screw with screwhead \emptyset 8 mm and length 16 mm.

D2VX09 - for steel mounting plates **DARX09** - for die-cast mounting plates

Packing

Boxes 300 pcs Pallets 7.200 pcs

Adapter for hinges with arm 5



Adapter to be used ONLY with cruciform mounting plates 37x 32 mm.

For use with mounting plates to be fixed with wood screw, please use a screw with screwhead \emptyset 8 mm and length 16 mm.

D2VX59 - for steel mounting plates **DARX59** - for die-cast mounting plates

Packing

Boxes 300 pcs Pallets 7.200 pcs

Adapter for hinges with arm 9



Adapter to be used ONLY with cruciform mounting plates 37x 32 mm.

For use with mounting plates to be fixed with wood screw, please use a screw with screwhead \emptyset 8 mm and length 16 mm.

D2VX99 - for steel mounting plates **DARX99** - for die-cast mounting plates

Packing

Boxes 300 pcs Pallets 7.200 pcs

Adapter for hinges with arm 17



Adapter to be used ONLY with cruciform mounting plates 37x 32 mm.

For use with mounting plates to be fixed with wood screw, please use a screw with screwhead \emptyset 8 mm and length 16 mm.

D2VXP9 - for steel mounting plates **DARXP9** - for die-cast mounting plates

Packing


Boxes 150 pcs Pallets 3.600 pcs

Smove - DOS_SNG - Choice of the adapter


Smove works by bearing against the flange of the hinge cup and for this reason it is necessary to choose the appropriate adapter. By reducing the door overlay, it is necessary consequently to increase the height of the adapter.

FOR HINGES SERIES 100, 200, 800 AND 900


FOR HINGES SERIES 400 AND 600

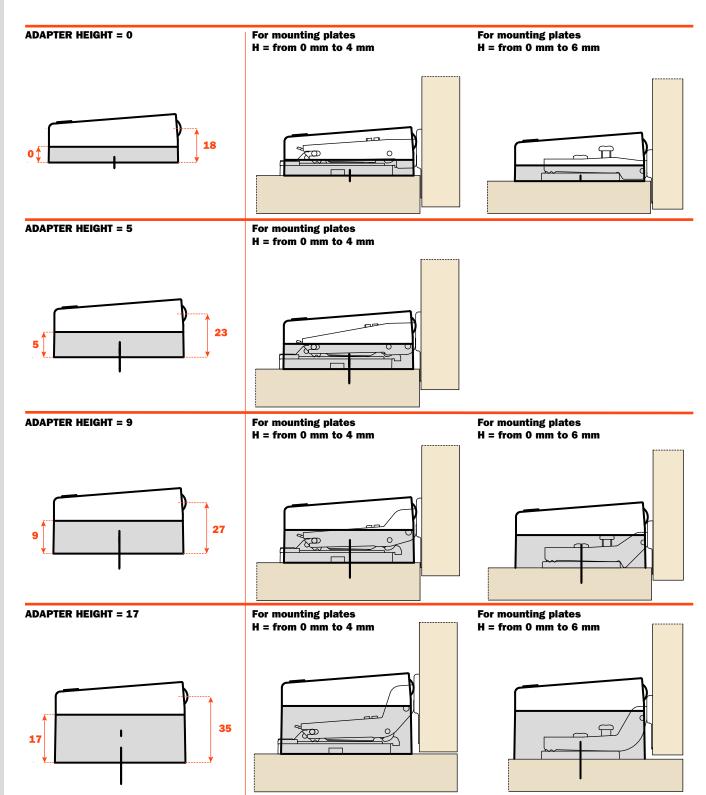


FOR HINGES SERIES F For mounting plates H = from 0 mm to 3 mm

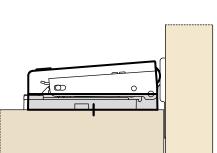

For mounting plates For mounting plates H = from 0 mm to 3 mm H = from 0 mm to 4 mm 0

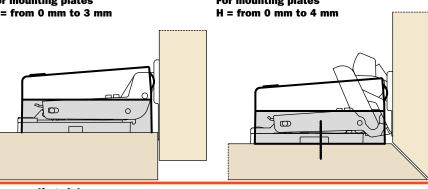

FOR HINGES SERIES B

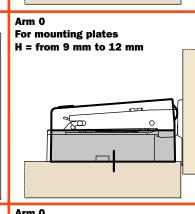

The required overlay can be achieved not only by using the appropriate hinge arm, but also by using mounting plates of


different heights.


Arm 0

For mounting plates H = from 6 mm to 9 mm

%

Application examples:

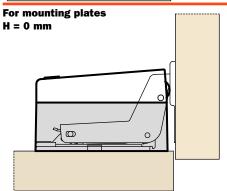

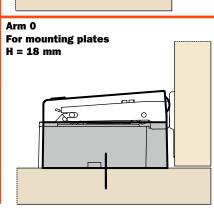

Smove - DOS_SNG - Assembly instructions

1 - Loosen one of the two fixing screws of the mounting plate.



3 - Retighten the fixing screw of the mounting plate.

2 - Insert the adapter for the Smoveholder.



4 - Apply the Smoveholder to the adapter, as indicated.





5 - Finally it is possible to adjust the Smove to increase or reduce the decelerating effect.



Positive adjustment

Rotating the screw towards the + sign, thus moving the Smove forward, the decelerating effect increases.



Rotating the screw towards the - sign, thus moving the Smove backwards, the decelerating effect reduces.





Smove - DOL_SNG





D0L_SNG - Smoveholder with assembly stop devices



We suggest that one smoveholder only is used for each door, by selecting one of the three



DOL7SNG

to be used with doors made with particularly light materials.



DOL8SNG

to be used with doors with two hinges.



DOL9SNG

to be used with doors with more than two hinges.





Packing Boxes 150 pcs Pallets 13.500 pcs

We suggest that one smoveholder only is used for each door, by selecting one of the three available models:



DOL7SNGR

to be used with doors made with particularly light materials.



to be used with doors with two hinges.



DOL9SNGR


to be used with doors with more than two hinges.

Packing Boxes 150 pcs Pallets 13.500 pcs

Smove - DOL_SNG - Assembly instructions

Smoveholder application Arm 0, Arm 5, Arm 9 - Smoveholder DOL_SNG


Frontal positioning: with assembly stop devices. Side positioning: place the smoveholder with its wing in contact with the side of the cabinet.

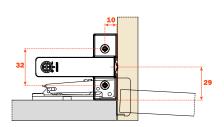


1 - Place the smoveholder in position on the top or bottom panel with its wing in contact with the side of the cabinet.

Arm 17 - Smoveholder DOL_SNGR

Frontal positioning: drilling value at + 11 mm plus the door thickness. Side positioning: place the smoveholder with its centreline approx. 5 mm from the edge of the door at its fully open position.

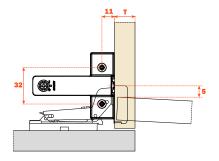


2 - Screw the smoveholder into position.

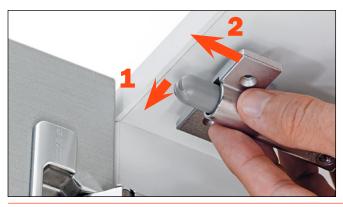

3 - Finally it is possible to adjust the Smove to increase or reduce the decelerating effect.



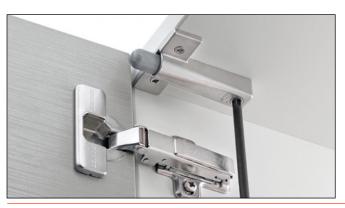

Positive adjustment

Rotating the screw towards the + sign, thus moving the Smove forward, the decelerating effect increases.



Negative adjustment


Rotating the screw towards the - sign, thus moving the Smove backwards, the decelerating effect reduces.




$\textbf{Smove - DB01SN}_ \cdot \textbf{Assembly instructions}$

1 - Apply Smove to the hinge arm

2 - Fix Smove as indicated

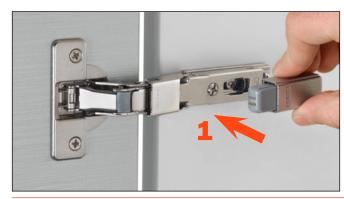

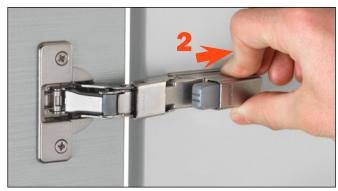









Smove - D005SN

D005SNG



SALICE Smove ø 10 ∱

Smove

Smove

Packing Boxes 250 pcs. Cartons 2.000 pcs.

D005SNB



50 SALICE Smove

Packing Boxes 250 pcs. Cartons 2.000 pcs.

Technical information about the installation of SMOVE D005SN to be recessed

Insert Smove D005 into the cabinet side opposite the hinges. For an optimal performance, we suggest that Smove D005 is positioned at the centre of the side panel.

It is suggested for doors from 450 mm to 600 mm width.

For wood-based and alu-framed doors over 1600 mm height, it may be necessary to use two Smove, one to be inserted into the upper part and the second into the lower part of the cabinet side opposite the hinges.



Smove - D006SN

D006SNG



50 SALICE Smove Smove

Smove

Packing Boxes 250 pcs. Cartons 2.000 pcs.

D006SNB



50 SALICE Smove

Packing Boxes 250 pcs. Cartons 2.000 pcs.

Technical information about the installation of SMOVE D006SN to be recessed

Insert Smove D006 at the centre of the top or the base panel of the cabinet.

For wood-based and alu-framed doors over 1600 mm height, it may be necessary to use two Smove, one to be inserted into the top and the second into the base panel of the cabinet.



Smove - D008SN

D008SNG



50 1 8 10 SALICE Smove Smove

Smove

Packing Boxes 250 pcs. Cartons 2.000 pcs.

D008SNB





Packing Boxes 250 pcs. Cartons 2.000 pcs.

Technical information about the installation of SMOVE D008SN to be recessed

Insert Smove D008 into the top or the base panel of the cabinet on the hinged side.

A drilling distance of 27 mm from the cabinet side is suggested.

For doors over 1600 mm height, it may be necessary to use two Smove, one to be inserted into the top and the second into the base panel of the cabinet.



Smove - D009SN

D009SNG



SALICE

Smove

Smove

Packing Boxes 250 pcs. Cartons 2.000 pcs.

D009SNB





Packing Boxes 250 pcs. Cartons 2.000 pcs.

Technical information about the installation of SMOVE D009SN to be recessed

Insert Smove D009 into the base panel of the cabinet on the hinged side.

Smove D009 is used for doors between 720 mm and 1600 mm high.

Drilling distance from the cabinet side:

- for hinges with $arm\ 0$ mm the drilling distance equals $15\ mm$ plus the base height;
- for hinges with **arm 5** mm the drilling distance equals 20 mm plus the base height;
- for hinges with ${\bf arm}~{\bf 9}~{\bf mm}$ the drilling distance equals 24 mm plus the base height.



Smove - D010SN

D010SNG



Smove

Smove

Packing Boxes 250 pcs. Cartons 2.000 pcs.

D010SNB



50 1 Ø 10 SALICE Smove Packing Boxes 250 pcs. Cartons 2.000 pcs.

Technical information about the installation of SMOVE D010SN to be recessed

Insert Smove D010 into the base panel of the cabinet on the hinged side.

Smove D010 is used for doors over 1600 mm high.

Drilling distance from the cabinet side:

- for hinges with **arm 0** mm the drilling distance equals **15 mm** plus the base height;
- for hinges with arm 5 mm the drilling distance equals 20 mm plus the base height;
- for hinges with **arm 9** mm the drilling distance equals **24 mm** plus the base height.



To be recessed - Assembly instructions

Drill a hole Ø 10 mm and min. 50 mm depth in the cabinet. Insert Smove into the hole.





Smove - With adapters





SMOVE D005 can be fitted using:

- 1) adapters to be screw-fixed to the cabinet side (see pages 19 and 20);
- 2) adapters with double sided adhesive system (see page 22).

It is suggested for doors from 450 mm to 600 mm width.

For wood-based and alu-framed doors over 1600 mm height, it may be necessary to use two Smove, one to be fixed to the upper part and the second to the lower part of the cabinet side opposite the hinges.

SMOVE D006 can be fitted using:

- 1) adapters to be screw-fixed to the top or bottom panel of the cabinet (see pages 19 and 20);
- 2) adapters with double sided adhesive system (see page 22).

For wood-based and alu-framed doors over 1600 mm height, it may be necessary to use two Smove, one to be fixed to the top and the second to the base panel of the cabinet.



SMOVE D008 can be fitted using:

- adapters to be screw-fixed to the top or bottom panel of the cabinet (see pages 19 and 20); Smove should be positioned at a distance of 27 mm from the inside face of the cabinet side. If using cruciform adapters, the correct position is located by moving the adapters so that one wing is in contact with the inside face of the cabinet.
- 2) adapters with double sided adhesive system (see page 22).

For doors over 1600 mm height, it may be necessary to use two Smove, one to be fixed to the top and the second to the base panel of the cabinet.

3) adapters to be screw-fixed to the inside of the cabinet door (see page 24). **D008** is used for doors up to 720 mm high.



SMOVE D009 and D010 can be fitted using:

- 1) longitudinal adapters to be screw-fixed to the base panel of the cabinet (see pages 19 and 20);
- 2) adapters to be screw-fixed to the inside of the cabinet door (see page 24).

D009 is used for doors between 720 mm and 1600 mm high. **D010** is used for doors over 1600 mm high.

Adapters to be screw fixed to the cabinet

D063SNXR




Longitudinal plastic adapter. To be fixed with dowels. Without assembly stop device.

Packing Boxes 500 pcs. Pallets 12.000 pcs.

D064SNXN



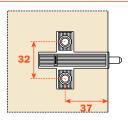

D063SNGR = grey D063SNBR = beige


D064SNGN = grey D064SNBN = beige Cruciform plastic adapter. To be fixed with wood screws.

37x32 mm drilling. With assembly stop device.

Packing Boxes 500 pcs. Pallets 12.000 pcs.

D064SNXR





D064SNGR = grey


Cruciform plastic adapter. To be fixed with wood screws. 37x32 mm drilling. Without assembly stop device.

D065SNGR = grey - to be fixed with Euroscrews. **D065SNBR** = beige - to be fixed with Euroscrews.

D064SNBR = beige

D060SNXN






D060SNGN = grey D060SNBN = beige Cruciform plastic adapter. To be fixed with wood screws. 28x32 mm drilling. With assembly stop device.

Packing Boxes 500 pcs. Pallets 12.000 pcs.

Packing Boxes 500 pcs. Pallets 12.000 pcs.

D060SNXR






D060SNGR = grey D060SNBR = beige Cruciform plastic adapter. To be fixed with wood screws. 28x32 mm drilling. Without assembly stop device.

Packing

Boxes 500 pcs. Pallets 12.000 pcs.

D066SNXN





D066SNGN = grey D066SNBN = beige Cruciform plastic adapter. To be fixed with wood screws. 10x32 mm drilling. With assembly stop device.


Packing

Boxes 500 pcs. Pallets 12.000 pcs.

Smove - Adapters to be screw fixed to the cabinet

D070SNXN



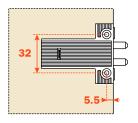

D070SNGN = grey **D070SNBN** = beige Double cruciform plastic. To be fixed with wood screws. 5.5x32 mm drilling. With assembly stop device.

Double cruciform plastic.

To be fixed with wood screws. 5.5x32 mm drilling.


Without assembly stop device.

Packing Boxes 500 pcs. Pallets 12.000 pcs.

Packing Boxes 500 pcs. Pallets 12.000 pcs.

D070SNXR






D070SNGR = grey D070SNBR = beige

D076XX9R



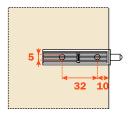

Longitudinal die-cast adapter. To be fixed with wood screws. Without assembly stop device.


Cover caps to be ordered separately.

D077XX9R - to be fixed with Euroscrews.

Packing Boxes 500 pcs. Pallets 12.000 pcs.

D076SN9





Longitudinal die-cast adapter. To be fixed with wood screws. With assembly stop device.

Cover caps to be ordered separately.

D077SN9 - to be fixed with Euroscrews.

Packing Boxes 500 pcs. Pallets 12.000 pcs.

With adapter to be screw fixed to the cabinet - Assembly instructions

Adapter with assembly stop device

Insert Smove into the adapter. Place the adapter in the position in the cabinet appropriate to the version of Smove to be installed, using the assembly stop device for final positioning.



Adapter without assembly stop device

Insert Smove into the adapter. Place the adapter in the position in the cabinet appropriate to the version of Smove to be installed, based on the dimensions indicated for the type of adapter.



Smove - Adapters with double sided adhesive system

D051SNX



D051SNG = grey **D051SNB** = beige Longitudinal plastic. With assembly stop device.

Packing Boxes 500 pcs. Pallets 12.000 pcs.

D086SNX



D086SNG = grey D086SNB = beige Longitudinal plastic with additional fixing screw. To be fixed with double sided adhesive system. It is suggested to fix the adapter with the included screw. For application with full overlay door. With assembly stop device

Packing Boxes 500 pcs. Pallets 12.000 pcs.

D087SNX



D087SNG = grey D087SNB = beige Longitudinal plastic with additional fixing screw. To be fixed with double sided adhesive system. It is suggested to fix the adapter with the included screw. For application with full and half overlay door. With assembly stop device.


Packing Boxes 500 pcs. Pallets 12.000 pcs.

With adapter to be fixed with double sided adhesive system - Assembly instruccions

- For a correct application and to ensure optimal endurance, we suggest these guidelines are followed:

 1) clean and de-grease the cabinet surface where the adapter is to be installed using an acetone based cleaner;
- 2) remove the protective strip from the adhesive;
- 3) place the adapter in position and apply a firm pressure for about one minute;
- 4) insert Smove frontally into the adapter;
- 5) allow a period of 12 hours to elapse before subjecting the product to continuous usage.

As an option for additional security, the adapters D086SNX and D087SNX can be fixed with the included wood screw.

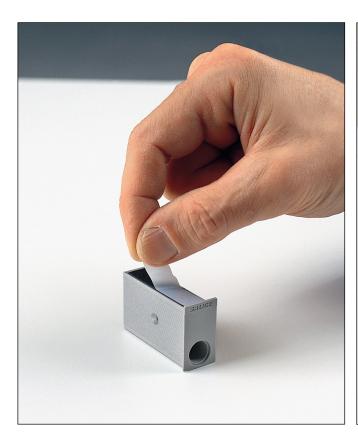








Smove - Adapter to be screw fixed to the door

D078XX9





Longitudinal inclined die-cast adapter.

To be fixed with wood screws or Euroscrews.

Without assembly stop device. It is suggested that the adapter is positioned near the centre of the height of the door.

Packing Boxes 500 pcs. Pallets 12.000 pcs.

Installation of Smove with adapter to be screw fixed to the door. Assembly instructions.

Insert Smove frontally into the adapter.

It is suggested that the adapter is positioned near the centre of the height of the door.









| Note | | | |
|------|------|------|--|
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| _ | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| _ | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

HEADQUARTERS AND PRODUCTION UNITS

ARTURO SALICE S.p.A.

HEAD OFFICE

VIA PROVINCIALE NOVEDRATESE, 10 22060 NOVEDRATE (COMO) ITALIA TEL. 031 790424 - FAX 031 791508 info.salice@salice.com www.salice.com

ARTURO SALICE S.p.A.

VIA ARISTIDE MERLONI, 11 61036 COLLI AL METAURO (PU) ITALIA TEL. 0721 899800 FAX 0721 897980 info.salice@salice.com www.salice.com

BORTOLUZZI SISTEMI S.p.A.

VIA CADUTI 14 SETTEMBRE 1944, 45 32100 BELLUNO (BL) ITALIA TEL. 0437 930866 FAX 0437 931442 info@bortoluzzi.com www.salice.com

NUOVA ATIM S.r.I.

VIA IV NOVEMBRE, 52 20019 SETTIMO MILANESE (MI) ITALIA TEL. 02 33503203 FAX 02 33516514 info@atimspa.com www.atimspa.com

BRANCHES

DEUTSCHE SALICE GMBH

RUDOLF DIESEL STR. 10 74382 NECKARWESTHEIM TEL. 07133 9807-0 FAX. 07133 9807-16 info.salice@deutschesalice.de www.salice.com

DEUTSCHE SALICE GMBH

VERKAUFSBÜRO NORD RINGSTRASSE 36/A30 CENTER 32584 LÖHNE TEL. 05731 15608-0 FAX. 05731 15608-10 vknord@deutschesalice.de www.salice.com

SALICE UK LTD.

KINGFISHER WAY HINCHINGBROOKE BUSINESS PARK HUNTINGDON CAMBS PE 29 6FN TEL. 01480 413831 FAX. 01480 451489 info.salice@saliceuk.co.uk www.salice.com

SALICE FRANCE S.A.R.L.

285 RUE DE GOA ZAC LES 3 MOULINS 06600 ANTIBES TEL. 0493 330069 FAX. 0493 330141 info.salice@salicefrance.com www.salice.com

SALICE ESPAÑA, S.L.U.

C/ AIGUAFREDA 4, P.I. AMÉTLLA PARK 08480 L'AMETLLA DEL VALLÈS (BARCELONA) TEL. 0034 938 46 88 61 info.salice@saliceespana.es www.salice.com

SALICE PORTUGAL UNIP. LDA SHOWROOM:

TV SÁ E MELO 161 FA 4470-116 MAIA – PORTO TEL: 00351 224 154 221 Info@saliceportugal.pt www.salice.com

ARMAZÉM:

VIA ROTA DOS MÓVEIS I 399 4585-325 GANDRA

SALICE CHINA (SHANGHAI) CO. LTD.

RM 602, 6/F, TOWER 1, 3688 YINGGANG DONG ROAD QINGPU DISTRICT 201703 SHANGHAI, CHINA TEL. 021 3988-9880 info.salice@salicechina.com www.salicechina.com

SALICE INDIA PVT. LTD.

1001 & 1002, 10TH FLOOR, CENTRUM, PLOT NO. C-3, OPP. WAGLE PRABHAG SAMITI OFFICE, MIDC AREA, WAGLE INDUSTRIAL ESTATE, THANE - 400604, MAHARASHTRA TEL. 022 20812050 info@saliceindia.com www.salice.com

SALICE CANADA INC.

3500 RIDGEWAY DRIVE, UNIT#1 MISSISSAUGA, ONTARIO, L5L 0B4 TEL. 905 820 8787 FAX. 905 820 7226 info.salice@salicecanada.com www.salicecanada.com

SALICE AMERICA INC.

2123 CROWN CENTRE DRIVE CHARLOTTE NC. 28227 TEL. 704 841 7810 FAX. 704 841 7808 info.salice@saliceamerica.com www.saliceamerica.com

ARTURO SALICE S.p.A.

HEAD OFFICE

VIA PROVINCIALE NOVEDRATESE, 10 22060 NOVEDRATE (COMO) ITALIA TEL. 031 790424 - FAX 031 791508

> info.salice@salice.com www.salice.com