

D051SNX




D051SNG = grey
D051SNB = beige

Longitudinal plastic.
With assembly stop device.

Packing
Boxes 500 pcs.
Pallets 12.000 pcs.

D086SNX

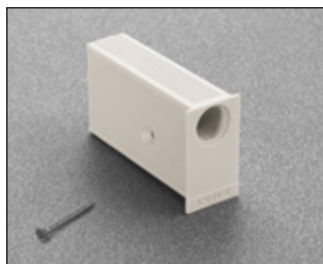


D086SNG = grey
D086SNB = beige

Longitudinal plastic with
additional fixing screw.
To be fixed with double sided
adhesive system.
It is suggested to fix the adapter
with the included screw.
For application with full
overlay door.
With assembly stop device

Packing
Boxes 500 pcs.
Pallets 12.000 pcs.

D087SNX

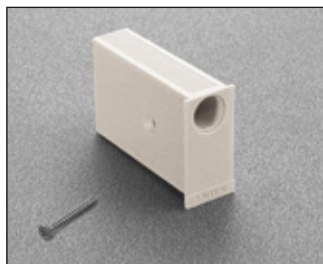

D087SNG = grey
D087SNB = beige

Longitudinal plastic with
additional fixing screw.
To be fixed with double sided
adhesive system.
It is suggested to fix the adapter
with the included screw.
For application with full and half
overlay door.
With assembly stop device.

Packing
Boxes 500 pcs.
Pallets 12.000 pcs.

With adapter to be fixed with double sided adhesive system - Assembly instructions

For a correct application and to ensure optimal endurance, we suggest these guidelines are followed:

- 1) clean and de-grease the cabinet surface where the adapter is to be installed using an acetone based cleaner;
- 2) remove the protective strip from the adhesive;
- 3) place the adapter in position and apply a firm pressure for about one minute;
- 4) insert Smove frontally into the adapter;
- 5) allow a period of 12 hours to elapse before subjecting the product to continuous usage.

As an option for additional security, the adapters D086SNX and D087SNX can be fixed with the included wood screw.

