



Un!ca

SALICE

Un!ca

The Unica full extension concealed runner combines Smove decelerated closing action with both traditional opening and Push self-opening for handle-less furniture. The fully integrated operating system is completely mechanical and therefore does not require a power source.

The runner is available in two versions:

- fixed to the drawer by locating pin (see page 20)
- fixed to the drawer by clip (see page 22)



Handle-less opening

Push the frontal to open the drawer.



The drawer opens approximately 5 - 10 cm.



Open the drawer to access the inner space.



Open drawer.



Closing with decelerating effect.



Opening with handle

Pull the handle to open the drawer.



Open drawer.




Closing with decelerating effect.



Un!ca - Fixing


Fixing full-extension runner on cabinet side.

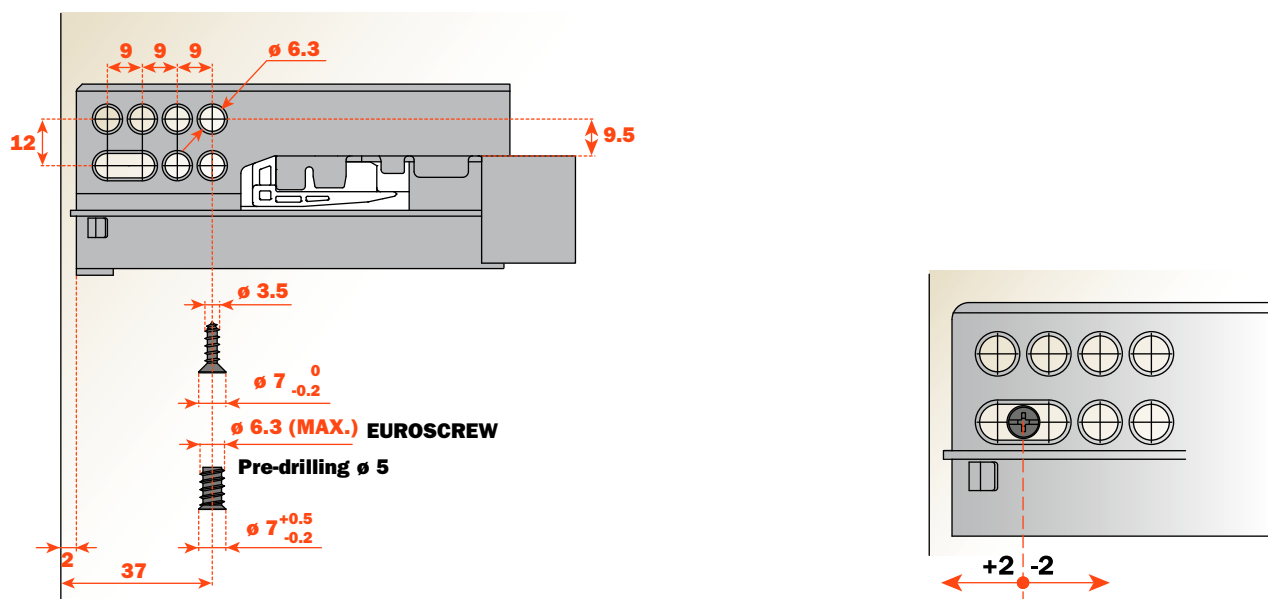


The oval slot allows the easy alignment of drawer frontals particularly in multi drawer and Push applications.

Drilling positions for runner on cabinet side.


Full-extension

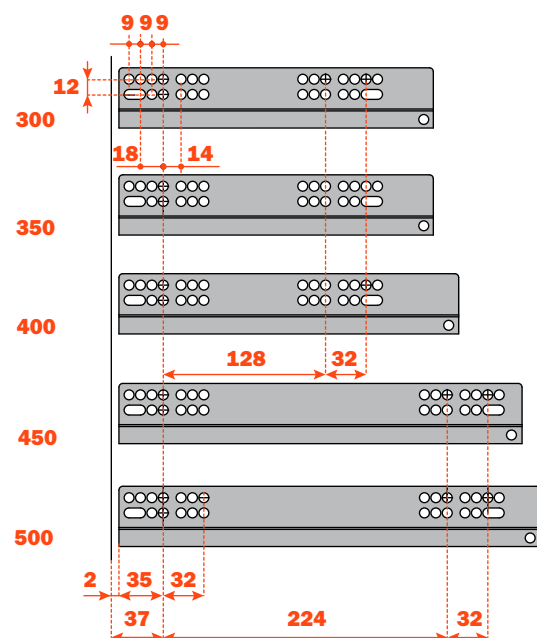

For the function Push is required an A value = 2,5 mm. This value is obtained by placing the runner at 37 mm from the edge of the cabinet.

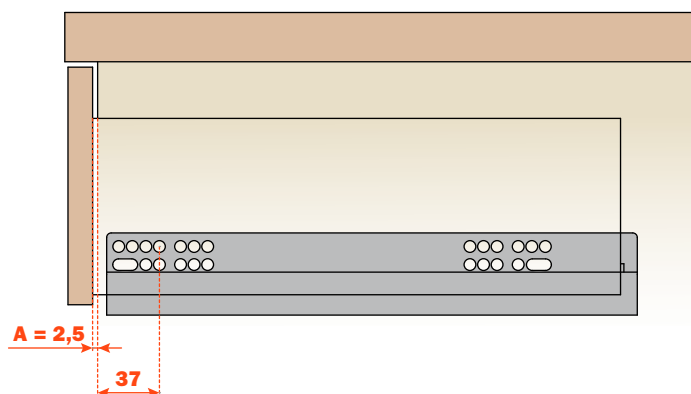

Detail of the rear additional fixing hole

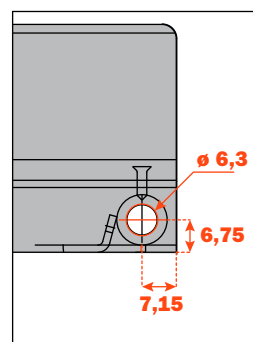

Drawer setting

Drawer setting: abbreviations


Chest of drawers

SP = Thickness of the drawer

LN = Nominal runner length

PM = Depth of the cabinet


X = Internal width of the cabinet

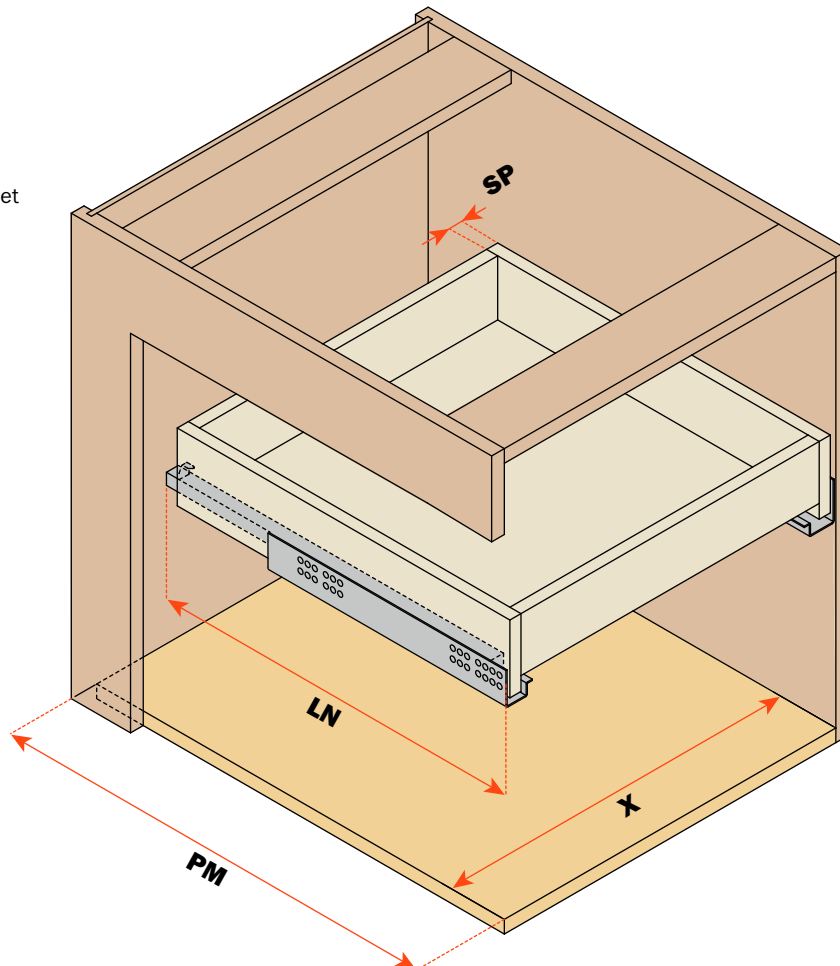

Drawer dimensions

LC = Runner length - 10 mm

X - 41 = Internal width of the drawer

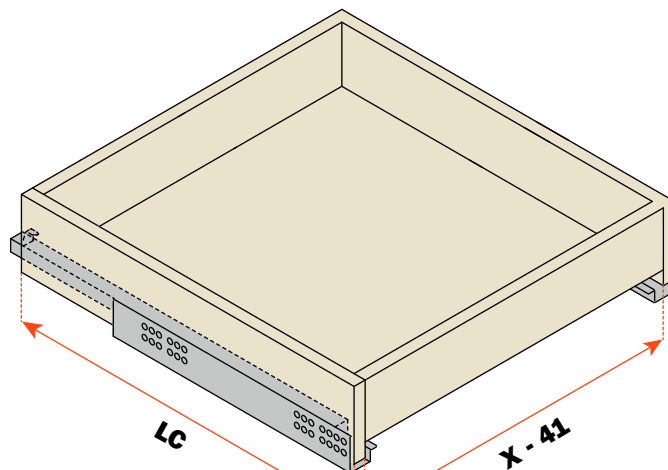


The drawer length is 10 mm shorter than the runner length

The internal width of the drawer is 41 mm less than the internal width of the cabinet

Un!ca - Pin fix clip - Drawer drilling


Drawer drilling

Drawer with frontal - three-sided (view from below)
Template for drawer drilling - see page 186

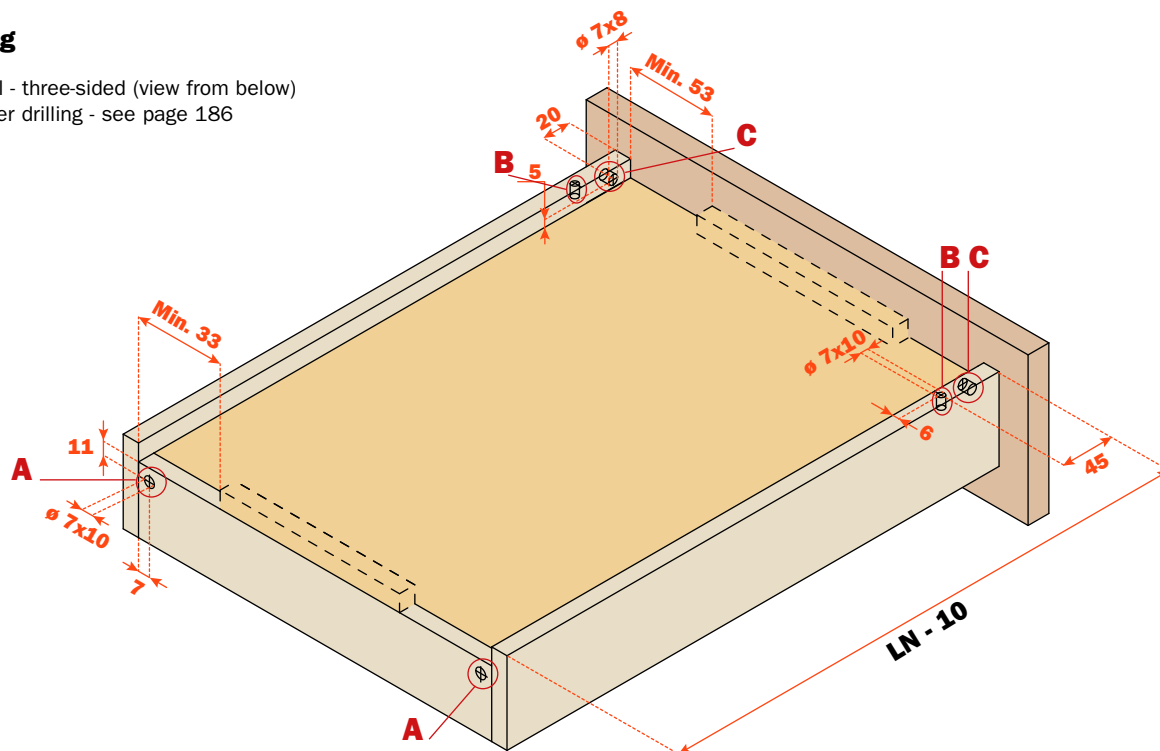

Drawer drilling




Internal drawer - four-sided (view from below)
Template for drawer drilling - see page 26

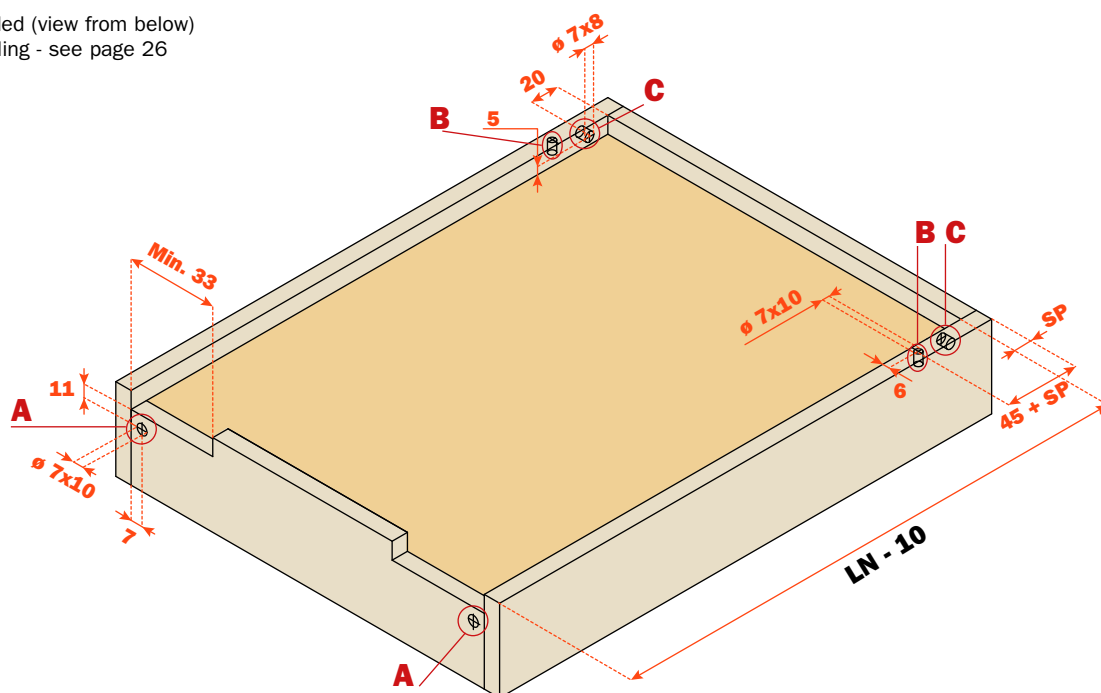

Rear hook

drawer locating pin

security pin

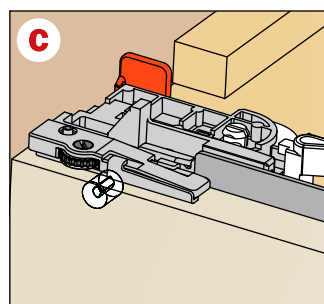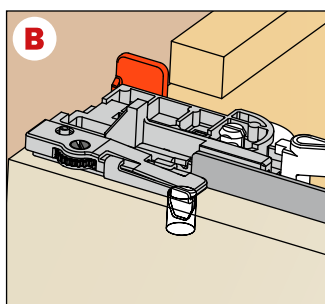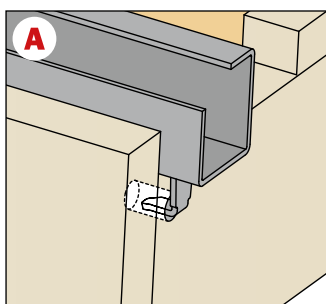



Pin-fix clip - technical information

Fixing of the drawer security pin

Available on all runner versions

This operation is tool free



The device locks the drawer onto the runners

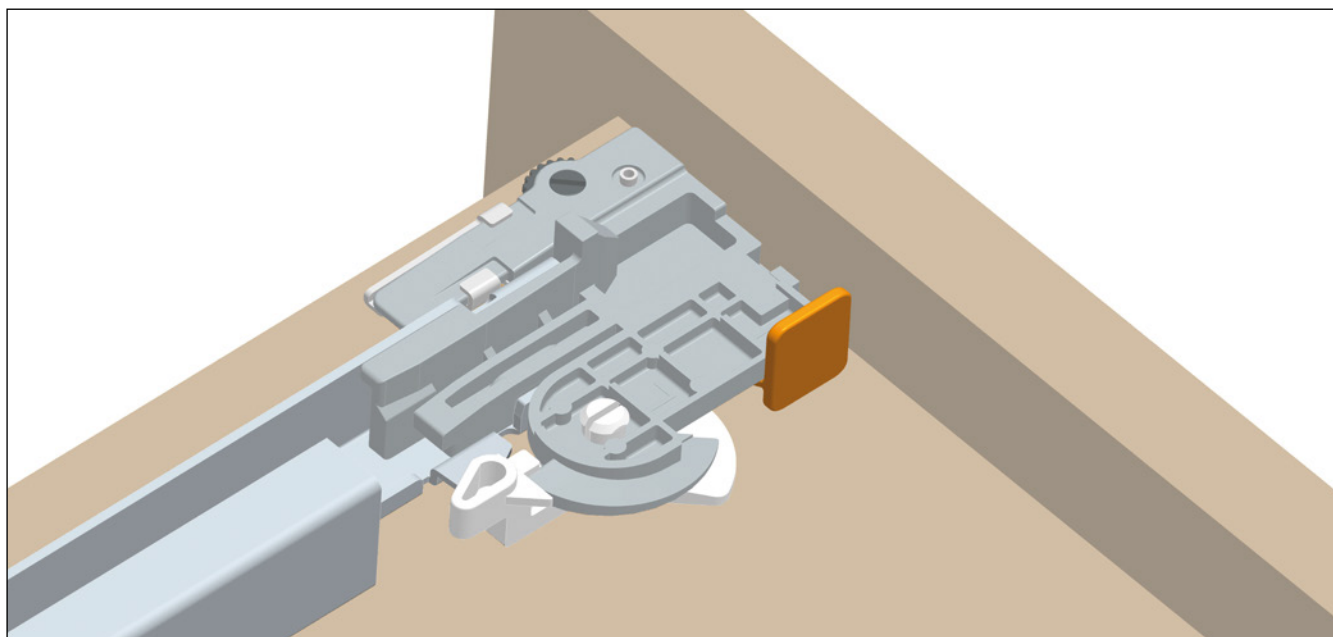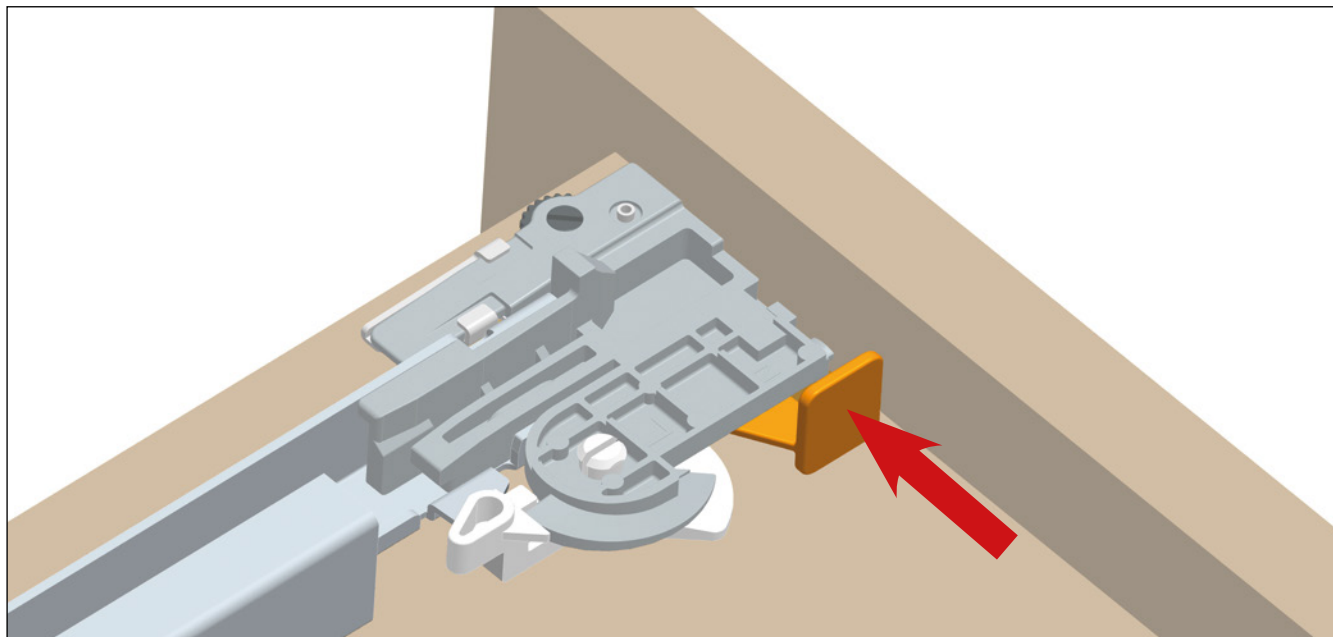




Un!ca - pin-fix clip - adjustments

Height adjustment + 3 mm

Initial position of the lever for the height adjustment.

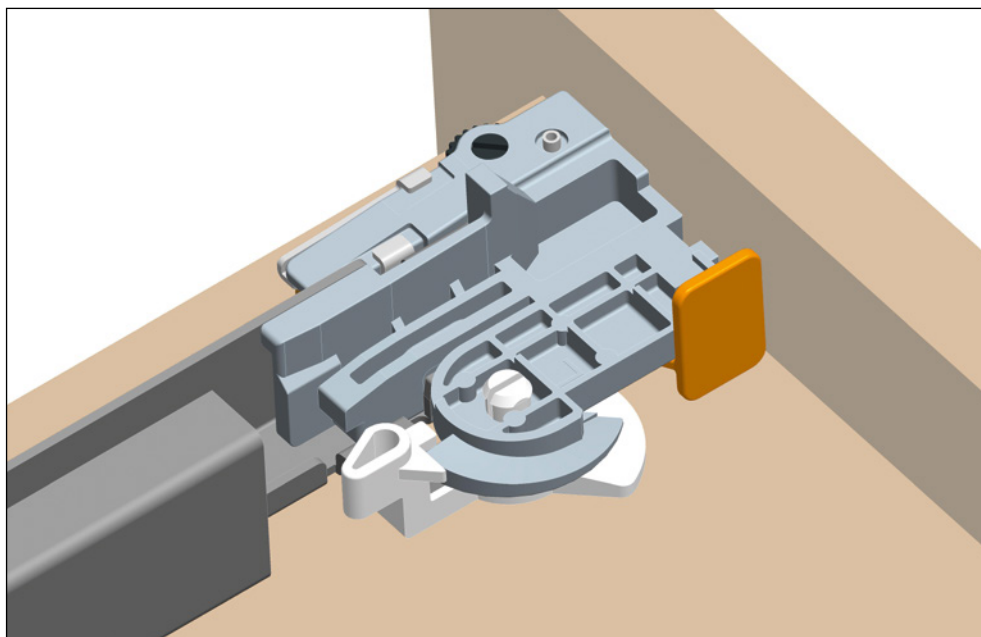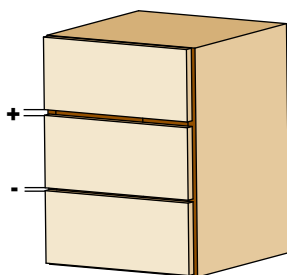




Turn the lever towards the front of the drawer to achieve the height adjustment.
This operation is tool free.

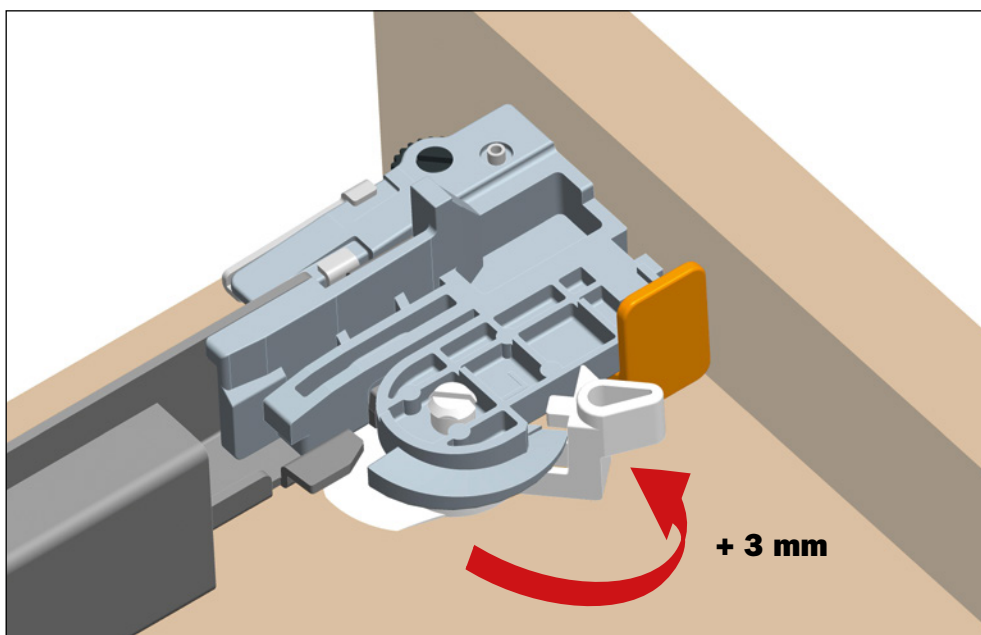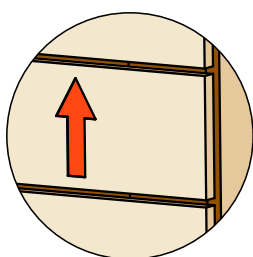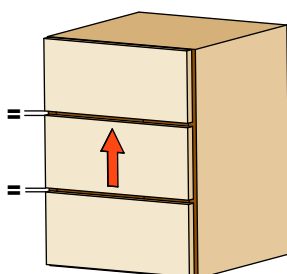




Pin-fix clip - adjustments

Depth adjustment + 2 mm - 2 mm

Rotate the black wheel towards the front of the drawer to increase the gap between the front and the side.
This operation is tool free.

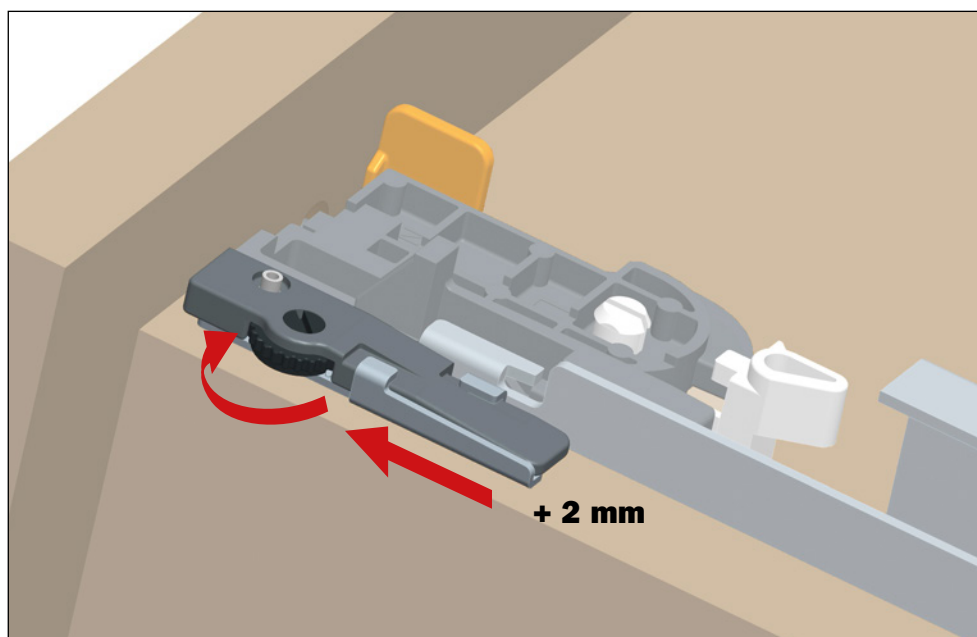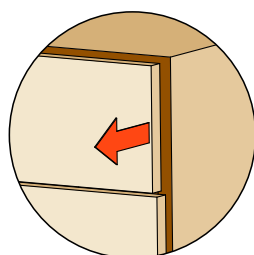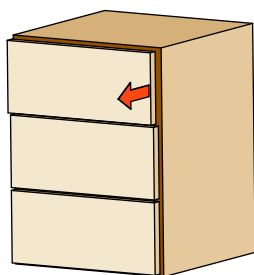


Rotate the black wheel towards the back of the drawer to reduce the gap between the front and the side.
This operation is tool free.

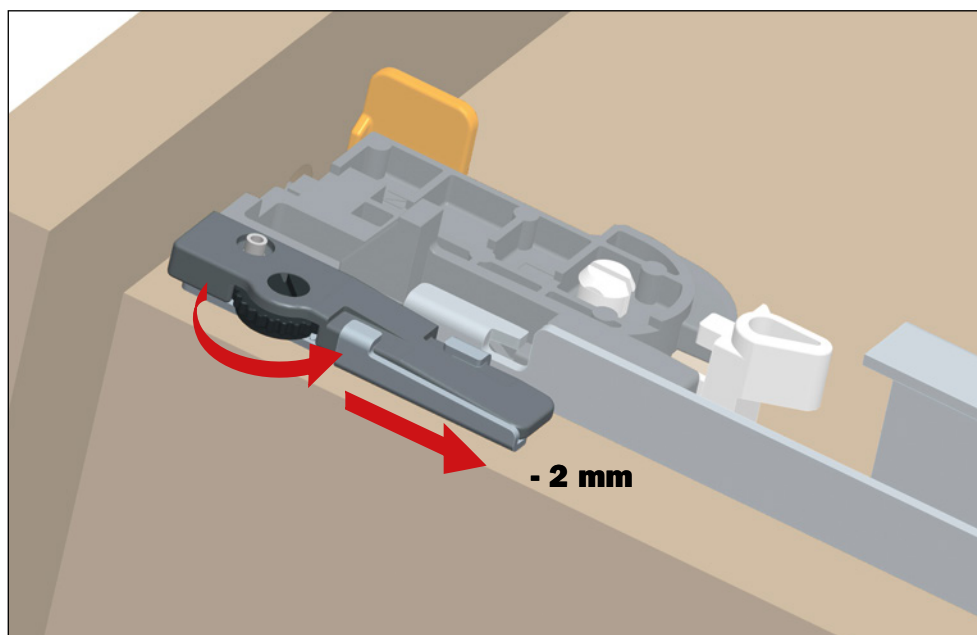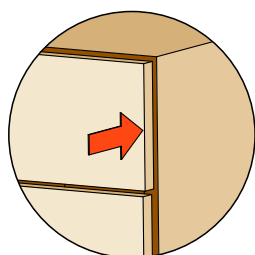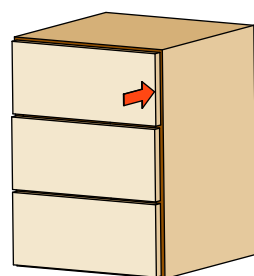

Un!ca - Clip version - Drawer drilling


Drawer drilling

Drawer with frontal - three-sided
(view from below)

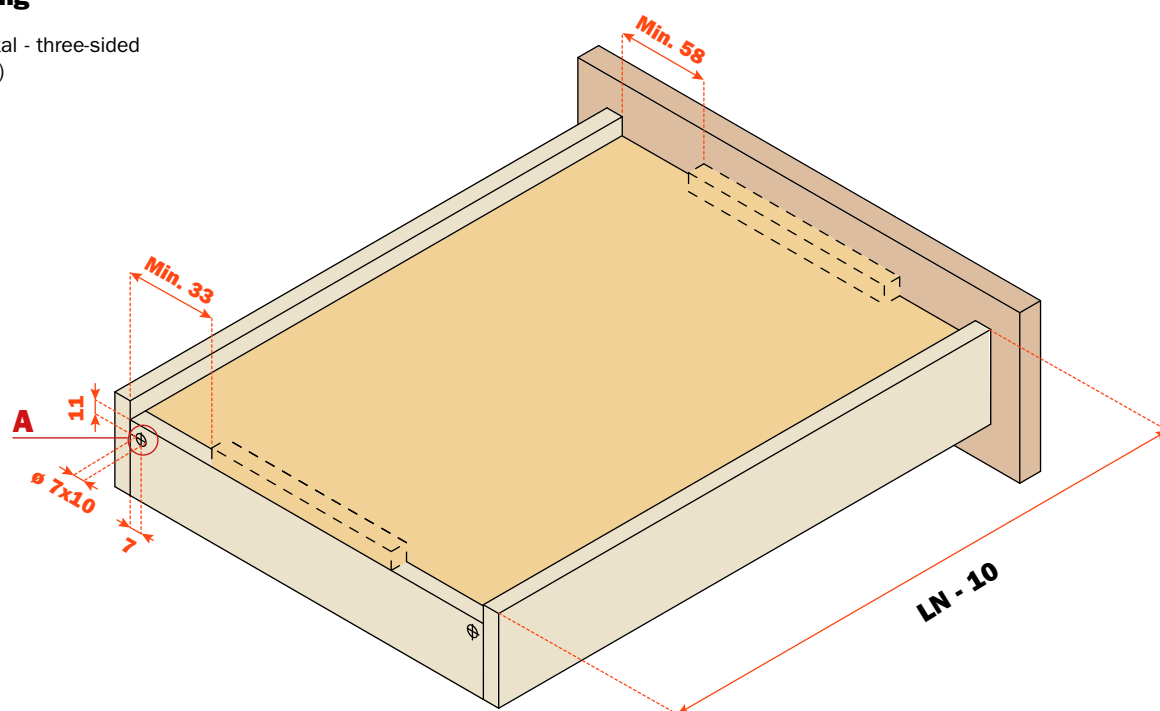


Drawer drilling

Internal drawer - four-sided
(view from below)



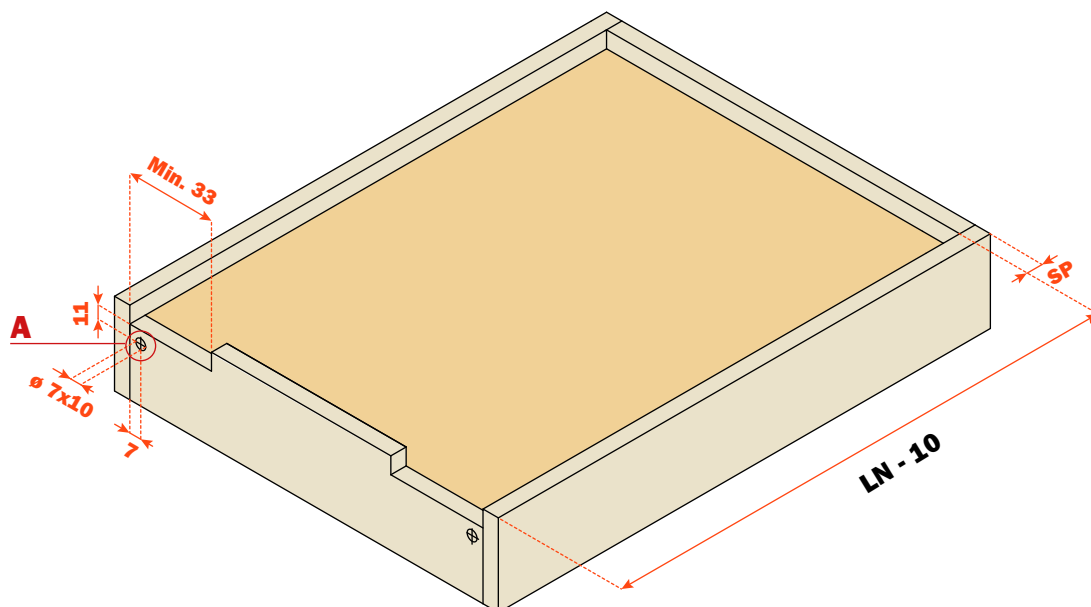


Real hook

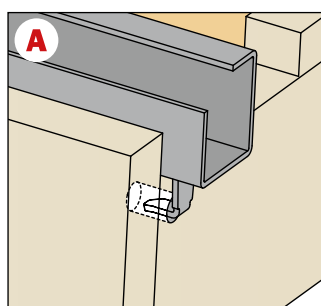



1 way adjustable clip - Technical information - adjustment

Clip fixing

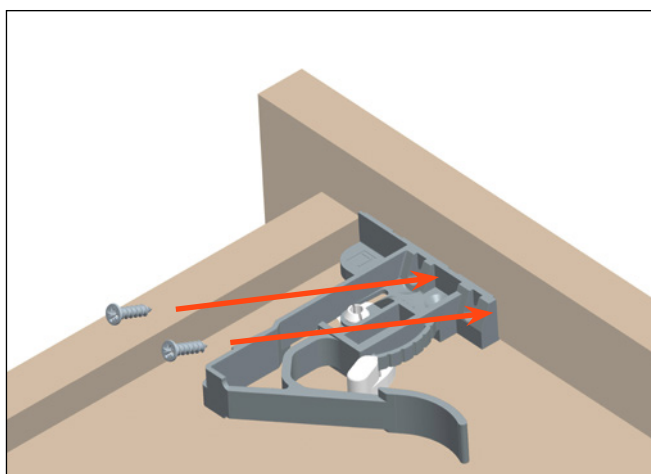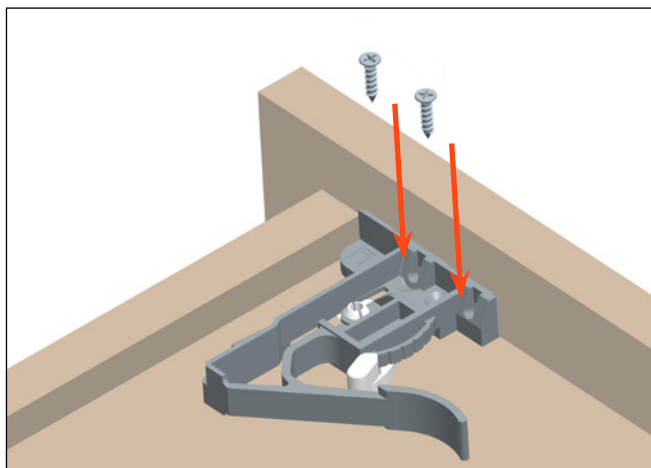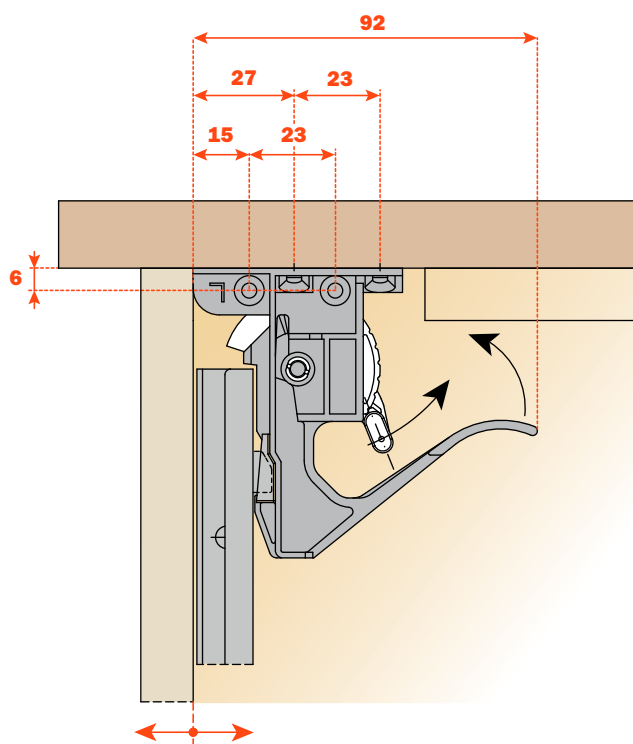

Drawer adjustment

Drawer height adjustment (+ 2,5 mm) using the lever indicated

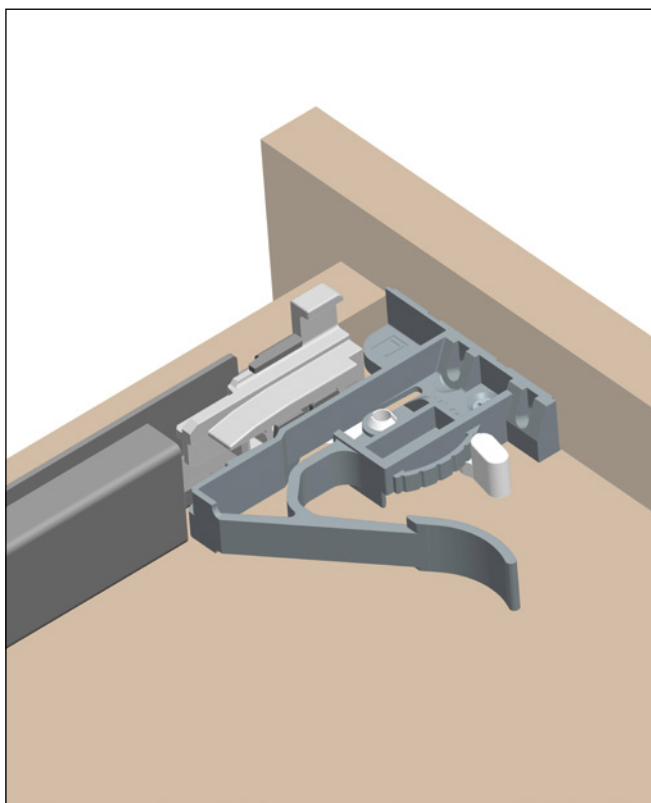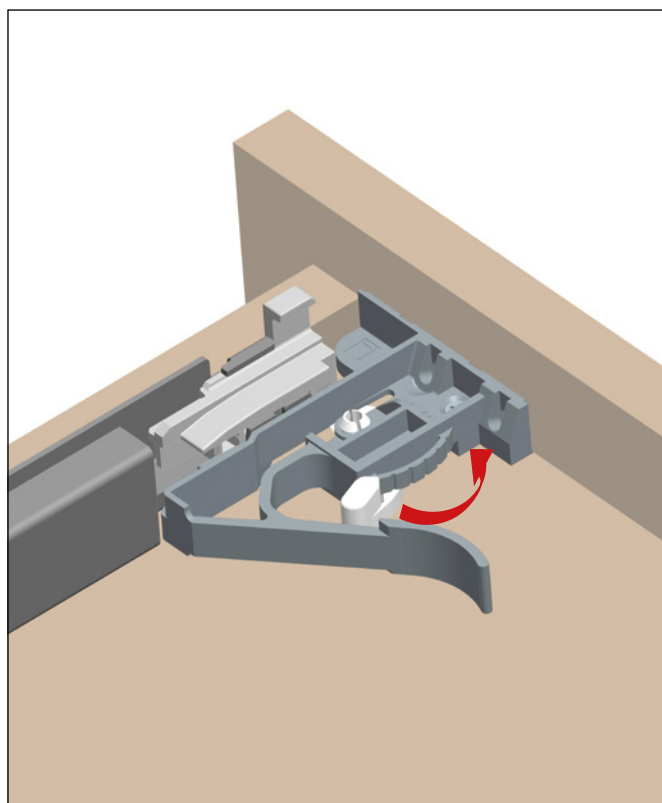

Un!ca - With 3 way adjustable clip

The 3 way adjustment allows to:

- align the drawers between them;
- align the drawers with the cabinet.




Features and benefits of the clip:

- for all versions of full-extension runners
- tool free 3 way adjustment
- patented removal system of the drawer, from both the front and the sides of the drawer
- clip manufactured in Carbon Fibre rich material for light weight, strength and rigidity

Clip assembly

Position the left and the right clip at the front of the drawer.


Fix with the screws on the bottom or on the front of the drawer as indicated in the images below.

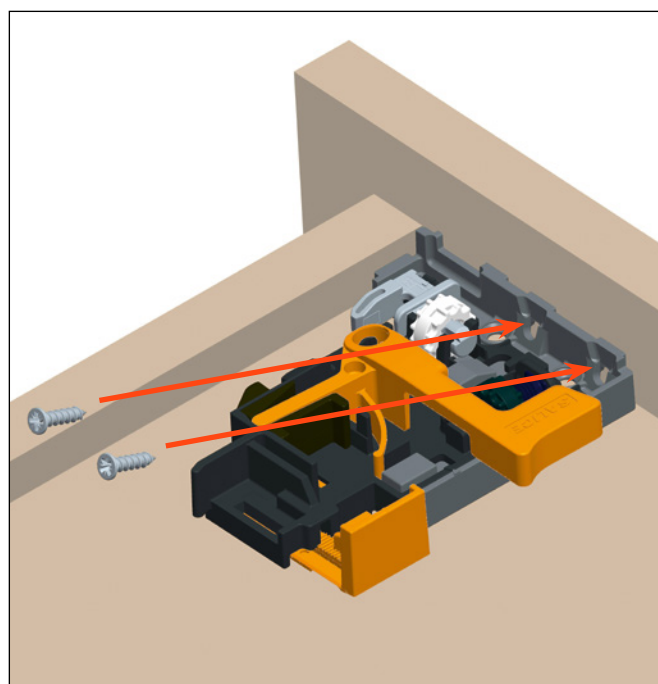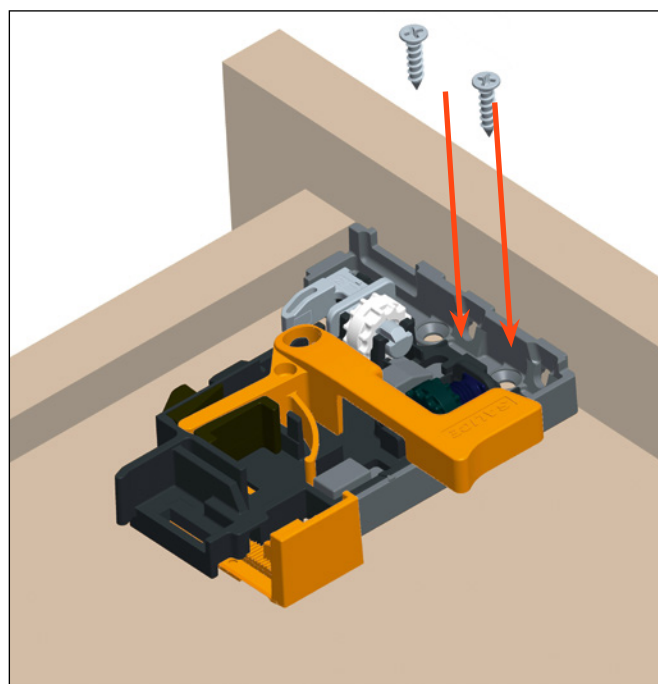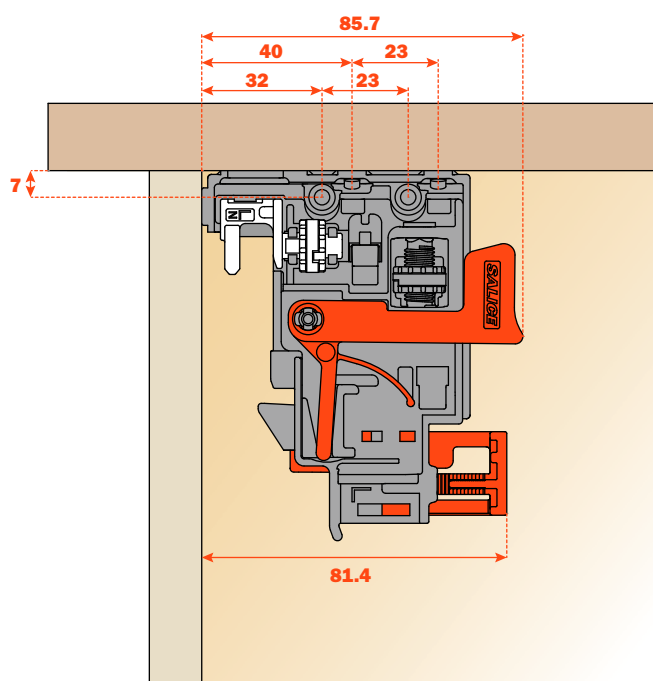


3 way adjustable clip - Removal

The drawer can be removed operating from both the front and the sides.

Removal from the front: position the hands under the front of the drawer and operate on the orange levers, as indicated in the drawing, sliding the drawer forward.

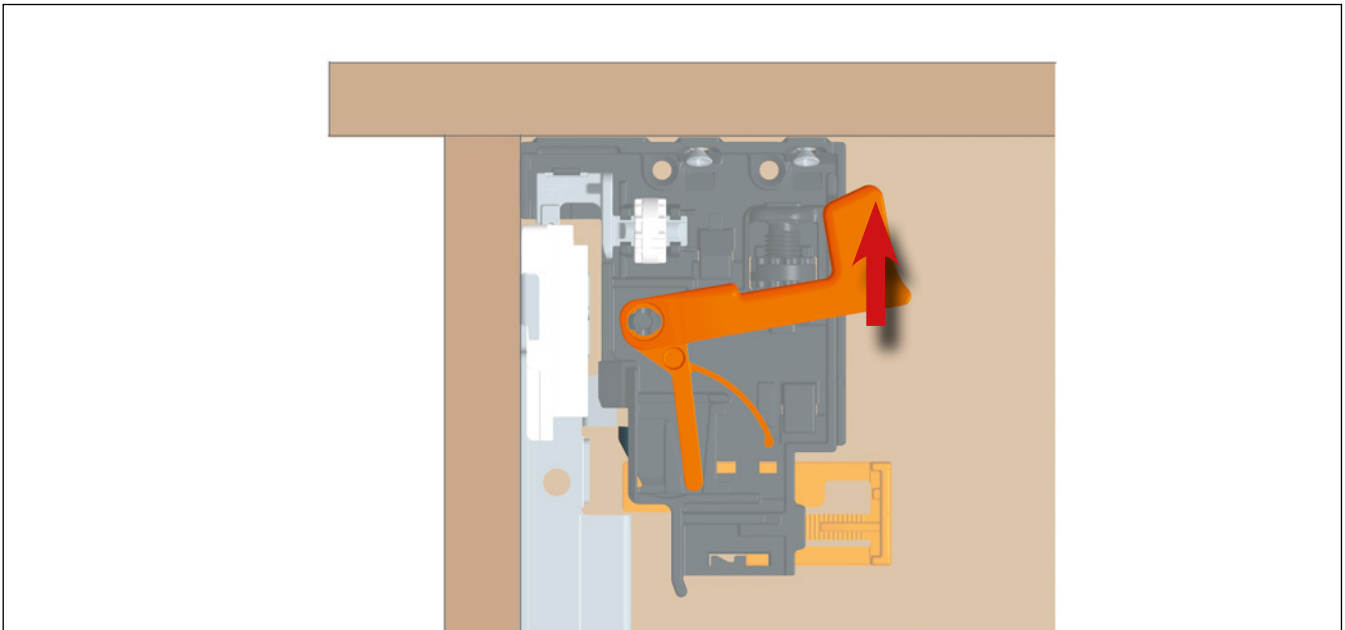



Removal from the side: position the hands under both sides of the drawer and operate on the orange levers, as indicated in the drawing, sliding the drawer forward.

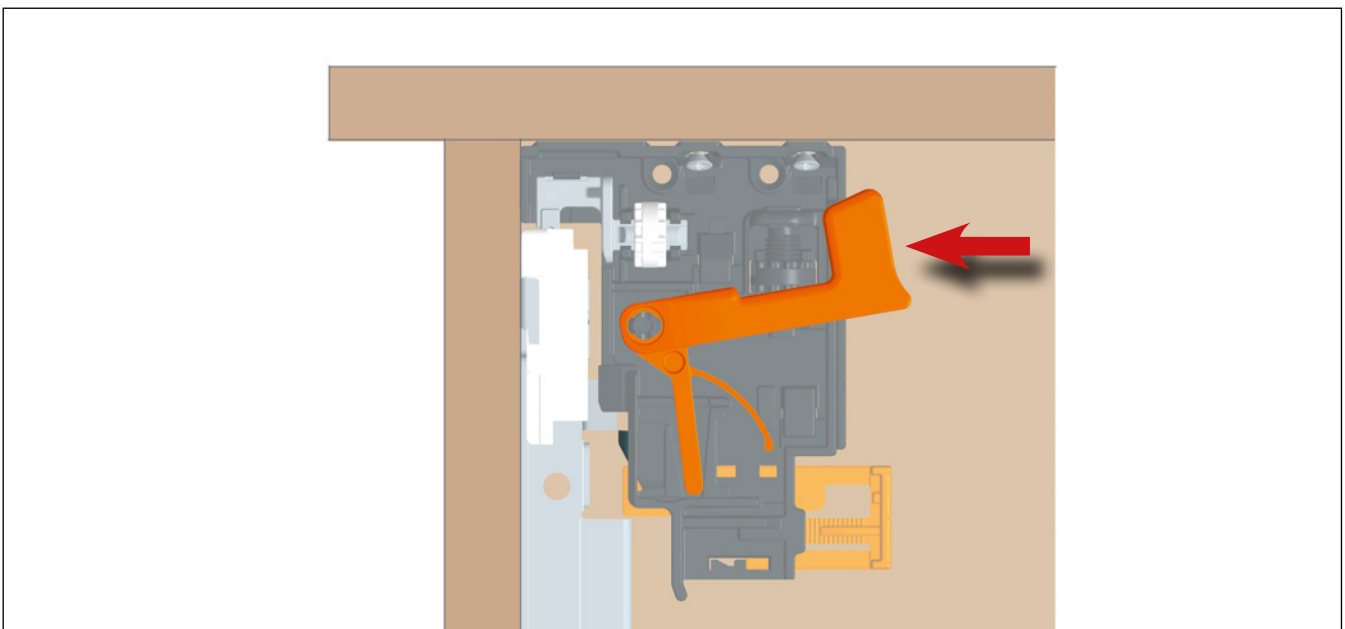




Un!ca - With 3 way adjustable clip

Height adjustment + 2.5 mm

Initial position of the lever for the height adjustment


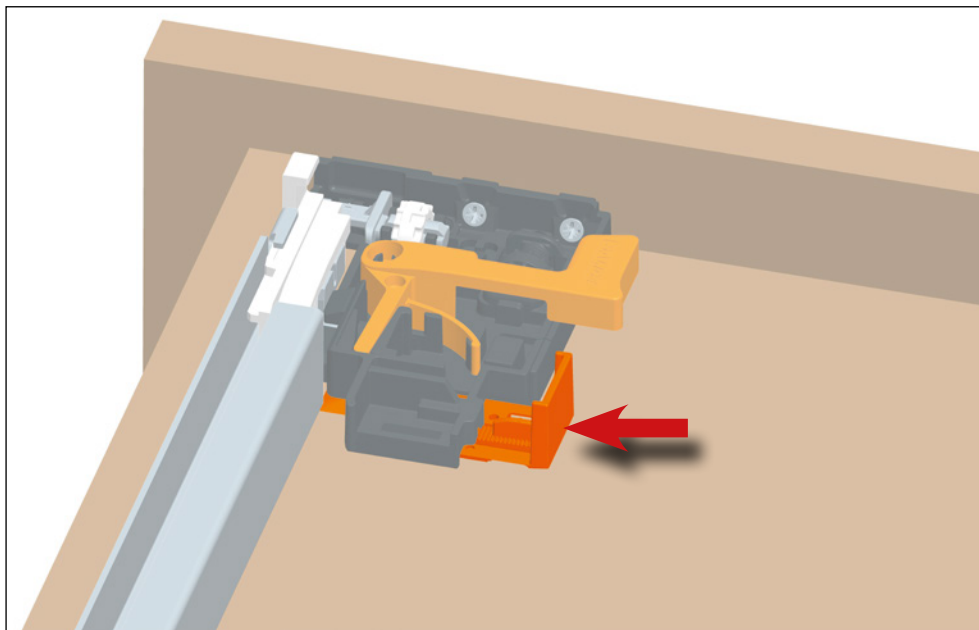
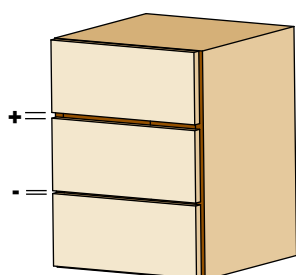


Push the lever towards the outside of the drawer to achieve the height adjustment.
This operation is tool free.

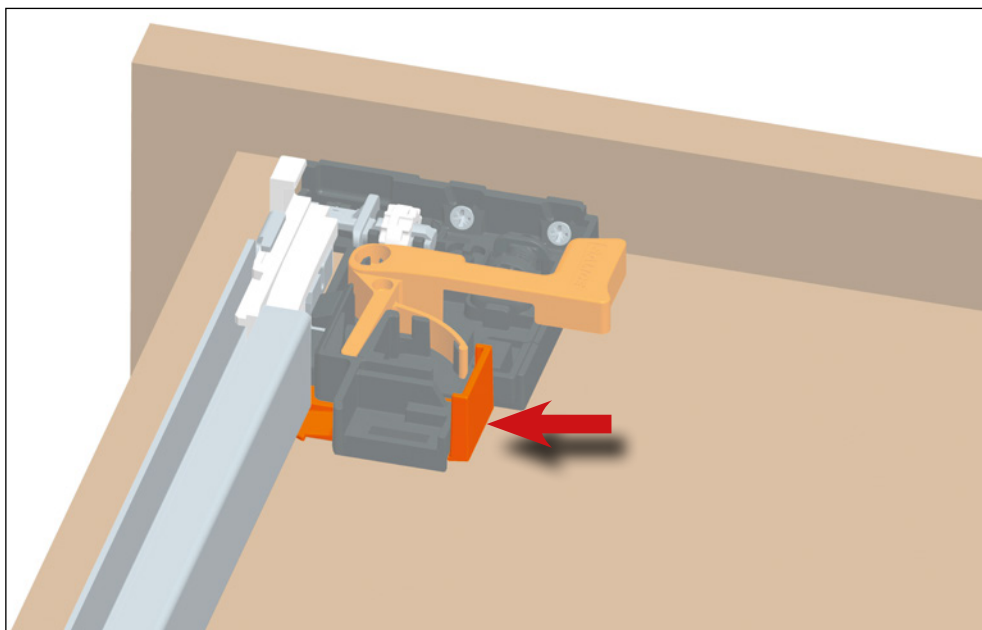
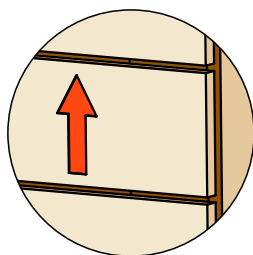
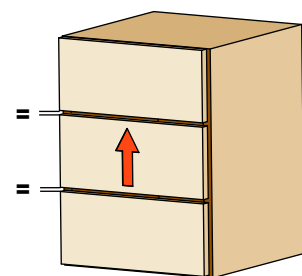


Sideways adjustment + 1.5 mm - 1.5 mm

Rotate the white wheel towards the front of the drawer to adjust left.
The clip shows the position 0.
This operation is tool free.

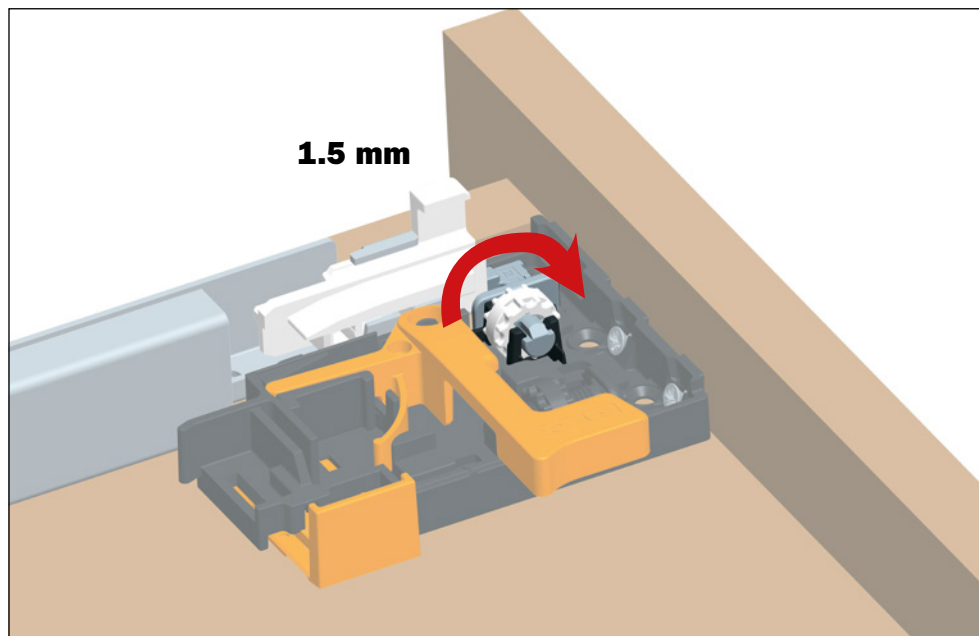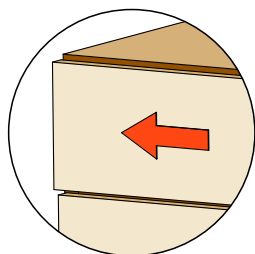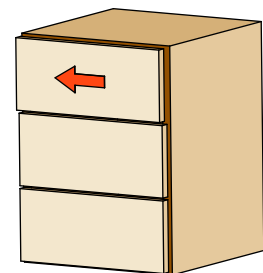

Rotate the white wheel towards the back of the drawer to adjust right.
The clip shows the position 0.
This operation is tool free.

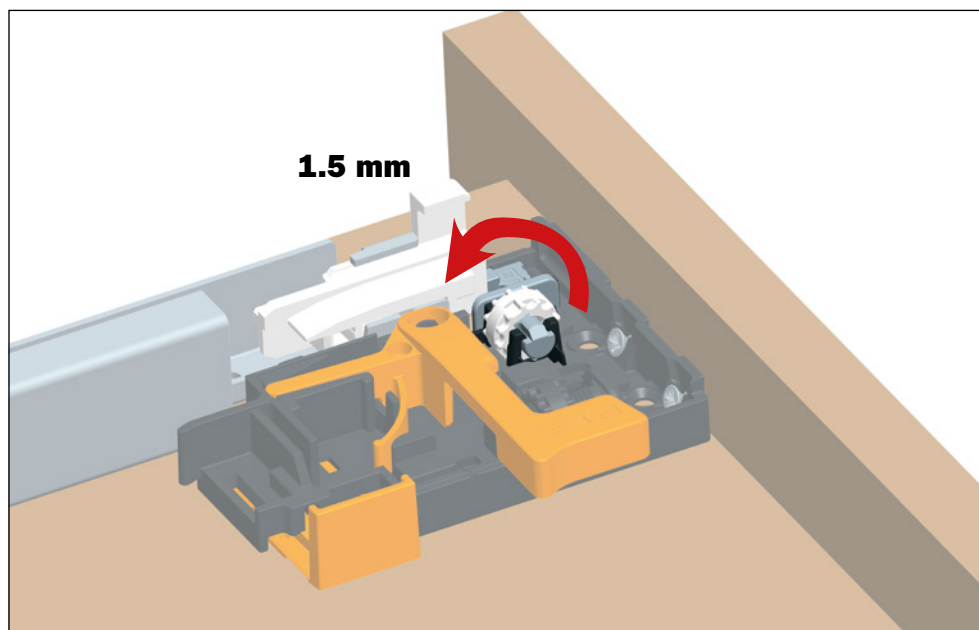
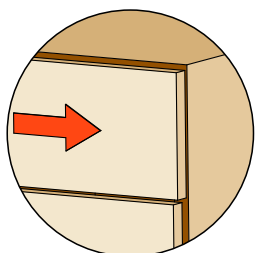
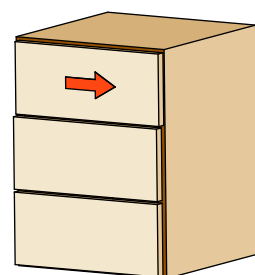


For sideways adjustment, it is recommended that the adjusters on the clips are operated in the same direction, in order to maintain the correct alignment and movement of the runners.




Un!ca - With 3 way adjustable clip

Depth adjustment + 2 mm - 2 mm

Rotate the black wheel towards the inside of the drawer to reduce the gap between the front and the side.
The clip shows the position 0.
This operation is tool free.

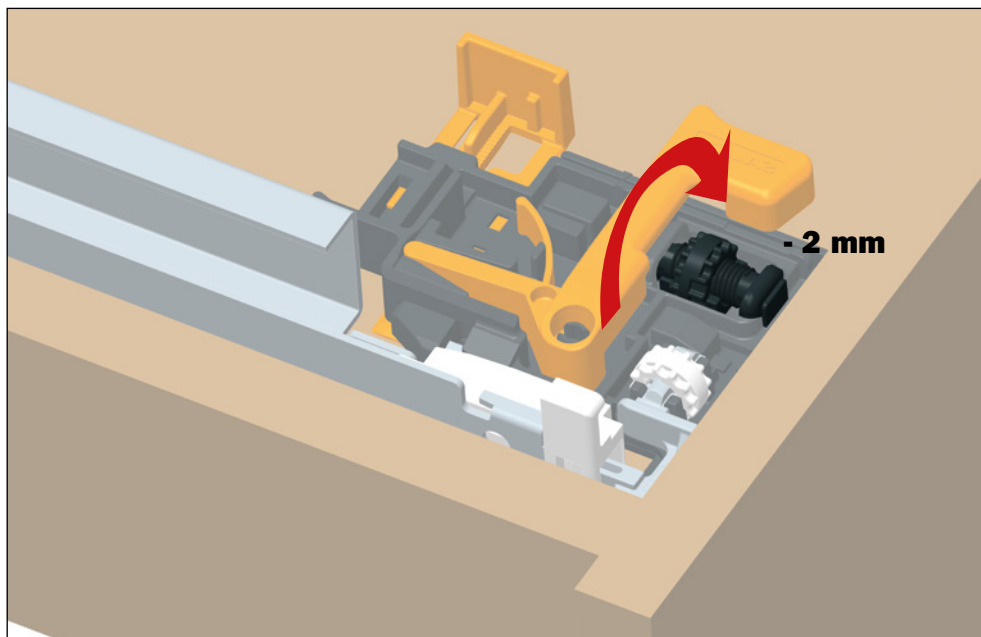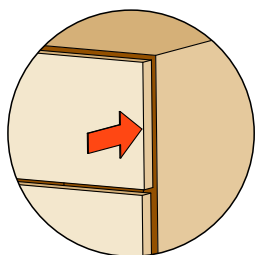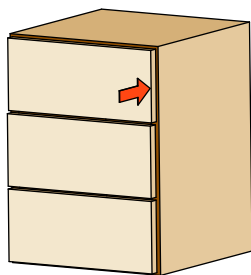


Rotate the black wheel towards the outside of the drawer to increase the gap between the front and the side.
The clip shows the position 0.
This operation is tool free.

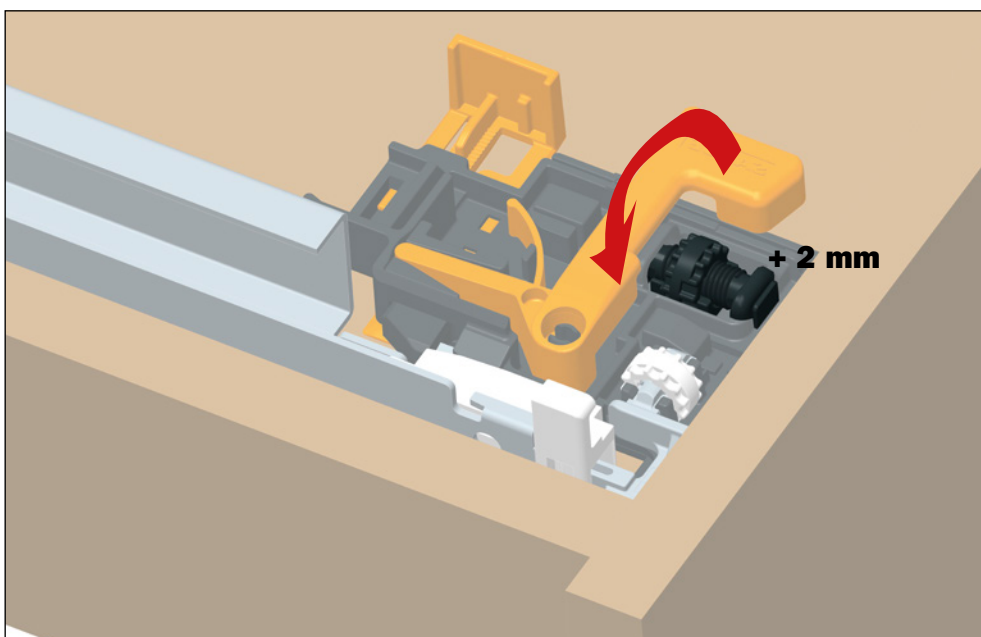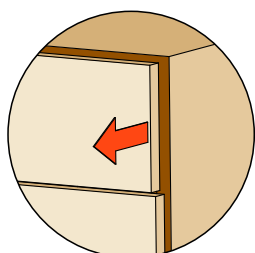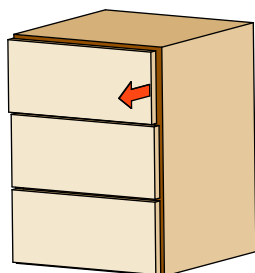

Technical information

Full-extension

Drawer length = extension

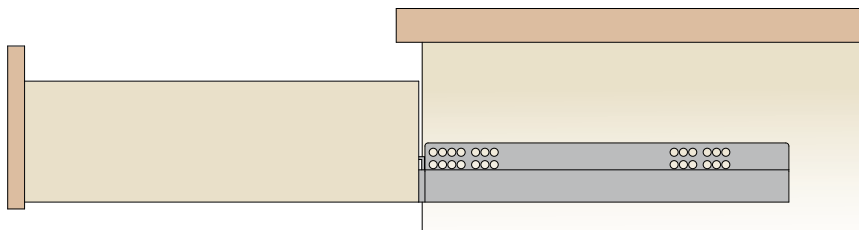

Industrial packing = 20 pairs

Clip version


Pallet: - length from 300 to 400 mm = 300 pairs
- length from 450 to 500 mm = 280 pairs

Pin version

Pallet: - length from 300 to 400 mm = 300 pairs
- length from 450 to 500 mm = 280 pairs




Clip part number 1 0 710 00 010 1 0 0

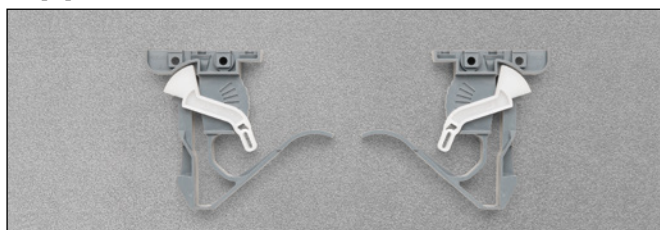

Packing = 100 pairs

Clip part number 1 0 750 00 010 1 0 0

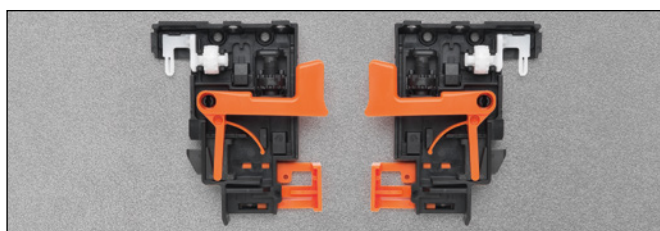

Packing = 100 pairs

Part number composition - runners

Example:

10 XXX 80 XXX 2 0 0

BASIC PART NUMBER

ARTICLE (ex. 652)


ARTICLE VERSIONS:
80 = Unica

PACKING:
0 = industrial

FIXING ON CABINET SIDE:
0 = to be screw fixed

RUNNER LENGTH (in mm)

Un!ca 6528 - concealed runner

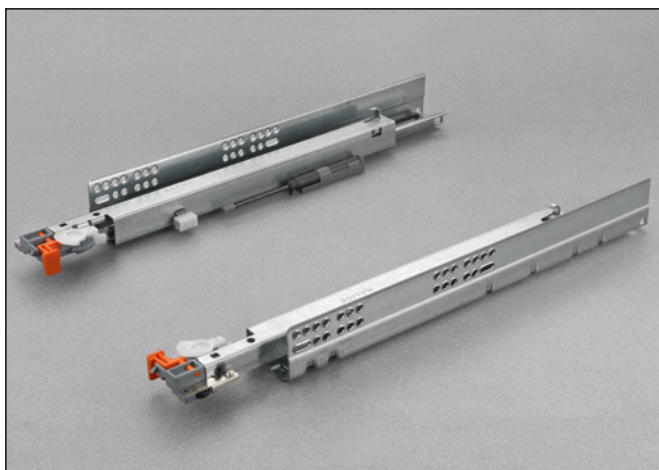


Full-extension runner system fixed to the drawer by locating pin. The Push self-opening system for handle-less drawers is fully integrated into the runner.

A slight pressure on the drawer frontal is sufficient for the drawer to self-open.


The Smove decelerated closing action is also fully integrated into the runner.

Product features


- Safety system that secures the drawer to the runner.
- Drawer height adjustment +3 mm and depth adjustment ± 2 mm.
- The drawer is maintained parallel with the cabinet side during opening.
- Drawer fixing without screws.
- Finish: bright zinc-plated.

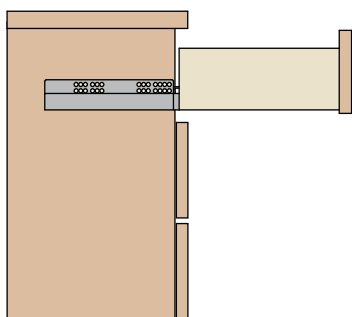

Dimensions

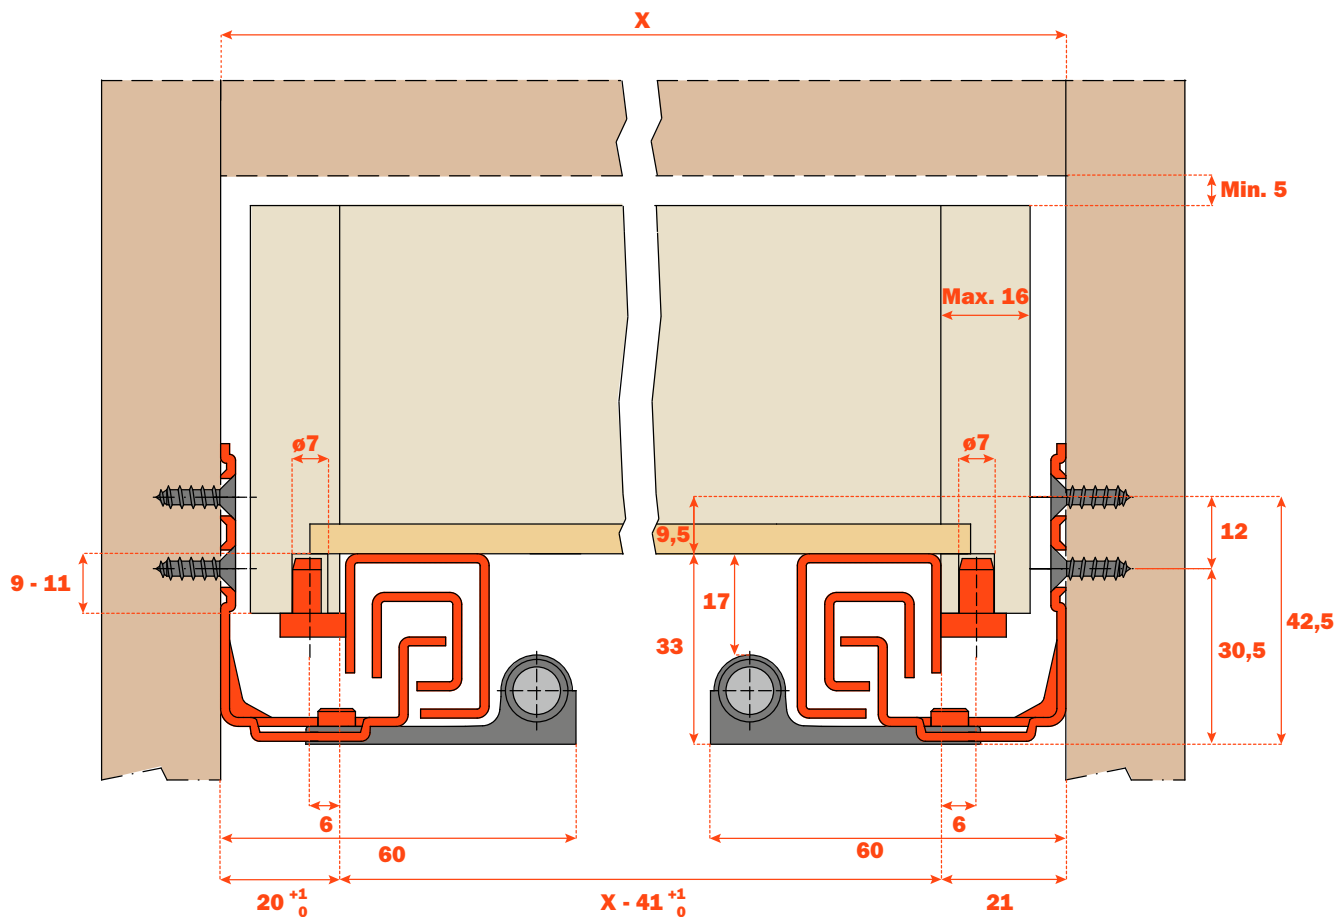

Part number

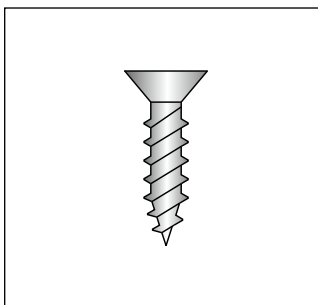

To be screw fixed
Screw TSP \varnothing 3,5 mm


Fixing the drawer onto the runners

The flexibility of the system enables the locating pin to be engaged simply by placing the drawer onto the runners and closing it.



Detail of the pin-fix clip premounted on the runner, with:

- Tool free height and depth adjustment;
- Safety device to prevent the drawers from turning over;
- Locating pin.

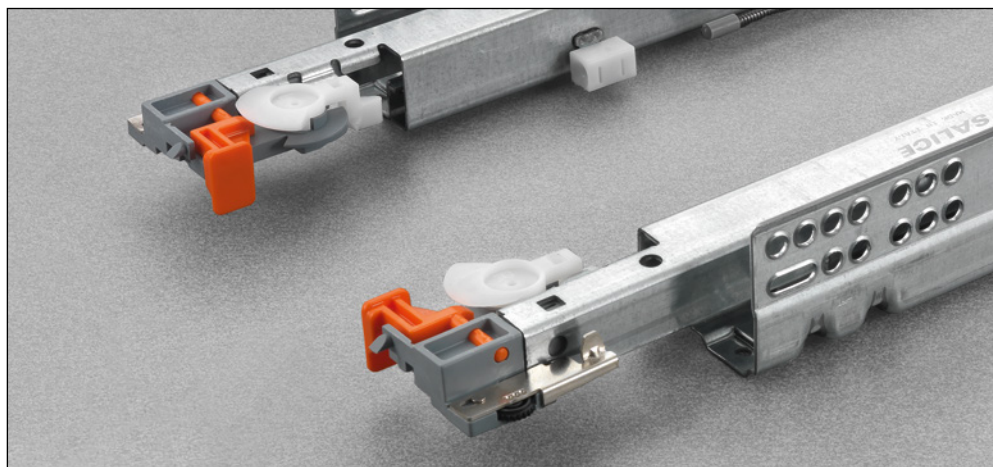

Detail of the integrated systems into the runner:

- Push, which allows the opening of handle-less drawers.
- Smove, which allows the decelerated closing of the drawers.




Un!ca 6558 - concealed runner




Full-extension runner system fixed to the drawer by clip.
The Push self-opening system for handle-less drawers is fully integrated into the runner.
A slight pressure on the drawer frontal is sufficient for the drawer to self-open.
The Smove decelerated closing action is also fully integrated into the runner.

Product features


- Safety system that secures the drawer to the runner.
- Drawer height adjustment +2.5 mm with clip 10 710.
- Drawer height adjustment +2.5 mm, side adjustment ± 1.5 mm, depth adjustment ± 2 mm with clip 10 750.
- The drawer is maintained parallel with the cabinet side during opening.
- Finish: bright zinc-plated.

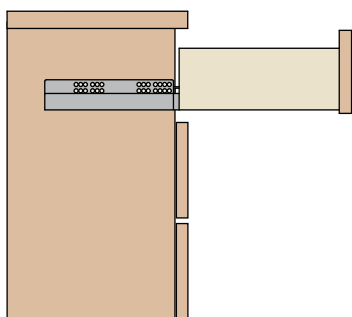

Dimensions

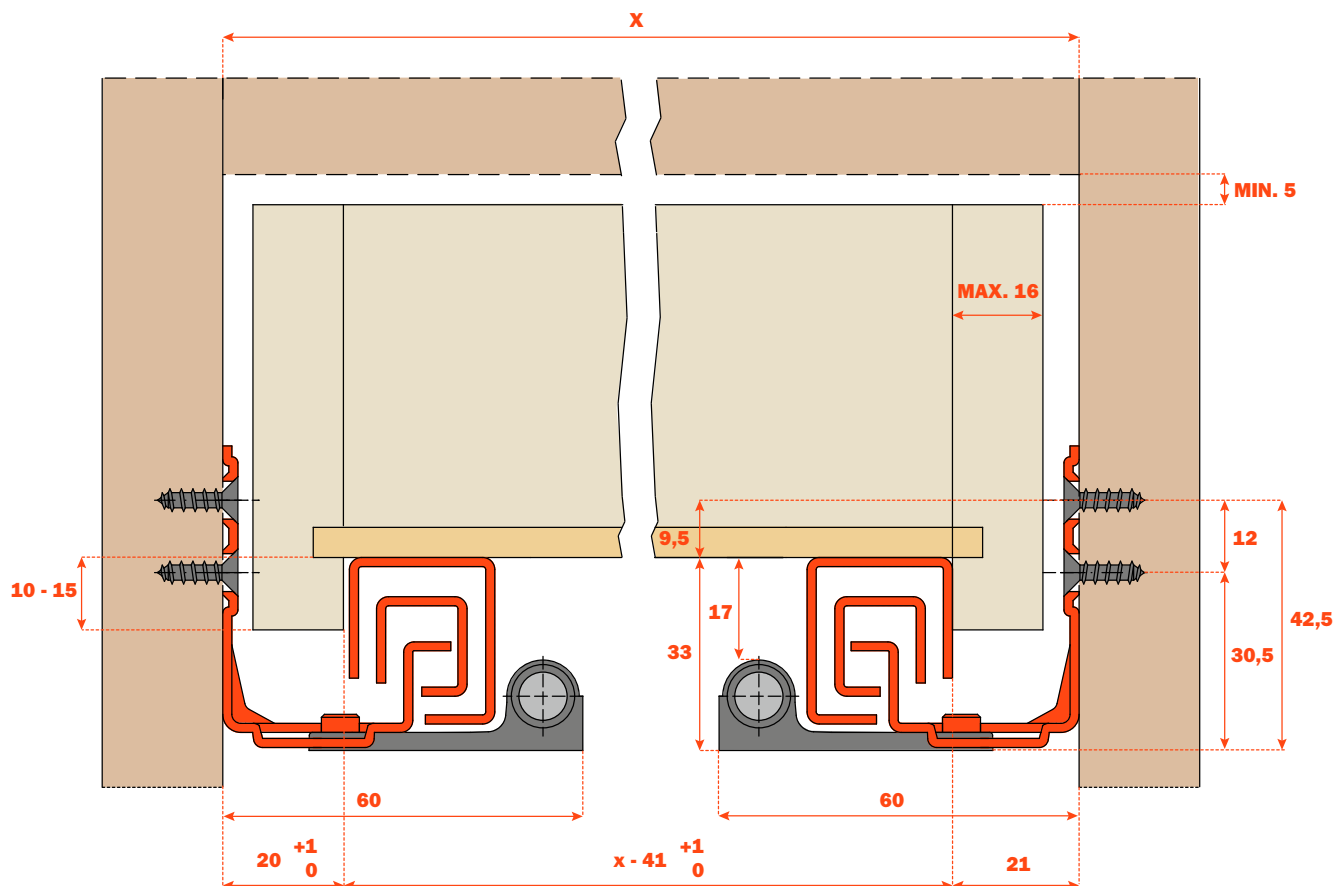

Part number

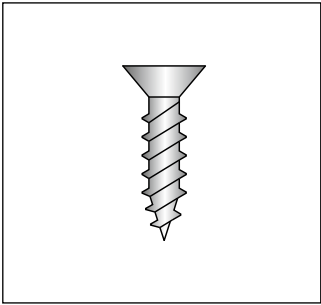


To be screw fixed
Screw TSP \varnothing 3,5 mm

BASIC PART NUMBER	RUNNER LENGTH (LN)	=	MIN. DEPTH OF THE CABINET (PM)
1 0 655 80 300 2 0 0	300		310
1 0 655 80 350 2 0 0	350		360
1 0 655 80 400 2 0 0	400		410
1 0 655 80 450 2 0 0	450		460
1 0 655 80 470 2 0 0	470		480
1 0 655 80 500 2 0 0	500		510

Fixing the drawer onto the runners


Clip part number 1 0 710 00 010 1 0 0


Detail of the clip with tool free integrated height adjustment.

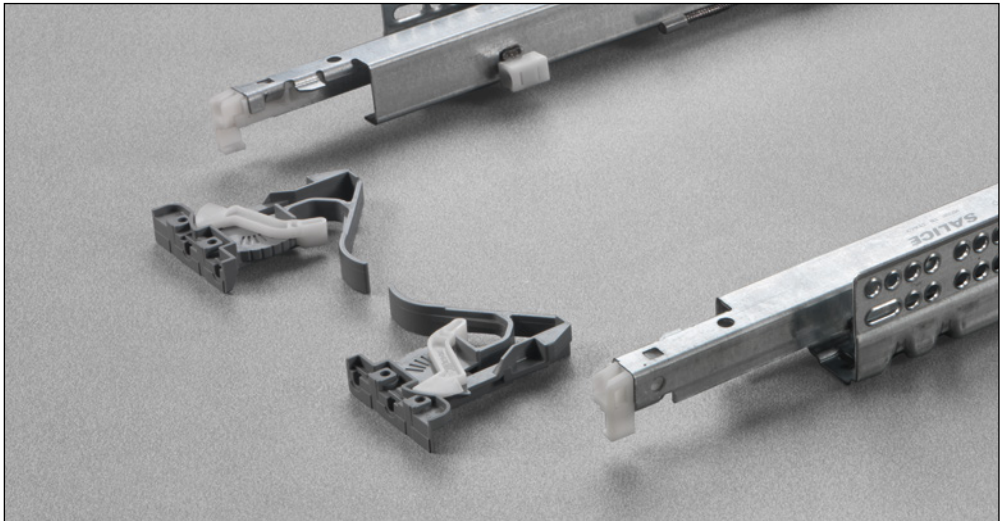

Clip part number 1 0 750 00 010 1 0 0

Detail of the tool free integrated 3-way adjustment clip (height, depth and side adjustment).


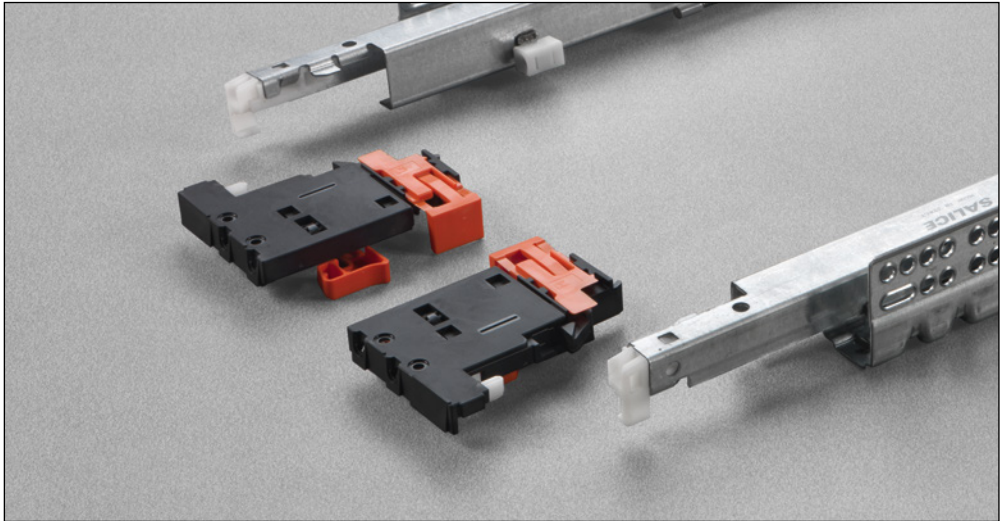


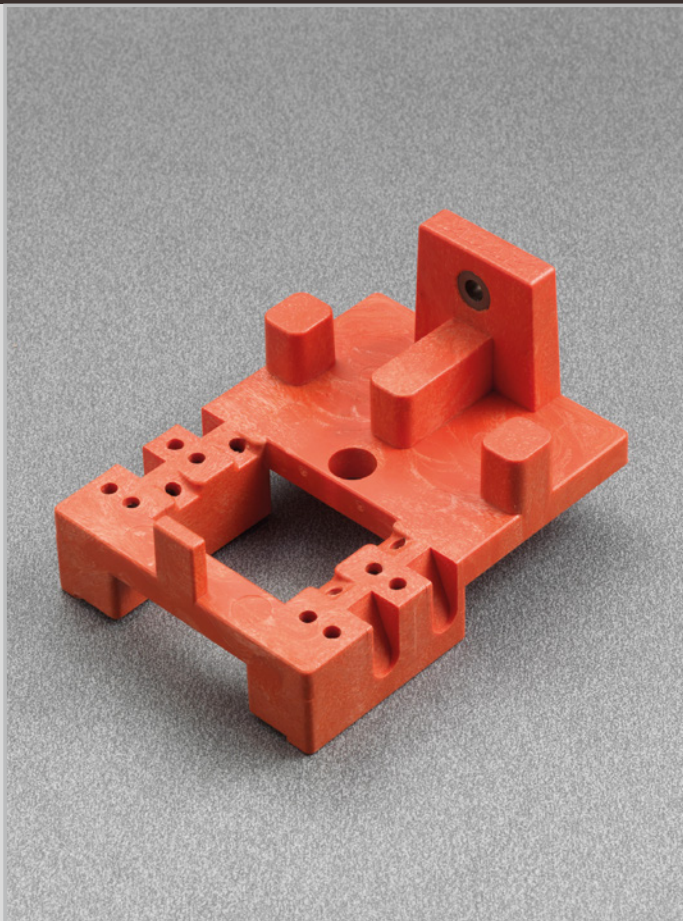

Accessories




Accessories

Drawer drilling templates for Unica runners

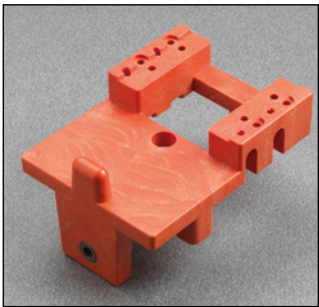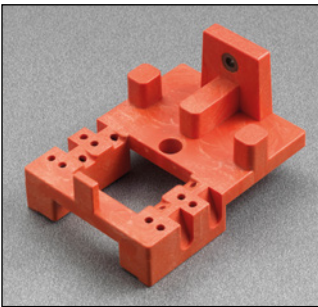


199800755009
Template for drawer drilling and 1 way adjustable clip fixing

Clip part number 1 0 710 00 010 1 0 0

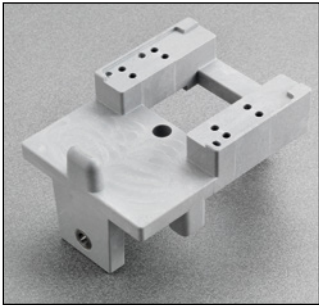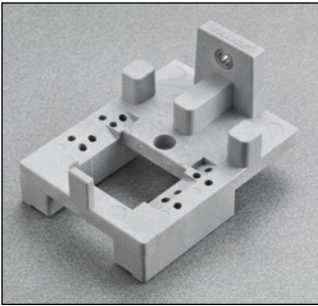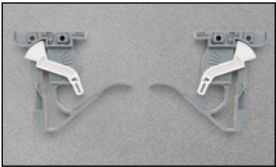

199800755010
Template for drawer drilling and 3 way adjustable clip fixing

Clip part number 1 0 750 00 010 1 0 0

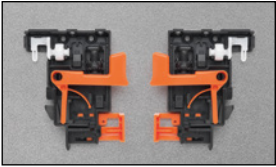


Stabilizer for drawers





- To be fitted on both right and left sides of the drawer
- Cam adjustment to allow a perfect bearing of the wheels to the cabinet sides
- Combined with Push runners it allows the opening also by pressing the extremities of the drawer
- It improves the overall stability of the drawer

DATA FOR ORDER	
PACKING	PART NUMBER
Envelope with 2 pieces (2 mounting plates, 2 roller carriages and assembly instructions)	6869400000202
Box 300 pieces	6869400000200

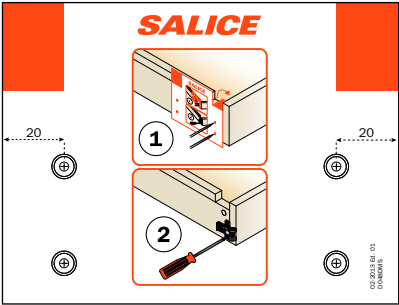





Spacer for Unica runners

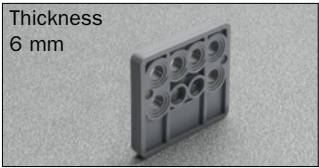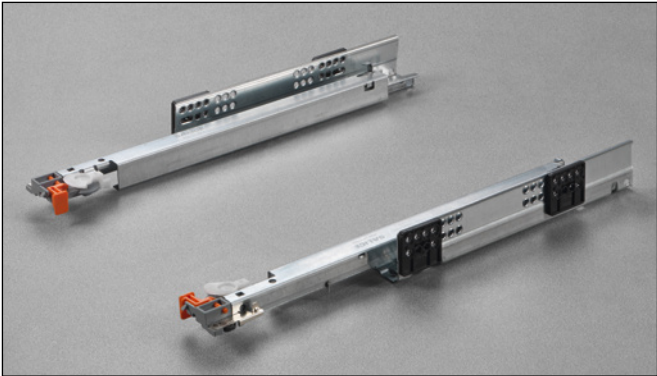

DATA FOR ORDER

Packing: 1 x 800 pieces

DESCRIPTION	PART NUMBER
Spacer 4,5 mm	825104145
Spacer 6 mm	825104160

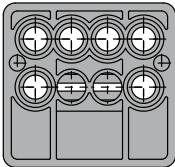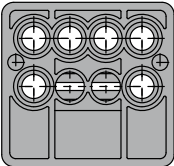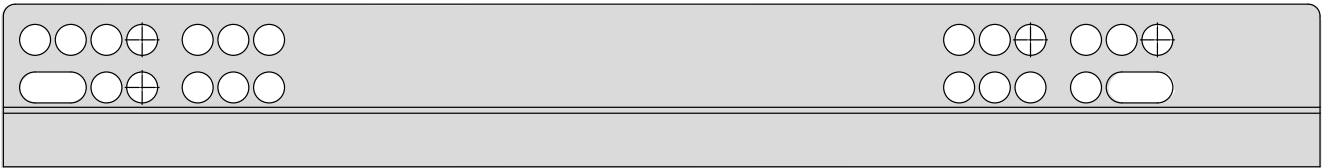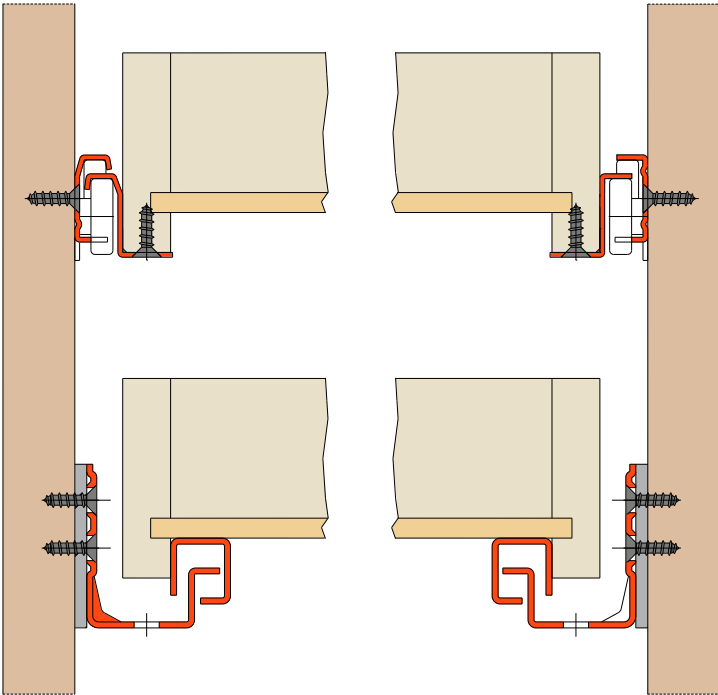

HEADQUARTERS AND PRODUCTION UNITS

ARTURO SALICE S.p.A.

HEAD OFFICE

VIA PROVINCIALE NOVEDRATESE, 10
22060 NOVEDRATE (COMO) ITALIA
TEL. 031 790424 - FAX 031 791508
info.salice@salice.com
www.salice.com

ARTURO SALICE S.p.A.

VIA ARISTIDE MERLONI, 11
61036 COLLI AL METAURO (PU) ITALIA
TEL. 0721 899800
FAX 0721 897980
info.salice@salice.com
www.salice.com

BORTOLUZZI SISTEMI S.p.A.

VIA CADUTI 14 SETTEMBRE 1944, 45
32100 BELLUNO (BL) ITALIA
TEL. 0437 930866
FAX 0437 931442
info@bortoluzzi.com
www.salice.com

NUOVA ATIM S.r.l.

VIA IV NOVEMBRE, 52
20019 SETTIMO MILANESE (MI) ITALIA
TEL. 02 33503203
FAX 02 33516514
info@atimspa.com
www.atimspa.com

BRANCHES

DEUTSCHE SALICE GMBH

RUDOLF DIESEL STR. 10
74382 NECKARWESTHEIM
TEL. 07133 9807-0
FAX. 07133 9807-16
info.salice@deutschesalice.de
www.salice.com

DEUTSCHE SALICE GMBH

VERKAUFSBÜRO NORD
RINGSTRASSE 36/A30 CENTER
32584 LÖHNE
TEL. 05731 15608-0
FAX. 05731 15608-10
vknord@deutschesalice.de
www.salice.com

SALICE UK LTD.

KINGFISHER WAY
HINCHINGBROOKE BUSINESS PARK
HUNTINGDON CAMBS PE 29 6FN
TEL. 01480 413831
FAX. 01480 451489
info.salice@saliceuk.co.uk
www.salice.com

SALICE FRANCE S.A.R.L.

285 RUE DE GOA ZAC LES 3 MOULINS
06600 ANTIBES
TEL. 0493 330069
FAX. 0493 330141
info.salice@salicefrance.com
www.salice.com

SALICE ESPAÑA, S.L.U.

C/ AIGUAFREDA 4, P.I. AMETLLA PARK
08480 L'AMETLLA DEL VALLÈS (BARCELONA)
TEL. 0034 938 46 88 61
info.salice@saliceespana.es
www.salice.com

SALICE PORTUGAL UNIP. LDA

SHOWROOM:
TV SÁ E MELO 161 FA
4470-116 MAIA – PORTO
TEL: 00351 224 154 221
Info@saliceportugal.pt
www.salice.com
ARMAZÉM:
VIA ROTA DOS MÓVEIS I 399
4585-325 GANDRA

SALICE CHINA (SHANGHAI) CO. LTD.

RM 602, 6/F, TOWER 1,
3688 YINGGANG DONG ROAD
QINGPU DISTRICT
201703 SHANGHAI, CHINA
TEL. 021 3988-9880
info.salice@salicechina.com
www.salicechina.com

SALICE INDIA PVT. LTD.

1001 & 1002, 10TH FLOOR,
CENTRUM, PLOT NO. C-3,
OPP. WAGLE PRABHAG SAMITI OFFICE,
MIDC AREA, WAGLE INDUSTRIAL ESTATE,
THANE - 400604, MAHARASHTRA
TEL. 022 20812050
info@saliceindia.com
www.salice.com

SALICE CANADA INC.

3500 RIDGEWAY DRIVE,
UNIT#1
MISSISSAUGA, ONTARIO, L5L 0B4
TEL. 905 820 8787
FAX. 905 820 7226
info.salice@salicecanada.com
www.salicecanada.com

SALICE AMERICA INC.

2123 CROWN CENTRE DRIVE
CHARLOTTE NC. 28227
TEL. 704 841 7810
FAX. 704 841 7808
info.salice@saliceamerica.com
www.saliceamerica.com

ARTURO SALICE S.p.A.

HEAD OFFICE

VIA PROVINCIALE NOVEDRATESE, 10
22060 NOVEDRATE (COMO) ITALIA
TEL. 031 790424 - FAX 031 791508

info.salice@salice.com
www.salice.com