



**Sliding system  
for concertina doors**

***SALICE***

## Sliding system for concertina doors - Technical features

The Salice system for concertina doors has been designed to open both doors on one side only, giving good access to the interior of the cabinet.

Space taken up by the door in the maximum open position is reduced to a minimum (approximately 80 mm).



A nylon strip is available in order to prevent insertion of objects or fingers between doors. This also makes the system dustproof.



To ensure that the door closes fully and securely, particularly when there is some curvature of the door, a locating device is available.






## Elements of the system

### F1C169

Hinge for sliding block

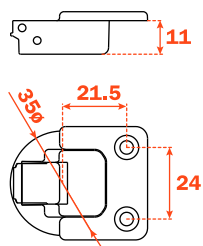

#### Packing

Boxes 300 pcs.  
Pallets 7.200 pcs.

### F1CXE9

Central hinge screw-on





#### Packing

Boxes 600 pcs.  
Pallets 14.400 pcs.

### F1CZ69

For aluminium-framed doors

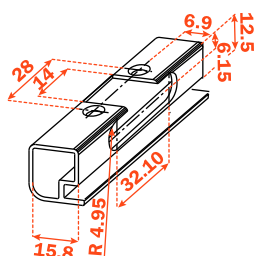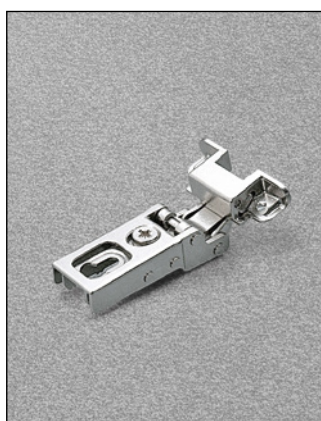

#### Packing

Boxes 300 pcs.  
Pallets 7.200 pcs.

### F1SBAY

Adhesive finger-protection strip



neutro

#### Packing

Boxes 200 pcs.  
Pallets 2.000 pcs.

### F1PVAY

Long sliding block  
For aluminium-framed doors




#### Packing

Boxes 300 pcs.  
Pallets 7.200 pcs.

### F1RFAY

Locating device for door

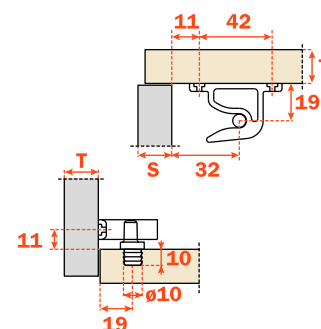

#### Packing

Boxes 300 pcs.  
Pallets 7.200 pcs.

### F1PXAY

Sliding block



#### Packing


Boxes 300 pcs.  
Pallets 7.200 pcs.

## Sliding system for concertina doors - Adjustments


### Calibrated height adjustment

Height adjustment of hinges assembled with the sliding components is achieved through a cam. Through this alignment a parallel movement of the component in the track is achieved. The result is a smooth movement without any binding.

**ATTENTION!** The sliding block does not have a load-bearing function. Therefore it must slide freely inside the track.

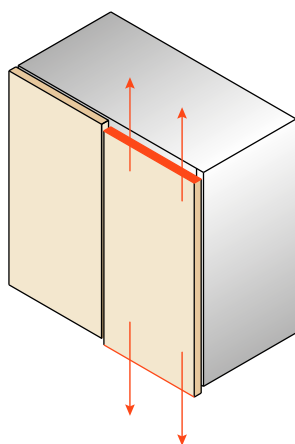


**+2 mm -2 mm**

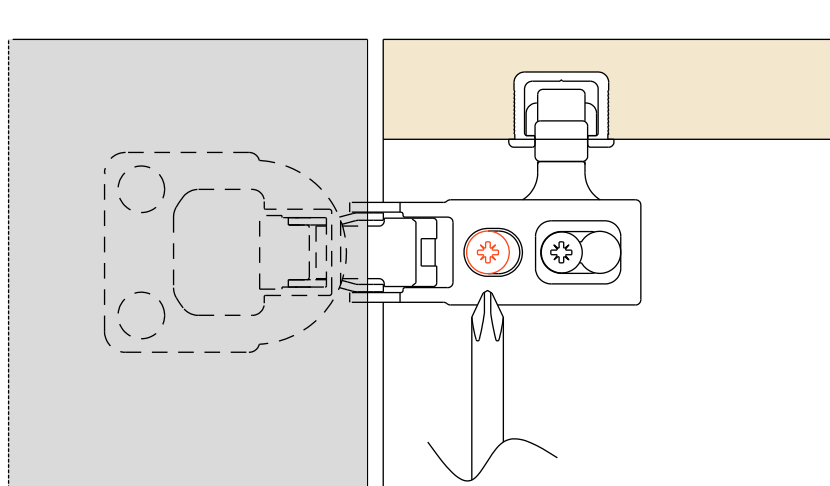


### Depth adjustment

Depth adjustment of the hinges mounted on the sliding component is achieved through the fixing screw of the same hinge.


Depth adjustment should be made in conjunction with the hinges mounted on the opposite door. This adjustment is useful to keep the "L" value constant all along front of the furniture.

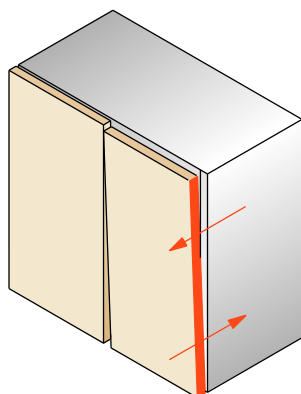

**+2.5 mm**

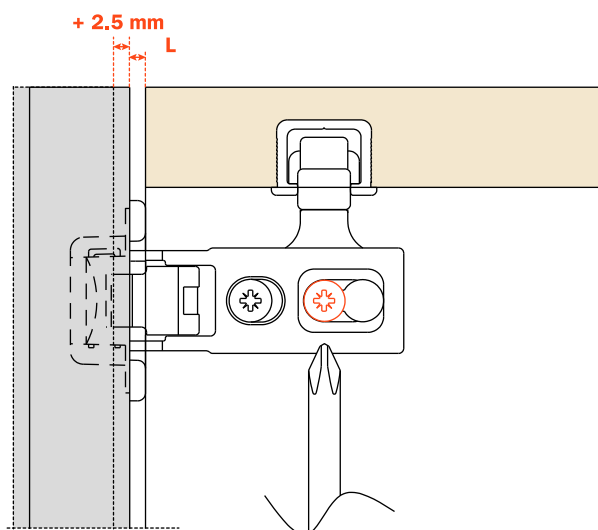

Assembly

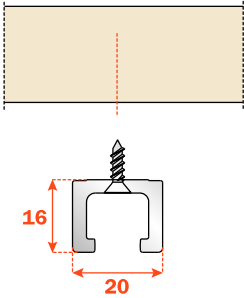
<b>screw-on B 3.5 DIN 7982</b>	
	
Colours	
white	<b>F1GFA1.....</b>
black	<b>F1GFA3.....</b>

Standard lengths available: 590 mm, 880 mm, 1180 mm. Non-standard lengths can be supplied subject to a minimum order quantity of 900 pieces. The required length should be expressed in millimetres in the last four digits of the product code occupied by the dashes.


Mount the hinges of the fixed door on to the mounting plates on the cabinet side.  
We recommend the use of Salice hinge part number C2A6A99 110° with BAR3R mounting plate or similar.



Position the sliding block inside the track by rotating it 90°.

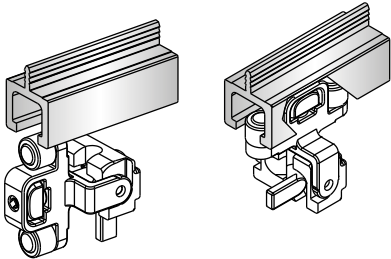

Lock the sliding block into position by turning the marked in orange lever.

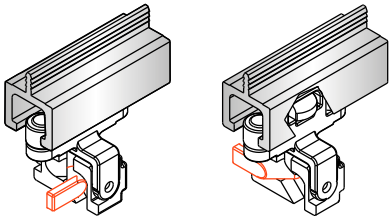


## Sliding system for concertina doors - Assembly instructions

**Application into the top of the cabinet and doors**  
**Solution with plastic track barb-fixed or screw-fixed**

### Drilling distances without finger-protection strip

To facilitate the assembly of the doors on the cabinet, it is preferable to premount all the hinges.

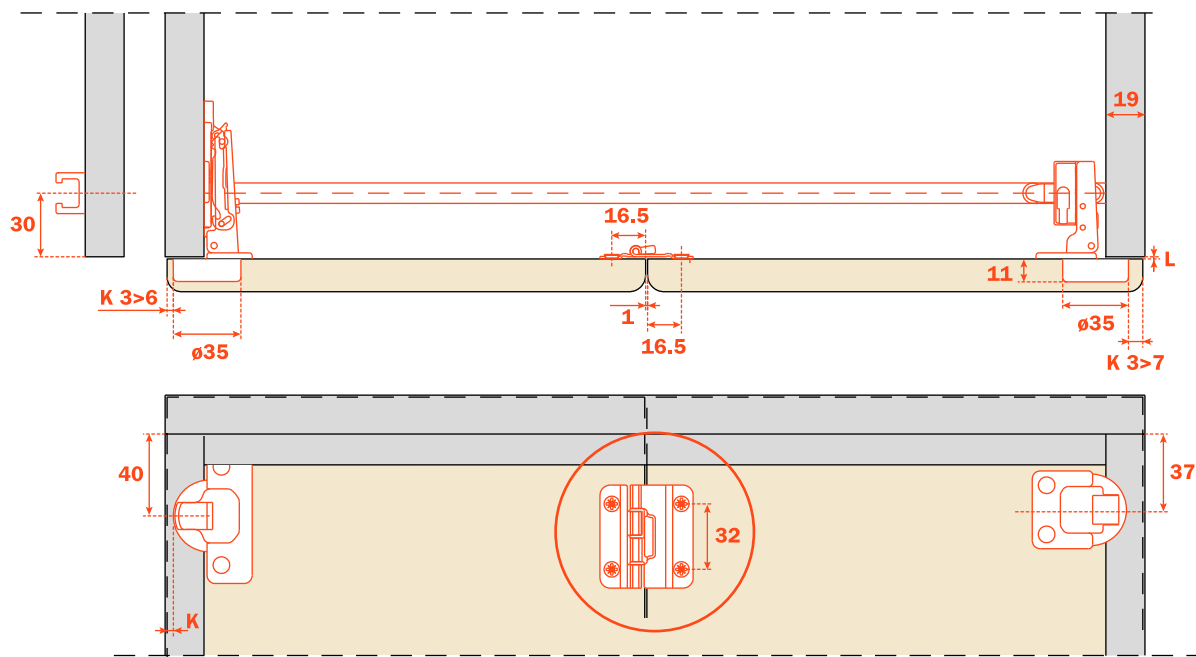


#### Central assembly:

- narrow part to be mounted on the door which is fixed to the cabinet side;
- wider part to be mounted on the moving door.

### Drilling distances with finger-protection strip

To facilitate the assembly of the doors on the cabinet, it is preferable to premount all the hinges.

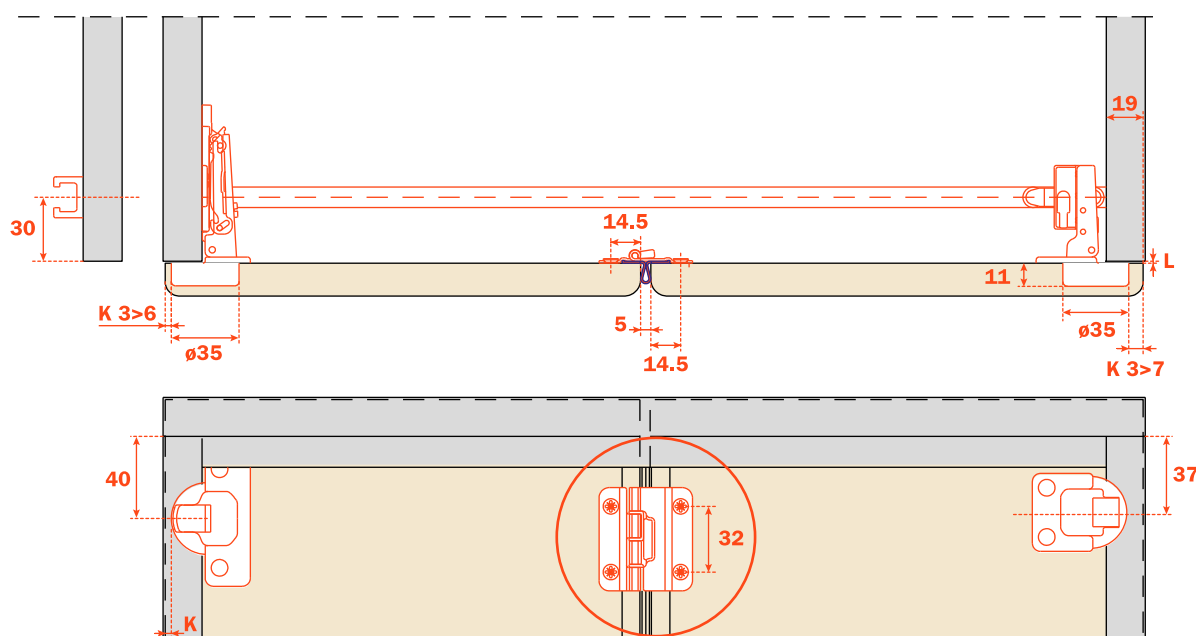

#### Central assembly:


- narrow part to be mounted on the door which is fixed to the cabinet side;
- wider part to be mounted on the moving door.

**Application into the top of the cabinet and doors.**  
**Solution with plastic track barb-fixed or screw-fixed.**

**Glass doors with aluminium-frame**

**Drilling distances without finger-protection strip and with long sliding block**

To facilitate the assembly of the doors on the cabinet, it is preferable to premount all the hinges.

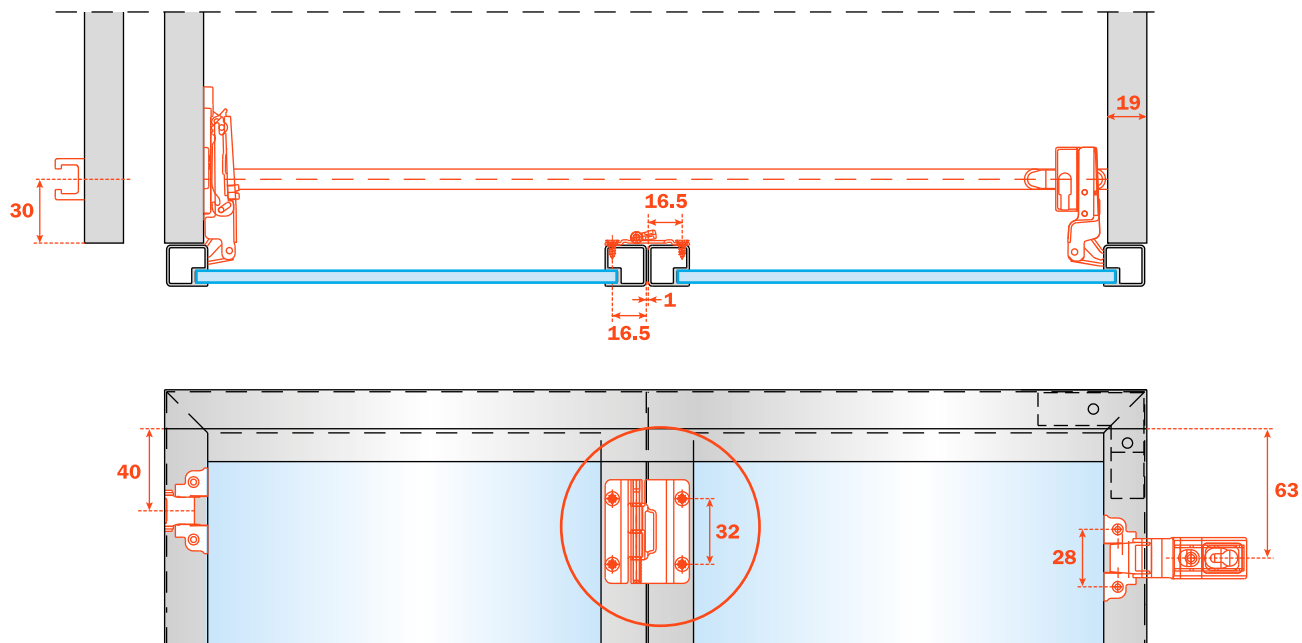


**Central assembly:**

- narrow part to be mounted on the door which is fixed to the cabinet side;
- wider part to be mounted on the moving door.

**Glass doors with aluminium frame**

**Drilling distances with finger-protection strip and long sliding block**

To facilitate the assembly of the doors on the cabinet, it is preferable to premount all the hinges.

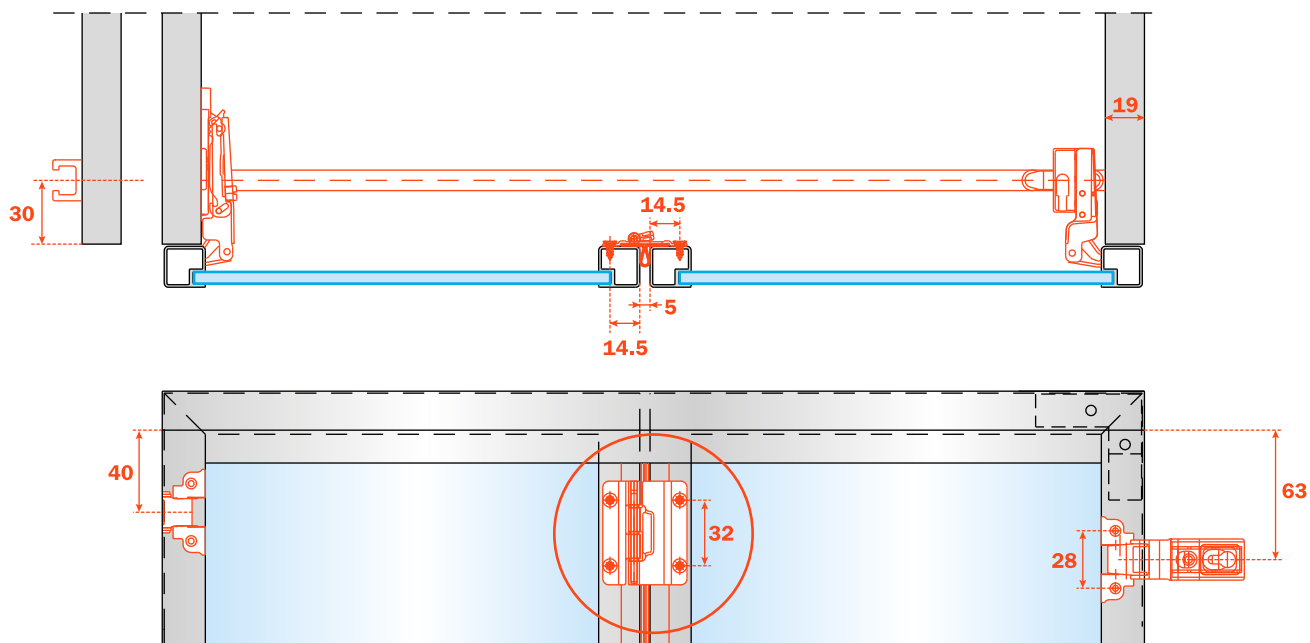

**Central assembly:**

- narrow part to be mounted on the door which is fixed to the cabinet side.
- wider part to be mounted on the moving door.

## Notes

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.



## Notes

[illegible]

## HEADQUARTERS AND PRODUCTION UNITS

### ARTURO SALICE S.p.A.

#### HEAD OFFICE

VIA PROVINCIALE NOVEDRATESE, 10  
22060 NOVEDRATE (COMO) ITALIA  
TEL. 031 790424 - FAX 031 791508  
info.salice@salice.com  
www.salice.com

### ARTURO SALICE S.p.A.

VIA ARISTIDE MERLONI, 11  
61036 COLLI AL METAURO (PU) ITALIA  
TEL. 0721 899800  
FAX 0721 897980  
info.salice@salice.com  
www.salice.com

### BORTOLUZZI SISTEMI S.p.A.

VIA CADUTI 14 SETTEMBRE 1944, 45  
32100 BELLUNO (BL) ITALIA  
TEL. 0437 930866  
FAX 0437 931442  
info@bortoluzzi.com  
www.salice.com

### NUOVA ATIM S.r.l.

VIA IV NOVEMBRE, 52  
20019 SETTIMO MILANESE (MI) ITALIA  
TEL. 02 33503203  
FAX 02 33516514  
info@atimspa.com  
www.atimspa.com

## BRANCHES

### DEUTSCHE SALICE GMBH

RUDOLF DIESEL STR. 10  
74382 NECKARWESTHEIM  
TEL. 07133 9807-0  
FAX. 07133 9807-16  
info.salice@deutschesalice.de  
www.salice.com

### DEUTSCHE SALICE GMBH

VERKAUFSBÜRO NORD  
RINGSTRASSE 36/A30 CENTER  
32584 LÖHNE  
TEL. 05731 15608-0  
FAX. 05731 15608-10  
vknord@deutschesalice.de  
www.salice.com

### SALICE UK LTD.

KINGFISHER WAY  
HINCHINGBROOKE BUSINESS PARK  
HUNTINGDON CAMBS PE 29 6FN  
TEL. 01480 413831  
FAX. 01480 451489  
info.salice@saliceuk.co.uk  
www.salice.com

### SALICE FRANCE S.A.R.L.

285 RUE DE GOA ZAC LES 3 MOULINS  
06600 ANTIBES  
TEL. 0493 330069  
FAX. 0493 330141  
info.salice@salicefrance.com  
www.salice.com

### SALICE ESPAÑA, S.L.U.

C/ AIGUAFREDA 4, P.I. AMETLLA PARK  
08480 L'AMETLLA DEL VALLÈS (BARCELONA)  
TEL. 0034 938 46 88 61  
info.salice@saliceespana.es  
www.salice.com

### SALICE PORTUGAL UNIP. LDA

**SHOWROOM:**  
TV SÁ E MELO 161 FA  
4470-116 MAIA - PORTO  
TEL: 00351 224 154 221  
Info@saliceportugal.pt  
www.salice.com  
**ARMAZÉM:**  
VIA ROTA DOS MÓVEIS I 399  
4585-325 GANDRA

### SALICE CHINA (SHANGHAI) CO. LTD.

RM 602, 6/F, TOWER 1,  
3688 YINGGANG DONG ROAD  
QINGPU DISTRICT  
201703 SHANGHAI, CHINA  
TEL. 021 3988-9880  
info.salice@salicechina.com  
www.salicechina.com

### SALICE INDIA PVT. LTD.

1001 & 1002, 10TH FLOOR,  
CENTRUM, PLOT NO. C-3,  
OPP. WAGLE PRABHAG SAMITI OFFICE,  
MIDC AREA, WAGLE INDUSTRIAL ESTATE,  
THANE - 400604, MAHARASHTRA  
TEL. 022 20812050  
info@saliceindia.com  
www.salice.com

### SALICE CANADA INC.

3500 RIDGEWAY DRIVE,  
UNIT#1  
MISSISSAUGA, ONTARIO, L5L 0B4  
TEL. 905 820 8787  
FAX. 905 820 7226  
info.salice@salicecanada.com  
www.salicecanada.com

### SALICE AMERICA INC.

2123 CROWN CENTRE DRIVE  
CHARLOTTE NC. 28227  
TEL. 704 841 7810  
FAX. 704 841 7808  
info.salice@saliceamerica.com  
www.saliceamerica.com



# **ARTURO SALICE S.p.A.**

## **HEAD OFFICE**

VIA PROVINCIALE NOVEDRATESE, 10  
22060 NOVEDRATE (COMO) ITALIA  
TEL. 031 790424 - FAX 031 791508

[info.salice@salice.com](mailto:info.salice@salice.com)  
[www.salice.com](http://www.salice.com)